



AT Commands for Luat 4G Modules

AirM2M

Models: Air720 series

Version: 3.89

Release Date: Nov.12,2018



Contents

| | |
|--|----------|
| AT Commands for Luat 4G Modules | 1 |
| 1 Introduction | 8 |
| 1.1 Scope of the document | 8 |
| 1.2 Conventions | 8 |
| 1.3 Definitions | 8 |
| 1.4 Abbreviations | 9 |
| 1.5 AT command syntax | 9 |
| 2 Commands for general purpose | 12 |
| 2.1 Request Manufacturer Identification:AT+CGMI/GMI | 12 |
| 2.2 Request Module Identification:AT+CGMM/GMM | 12 |
| 2.3 Request Revision Identification:AT+CGMR/GMR | 13 |
| 2.4 Request product serial number identification:AT+CGSN/GSN | 13 |
| 2.5 Query the ICCID of SIM:AT+ICCID | 14 |
| 2.6 Request IMSI:AT+CIMI | 14 |
| 2.7 Request product information:ATI | 15 |
| 2.8 Request Firmware Version:AT+VER | 15 |
| 2.9 Request Hardware Version:AT+HVER | 16 |
| 2.10 Repeat previous command:A/ | 16 |
| 2.11 Write special serial number:AT+WISN | 16 |
| 2.12 Reset MT:AT+RESET | 17 |
| 2.13 Save/fetch dial-string:ATSO | 17 |
| 2.14 Log Level Setup:AT+VDUMP | 18 |
| 2.15 Notify MT of MCU Sleep Status:AT+POWERIND | 19 |
| 2.16 Startup Information | 19 |
| 3 Call Control Commands | 21 |
| 3.1 Select Type of Address:AT+CSTA | 21 |
| 3.2 Originate a call:ATD | 22 |
| 3.3 Redial last dialed number:ATDL | 23 |
| 3.4 Accept a call:ATA | 24 |
| 3.5 Hangup a call:AT+CHUP | 24 |
| 3.6 List current calls:AT+CLCC | 24 |
| 3.7 Select bearer service type:AT+CBST | 26 |
| 4 Commands for Configuration | 28 |
| 4.1 Select TE character set:AT+CSCS | 28 |
| 4.2 Set relevant parameters to user defined profile:ATZ | 29 |
| 4.3 Set all current parameters to manufacturer defaults:AT&F | 29 |
| 4.4 Enable command echo:ATE | 29 |
| 4.5 Set result code presentation mode:ATQ | 29 |
| 4.6 Set the response format:ATV | 30 |



| | | |
|------|---|----|
| 4.7 | Set CONNECT result code format and call monitoring:ATX..... | 31 |
| 4.8 | Set number of rings before automatically answering the call:ATS0..... | 31 |
| 4.9 | Set command line termination character:ATS3..... | 32 |
| 4.10 | Set response formatting character:ATS4..... | 33 |
| 4.11 | Set command line editing character:ATS5..... | 33 |
| 4.12 | Set command line editing character:ATS6..... | 34 |
| 4.13 | Set command line editing character:ATS7..... | 34 |
| 4.14 | Set command line editing character:ATS8..... | 34 |
| 4.15 | Set CDC function mode:AT&C..... | 35 |
| 4.16 | Set DTR function mode:AT&D..... | 35 |
| 4.17 | Real time clock:AT+CCLK..... | 36 |
| 4.18 | Report mobile equipment error:AT+CMEE..... | 36 |
| 4.19 | Report Mobile Termination Error:+CME ERROR:<err>..... | 37 |
| 4.20 | Extended Error Report:AT+CEER..... | 39 |
| 5 | Commands for Network Services..... | 41 |
| 5.1 | Request signal quality:AT+CSQ..... | 41 |
| 5.2 | Received signal quality:AT+CESQ..... | 42 |
| 5.3 | Enable CSQ Indicator:AT*CSQ..... | 43 |
| 5.4 | Network registration information:AT+CREG..... | 44 |
| 5.5 | EPS network registration status in E-UTRAN:AT+CEREG..... | 46 |
| 5.6 | Operator selection:AT+COPS..... | 48 |
| 5.7 | Automatic Time Zone Update:AT+CTZU..... | 51 |
| 5.8 | (URC) Network Identity and Time Zone: +NITZ:<time>,<ds>..... | 51 |
| 5.9 | Time Zone Report:AT+CTZR..... | 52 |
| 5.10 | DTMF and tone generation:AT+VTS..... | 52 |
| 5.11 | DTMF Tone Duration:AT+VTD..... | 53 |
| 5.12 | Set Cell Background Searching:AT+BGLTEPLMN..... | 54 |
| 5.13 | Enable/Disable HSDPA and HSUPA:AT*EHSDPA..... | 54 |
| 5.14 | Set GSM/UMTS Engineering Mode indicator:AT+EEMOPT..... | 57 |
| 5.15 | Query GSM/UMTS/LTE Information in Engineering Mode:AT+EEMGINFO..... | 58 |
| 5.16 | GSM/UMTS/LTE Mode and Band Settings:AT*BAND..... | 58 |
| 5.17 | Indicates the Current Band:AT*BANDIND..... | 62 |
| 5.18 | Get the Access Technology:AT^CACAP..... | 63 |
| 5.19 | Query Current System Information:AT^SYSINFO..... | 64 |
| 5.20 | Cell/Frequency Lock:AT*Cell..... | 65 |
| 5.21 | Set the System Mode:AT^SYSCONFIG..... | 66 |
| 5.22 | Brand information:AT^SPN..... | 67 |
| 5.23 | GSM Location and Time:AT+CIPGSMLOC..... | 68 |
| 5.24 | (URC) Manual PLMN selection option:+MSRI..... | 70 |
| 6 | NTP Related Commands;..... | 70 |
| 6.1 | Set GPRS Bearer ID:AT+CNTPCID..... | 70 |
| 6.2 | Time Synchronizing:AT+CNTP..... | 71 |
| 7 | Mobile Termination Control and Status Commands..... | 73 |



| | | |
|-------|---|-----|
| 7.1 | Phone activity status:AT+CPAS..... | 73 |
| 7.2 | Set phone functionality:AT+CFUN..... | 74 |
| 7.3 | Power off:AT+CPOWD..... | 75 |
| 7.4 | Input PIN:AT+CPIN..... | 75 |
| 7.5 | Remaining Number of Retry:AT+EPIN..... | 77 |
| 7.6 | Facility lock:AT+CLCK..... | 77 |
| 7.7 | Change password:AT+CPWD..... | 79 |
| 7.8 | Set TE-TA baud rate:AT+IPR..... | 80 |
| 7.9 | Set DTE-DCE character framing:AT+ICF..... | 81 |
| 7.10 | DTE-DCE Local flow control:AT+IFC..... | 82 |
| 7.11 | Set Flicker Frequency of NET_LED:AT+SLEDS..... | 83 |
| 7.12 | Hardware Detection of SIM:AT*SIMDETEC..... | 84 |
| 7.13 | Control Sim State Event Report:AT^CARDMODE..... | 85 |
| 7.14 | Get Sim Type:AT*EUICC..... | 86 |
| 8 | Phonebook..... | 87 |
| 8.1 | Select phonebook storage:AT+CPBS..... | 87 |
| 8.2 | Find a phonebook entry:AT+CPBF..... | 88 |
| 8.3 | Read the phonebook entry:AT+CPBR..... | 89 |
| 8.4 | Write phonebook entry:AT+CPBW..... | 90 |
| 8.5 | Subscriber number:AT+CNUM..... | 92 |
| 8.6 | (URC)Phonebook Ready: +MPBK..... | 93 |
| 9 | Commands for SIM Card Operation..... | 94 |
| 9.1 | Generic SIM Access:AT+CSIM..... | 94 |
| 9.2 | Restricted SIM access:AT+CRSM..... | 96 |
| 9.3 | SIM Toolkit Application Related Service: AT+MSTK..... | 101 |
| 10 | Commands for Short Messages..... | 103 |
| 10.1 | PDU Introduction..... | 103 |
| 10.2 | Short message Service:AT+CSMS..... | 105 |
| 10.3 | Preferred Message Storage:AT+CPMS..... | 106 |
| 10.4 | Service Center Address:AT+CSCA..... | 107 |
| 10.5 | Select SMS Message Format:AT+CMGF..... | 108 |
| 10.6 | Set Text Mode Parameters:AT+CSMP..... | 109 |
| 10.7 | Show text mode parameters:AT+CSDH..... | 110 |
| 10.10 | New Message Indications to TE:AT+CNMI..... | 112 |
| 10.11 | New Message Acknowledgement to TA/ME:AT+CNMA..... | 115 |
| 10.12 | Send a short message:AT+CMGS..... | 115 |
| 10.13 | Send Message from Storage:AT+CMSS..... | 117 |
| 10.14 | More message to send:AT+CMMS..... | 118 |
| 10.15 | Write Message to Memory:AT+CMGW..... | 119 |
| 10.16 | Read a short message:AT+CMGR..... | 121 |
| 10.17 | List messages:AT+CMGL..... | 123 |
| 10.18 | Delete message:AT+CMGD..... | 125 |
| 10.19 | Select Cell Broadcast Message Types:AT+CSCB..... | 126 |



| | | |
|-------|--|-----|
| 10.20 | Reset Memory Full Status:AT*RSTMemFull..... | 127 |
| 10.21 | (URC)SMS Status Change Indication:+MMSG..... | 127 |
| 10.22 | Short Message Service Failure Result Code:CMS ERROR:<err>..... | 127 |
| 11 | Commands for Supplementary Services..... | 130 |
| 11.1 | Call Forwarding Number and Conditions:AT+CCFC..... | 130 |
| 11.2 | Call Waiting:AT+CCWA..... | 132 |
| 11.3 | Call related supplementary services:AT+CHLD..... | 134 |
| 11.4 | Calling line identification presentation:AT+CLIP..... | 135 |
| 11.5 | Calling line identification restriction:AT+CLIR..... | 136 |
| 11.6 | Connected line identification presentation:AT+COLP..... | 138 |
| 11.7 | Unstructured supplementary service data:AT+CUSD..... | 139 |
| 11.8 | Preferred Operator List:AT+CPOL..... | 141 |
| 11.9 | Read operator names:AT+COPN..... | 142 |
| 11.10 | Supplementary service notifications:AT+CSSN..... | 143 |
| 12 | Commands for Audio Control..... | 145 |
| 12.1 | Mute Control:AT+CMUT..... | 145 |
| 12.2 | Loudspeaker volume level:AT+CLVL..... | 145 |
| 12.3 | MIC Gain Control:AT+CMIC..... | 146 |
| 12.4 | Handfree equipment control:AT+CHF..... | 146 |
| 12.5 | Audio path switch:AT+CHFA..... | 147 |
| 12.6 | Alert Sound Mode:AT+CALM..... | 148 |
| 12.7 | Ringer Sound Level:AT+CRSL..... | 148 |
| 12.8 | Local DTMF Tone Generation:AT+CLDTMF..... | 149 |
| 12.9 | DTMF Code Detection:AT+DDET..... | 150 |
| 12.10 | TTS(Text To Speech): AT+CTTS..... | 152 |
| 12.11 | Set parameters for TTS play: AT+CTTSPARAM..... | 152 |
| 12.12 | Record and Play: AT+CREC..... | 153 |
| 12.13 | Audio Loop Test: AT+AUDLB..... | 156 |
| 13 | Commands for GPRS Services..... | 157 |
| 13.1 | GPRS mobile station Class:AT+CGCLASS..... | 157 |
| 13.2 | GPRS attach and detach:AT+CGATT..... | 158 |
| 13.3 | GPRS Context Definition:AT+CGDCONT..... | 158 |
| 13.4 | Display PDP Address:AT+CGPADDR..... | 160 |
| 13.5 | PDP Context Activate or Deactivate:AT+CGACT..... | 162 |
| 13.6 | Enter Data Mode:AT+CGDATA..... | 163 |
| 13.7 | GPRS Network Registration Status:AT+CGREG..... | 164 |
| 13.8 | Quality of Service Profile (Minimum acceptable):AT+CGQMIN..... | 165 |
| 13.9 | Quality of Service Profile(requested):AT+CGQREQ..... | 166 |
| 13.10 | Packet Domain Event Report:AT+CGEREP..... | 168 |
| 13.11 | Packet Domain Events Report URC:+CGEV..... | 168 |
| 13.12 | Select Service for MO SMS:AT+CGSMS..... | 171 |
| 13.13 | Search IP via cid:AT+GETIP..... | 171 |
| 13.14 | Send Data through Specified PS Channel:AT*TGSINK..... | 172 |



| | | |
|-------|---|-----|
| 13.15 | Send Data through Activated PS Channel:AT+CGSEND..... | 172 |
| 13.16 | Put TA into a Particular Mode of Operation:AT+FCLASS..... | 173 |
| 13.17 | Add Authentication to a PDP Context:AT*AUTHREQ..... | 173 |
| 13.18 | Add Authentication to LTE Default Bearer:AT*CGDFAUTH..... | 174 |
| 13.19 | Failure Cause Code for PDP Activation:AT+PEER..... | 175 |
| 14 | Commands for Embeded TCPIP Protocol..... | 176 |
| 14.1 | Enable multi-connection mode:AT+CIPMUX..... | 176 |
| 14.2 | Start Task and Set APN,USER NAME,PASSWORD:AT+CSTT..... | 176 |
| 14.3 | Activate Wireless Connection:AT+CIICR..... | 177 |
| 14.4 | Get Local IP Address:AT+CIFSR..... | 177 |
| 14.5 | Start up TCP or UDP connection:AT+CIPSTART..... | 178 |
| 14.6 | Select TCPIP application mode:AT+CIPMODE..... | 180 |
| 14.7 | Select data sending mode:AT+CIPQSEND..... | 180 |
| 14.8 | Config transparent transfer mode:AT+CIPCCFG..... | 180 |
| 14.9 | Send data:AT+CIPSEND..... | 181 |
| 14.10 | Set Auto Sending Timer:AT+CIPATS..... | 183 |
| 14.11 | If display '>' and SEND OK when sending data:AT+CIPSPRT..... | 183 |
| 14.12 | Query the current connecton status:AT+CIPSTATUS..... | 184 |
| 14.13 | Query the transmission state of a connection:AT+CIPACK..... | 185 |
| 14.14 | Set GPRS connection mode:AT+CIPCSGP..... | 186 |
| 14.15 | Config DNS(Domain Name Server):AT+CDNSCFG..... | 186 |
| 14.16 | Get the IP address of a given DNS:AT+CDNSGIP..... | 187 |
| 14.17 | Set sender prompt when receiving data:AT+CIPSRIP..... | 187 |
| 14.18 | Set a header when receiving data:AT+CIPHEAD..... | 188 |
| 14.19 | Set a protocol header when receiving data:AT+CIPSHOWTP..... | 188 |
| 14.20 | Rceive data in multi connection mode: +RECEIVE..... | 189 |
| 14.21 | Get data from network manually: AT+CIPRXGET..... | 189 |
| 14.22 | Save TCPIP application context: AT+CIPSCONT..... | 192 |
| 14.23 | Close a TCP/UDP Connection:AT+CIPCLOSE..... | 193 |
| 14.24 | Establish as A Server:AT+SERVER..... | 193 |
| 14.25 | Ping Echo Request:AT+CIPPING..... | 194 |
| 14.26 | Deactivate GPRS PDP context:AT+CIPSHUT..... | 195 |
| 14.27 | Switch from data mode to command mode:+++..... | 195 |
| 14.28 | Switch from command mode to data mode:ATO..... | 196 |
| 14.29 | TCP/UDP Error codes..... | 197 |
| 14.30 | State Machine..... | 198 |
| 14.31 | Examples for application..... | 200 |
| 15 | IP application related commands..... | 206 |
| 15.1 | 1 Bearer Settings for Applications Based on IP: AT+SAPBR..... | 206 |
| 16 | Commands for HTTP applications..... | 209 |
| 16.1 | Initialize HTTP service: AT+HTTPINIT..... | 209 |
| 16.2 | SSL Function: AT+HTTPSSL..... | 209 |
| 16.3 | Set HTTP parameters:AT+HTTPPARA..... | 209 |



| | | |
|-------|--|-----|
| 16.4 | Input HTTP data: AT+HTTPDATA..... | 211 |
| 16.5 | HTTP method action: AT+HTTPACTION..... | 212 |
| 16.6 | Read the response from HTTP server: AT+HTTPREAD..... | 213 |
| 16.7 | Save HTTP context: AT+HTTPSCONT..... | 214 |
| 16.8 | Terminate HTTP service: AT+HTTPTERM..... | 215 |
| 16.9 | HTTP error code: <err code>..... | 215 |
| 16.10 | Examples for application..... | 216 |
| 17 | Commands for FTP applications..... | 218 |
| 17.1 | Set FTP port: AT+FTPSPORT..... | 218 |
| 17.2 | Set Active or passive FTP mode: AT+FTPMODE..... | 218 |
| 17.3 | Set the type of FTPdata transfer: AT+FTPYPE..... | 219 |
| 17.4 | Set FTP put type: AT+FTPPUTOPT..... | 219 |
| 17.5 | Set FTP bearer identifier: AT+FTPCID..... | 220 |
| 17.6 | Set FTP breakpoint resume: AT+FTPREST..... | 220 |
| 17.7 | Set FTP server address: AT+FTPSERV..... | 220 |
| 17.8 | Set FTPUser name: AT+FTPUN..... | 221 |
| 17.9 | SetFTP password: AT+FTPPW..... | 221 |
| 17.10 | Set the name of download file: AT+FTPGETNAME..... | 222 |
| 17.11 | Set the path of download file: AT+FTPGETPATH..... | 222 |
| 17.12 | Set the name of upload file: AT+FTPPUTNAME..... | 222 |
| 17.13 | Set the path of upload file: AT+FTPPUTPATH..... | 223 |
| 17.14 | Download a file: AT+FTPGET..... | 223 |
| 17.15 | FTP PUT session: AT+FTPPUT..... | 225 |
| 17.16 | Save FTPapplication context: AT+FTPSCONT..... | 225 |
| 17.17 | Quit current FTP session: AT+FTPQUIT..... | 226 |
| 17.18 | Examples for application..... | 226 |
| 18 | Other URCs(Unsolicited Result Code)..... | 229 |
| 18.1 | System Mode: ^MODE..... | 229 |
| 18.2 | SIM Card Mode: ^SIMST..... | 229 |
| 18.3 | Basic information in GSM Engineering Mode: +EEMGINFOBASIC..... | 230 |
| 18.4 | Serving-cell information in GSM Engineering Mode: +EEMGINFOSVC..... | 230 |
| 18.5 | PS information in GSM Engineering Mode: +EEMGINFOPS..... | 231 |
| 18.6 | Cell information in GSM Engineering Mode: +EEMGINFONC..... | 232 |
| 18.7 | Notify current network status which used for EFEM : +EEMGINBFTM..... | 233 |
| 18.8 | Serving-cell information in UMTS Engineering Mode: +EEMUMTS SVC..... | 234 |
| 18.9 | Intra freq information in UMTS Engineering Mode: +EEMUMTSINTRA..... | 235 |
| 18.10 | Inter freq information in UMTS Engineering Mode: +EEMUMTSINTER..... | 236 |
| 18.11 | Inter RATInformation in UMTS Engineering Mode: +EEMUMTSINTERRAT..... | 236 |
| 18.12 | Serving CellInformation in LTE Engineering Mode: +EEMLTESVC..... | 237 |
| 18.13 | Intra Freq Information in LTE Engineering Mode: +EEMLTEINTRA..... | 238 |
| 18.14 | InterFreq Information in LTE Engineering Mode: +EEMLTEINTER..... | 238 |
| 18.15 | InterRATInformation in LTE Engineering Mode: +EEMLTEINTERRAT..... | 239 |

1 Introduction

1.1 Scope of the document

This document specifies a profile of AT Commands for the AirM2MGPRS module.

1.2 Conventions

Terminal Equipment (TE) controls Mobile Termination (MT) functions and GSM/UMTS network services through Terminal Adaptor (TA).

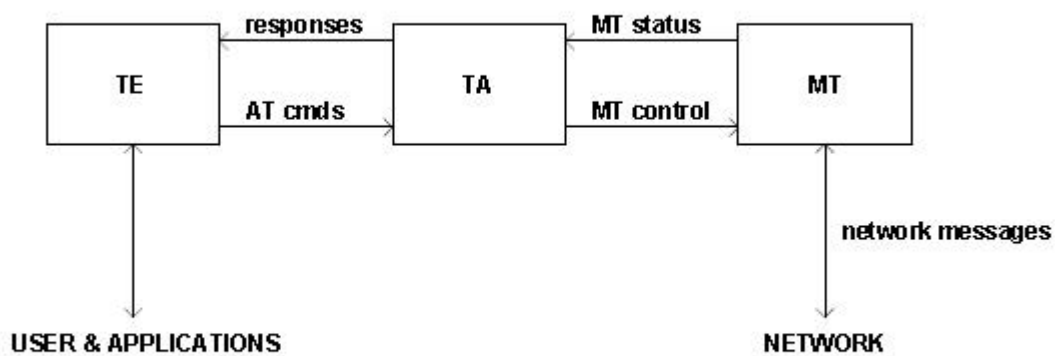


Figure 1

The commands described in the present document may be observed on the link between the TE and the TA. However, most of the commands retrieve information about the MT, not about the TA.

1.3 Definitions

For the purposes of the present document, the following syntactical definitions apply:

| | |
|-------|--|
| <CR> | Carriage return character, which value is specified with command S3 |
| <LF> | Linefeed character, which value is specified with command S4 |
| <...> | Name enclosed in angle brackets is a syntactical element. Brackets themselves do not appear in |



| | |
|-------------------------|--|
| | the command line. |
| [...] | Optional subparameter of a command or an optional part of TA information response is enclosed in square brackets. Brackets themselves do not appear in the command line. When subparameter is not given in <i>parameter type</i> commands, new value equals to its previous value. In <i>action type</i> commands, action should be done on the basis of the recommended default setting of the subparameter |
| <u>underline</u> | Underlined defined subparameter value is the recommended default setting of this subparameter. In <i>parameter type</i> commands, this value should be used in factory settings which are configured by V.250 command &F0. In <i>action type</i> commands, this value should be used when subparameter is not given. |

1.4 Abbreviations

| | |
|-------|--|
| AT | ATtention; this two-character abbreviation is always used to start a command line to be sent from TE to TA |
| BCD | Binary Coded Decimal |
| DCE | Data Circuit terminating Equipment |
| DTE | Data Terminal Equipment |
| IMEI | International Mobile station Equipment Identity |
| ICCID | Integrate circuit card identity |
| IRA | International Reference Alphabet (ITU-T T.50) |
| ME | Mobile Equipment(=wireless module in this doc) |
| MT | Mobile Termination(=wireless module in this doc) |
| SIM | Subscriber Identity Module |
| TA | Terminal Adaptor, e.g. a GSM data card (equal to DCE) |
| TE | Terminal Equipment, e.g. a computer (equal to DTE) |
| URC | Unsolicited Result Code |
| NTP | Network Time Protocol |
| NITZ | Network Identity and Time Zone |

1.5 AT command syntax

The "AT" or "at" prefix must be set at the beginning of each Command line. To terminate a Command line enter <CR>.

Commands are usually followed by a response that includes "<CR><LF><response><CR><LF>". Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

The AT Command set in this document is a combination of GSM07.05, GSM07.07 and ITU-T recommendation V.25ter and the proprietary AT commands developed by AirM2M.



Note: Only enter AT Command through serial port after module is powered on and Unsolicited Result Code "RDY" is received from serial port. And unsolicited result code "+CPIN: NOT INSERTED" indicates SIM card isn't present. If autobauding is enabled, the Unsolicited Result Codes "RDY" and so on are not indicated when you start up the ME until an "AT" is input.

All these AT commands can be split into three categories syntactically: "basic", "S parameter", and "extended". These are as follows:

1.5.1 Basic syntax

These AT commands have the format of "AT<x><n>", or "AT&<x><n>", where "<x>" is the Command, and "<n>" is/are the argument(s) for that Command. An example of this is "ATE<n>", which tells the DCE whether received characters should be echoed back to the DTE according to the value of "<n>". "<n>" is optional and a default will be used if missing.

1.5.2 S Parameter syntax

These AT commands have the format of "ATS<n>=<m>", where "<n>" is the index of the Sregister to set, and "<m>" is the value to assign to it. "<m>" is optional; if it is missing, then a default value is assigned.

1.5.3 Extended Syntax

These commands can operate in several modes, as following table shows:

Table 1: Types of AT commands and responses

| Type of Command | Syntax | Description |
|-----------------|--------------|---|
| Test Command | AT+<x>=? | to test the existence of the command and to give information about the type of its subparameters. |
| Read Command | AT+<x>? | to check the current values of subparameters |
| Set Command | AT+<x>=<...> | to set the user-definable parameter values |
| Action Command | AT+<x> | <i>Action type</i> commands do not store the values of any of their possible subparameters, and therefore do not have a read command. |

1.5.4 Combining AT commands on the same Command line

You can enter several AT commands on the same line, in which case, you do not need to type the "AT" or "at" prefix before every command. Instead, you only need type "AT" or "at" at the beginning of the Command line.



Please Note to use a semicolon as Command delimiter.

Note: extended command is prefixed with a “+” and delimited with a semicolon.

For example:

```
ATE0V1S0=2;+CREG=2;&W
```

```
AT+CFUN=1;+CIMI;+VER
```

The Command line buffer can accept a maximum of 556 characters. If the characters entered exceeded this number then none of the Command will be executed and TA will return “ERROR”.

1.5.5 Entering successive AT commands on separate lines

When you need to enter a series of AT commands on separate lines, please Note that you need to wait the final response (for example OK, CME error, CMS error) of last AT Command you entered before you enter the next AT Command.

2 Commands for general purpose

2.1 Request Manufacturer Identification:AT+CGMI/GMI

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution command | AT+CGMI | <manufacturer> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|----------------|---|-------|-------------------------|
| <manufacturer> | ID of manufacturer Text shall not contain the sequence 0<CR> or OK<CR> | - | Defined by manufacturer |

Examples:

| Command(→) /Response(←) | AT Sequences | Description |
|----------------------------|---------------|----------------------------------|
| → | AT+CGMI | Query the manufacturerID |
| ← | ASR OK | Response information is returned |

2.2 Request Module Identification:AT+CGMM/GMM

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | AT+CGMM | <model> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|--|
| <model> | Information text of module. Text shall not contain the sequence 0<CR> or OK<CR> | - | Defined by manufacturer, one line or more lines. |



Examples:

| Command(→) /Response(←) | AT Sequences | Description |
|----------------------------|-------------------------------|-----------------------------|
| → | AT+CGMM | Query module identification |
| ← | +CGMM: "Nezha_MIFI" OK | |

2.3 Request Revision Identification:AT+CGMR/GMR

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | AT+CGMR | Revision: <revision> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|------------|---|-------|-----------------------------------|
| <revision> | the version, revision level or date, or other pertinent information of the MT | - | Defined by manufacturer of the MT |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|-------------------------|------------------------------------|
| → | AT+CGMR | Query firmware version or revision |
| ← | Revision: 1.0 OK | |

2.4 Request product serial number identification:AT+CGSN/GSN

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|-----------|----------------------|
| Execution Command | AT+CGSN | <sn> |
| | | OK |
| | | +CME ERROR: <err> |
| Test Command | AT+CGSN=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|-----------------------|
| <sn> | IMEI (International Mobile Equipment Identification) | - | Composed of 15 digits |



Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|-----------------------|-------------|
| → | AT+CGSN | Query IMEI |
| ← | 359759002514931 OK | |

2.5 Query the ICCID of SIM:AT+ICCID

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|----------|----------------------|
| Execution Command | AT+ICCID | <ICCID> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|-------------------------------|
| <ICCID> | ICCID(Integrated circuit card identity) | - | Usually composed of 20 digits |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|----------------------------|---------------------------------|
| → | AT+CCID | Query the ICCID of the SIM card |
| ← | 89860064091118004014 OK | |

2.6 Request IMSI:AT+CIMI

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | AT+CIMI | <IMSI> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|-------------------------------|
| <IMSI> | IMSI(International Mobile Subscriber Identity) | | Usually composed of 15 digits |



Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|-----------------------|--------------|
| → | AT+CIMI | Request IMSI |
| ← | 460001841426414 OK | |

2.7 Request product information:ATI

Request manufacturer specific information about the TA.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | ATI | <module info> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|---|-------|-----------------------------------|
| <module info> | Information about the module (manufacturer,revision) | - | Defined by manufacturer of the MT |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|-------------------------|--|
| → | ATI | Request the information about the module |
| ← | AirM2M_V5295_AT_S OK | |

2.8 Request Firmware Version:AT+VER

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | AT+VER | <firmware ver> |
| | | OK |
| | | +CME ERROR: <err> |

Defined values:

| Parameter | Definition | Value | Description |
|------------------|--|-------|-------------------------|
| < firmware ver > | The inner version of the module firmware | - | Defined by manufacturer |



Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|-----------------------------------|--|
| → | AT+VER | Request the inner version of the module firmware |
| ← | AirM2M_720_V306_LTE_AT_NAND OK | |

2.9 Request Hardware Version:AT^HVER

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|---------------------------|
| Execution Command | AT^HVER | ^HVER:<hardversion> OK |

2.10 Repeat previous command:A/

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|---|
| Execution Command | A / | Repeat previous command line ,and line does not need to end with [CR] |

Examples:

| Command(→)/R esponse(←) | AT Sequences | Description |
|----------------------------|-----------------------|----------------|
| → | AT+CIMI | Request IMSI |
| ← | 460001841426414 OK | |
| → | A/ | Repeat AT+CIMI |
| ← | 460001841426414 OK | |

2.11 Write special serial number:AT+WISN

AT+WISN is for the customers to write a special/proprietary sn(serial number) in the module.

Syntax:



AT Command Set

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------|----------------------|
| Set Command | AT+WISN=<user_sn> | OK |
| | | +CME ERROR: <err> |
| Read Command | AT+WISN? | <user_sn> |
| | | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|----------------------------------|
| <user_sn> | special SN | - | defined or provided by customers |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|----------------------|------------------------|
| → | AT+WISN="1234567890" | write acumstomer SN |
| ← | OK | |
| → | AT+WISN? | query the cumstomer SN |
| ← | 1234567890 | |
| | OK | |

2.12 Reset MT:AT+RESET

Reset MT.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|----------|----------------------|
| Execution Command | AT+RESET | OK |

2.13 Save/fetch dial-string:ATSO

Save/fetch dial-string.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|--------------------------|
| Set Command | AT+ASTO=<string>,<number> | OK |
| | | +CME ERROR: <err> |
| Read Command | AT+ASTO? | +ASTO:<information text> |
| | | OK |
| Test Command | AT+ASTO=? | +ASTO: (0-32),(64) |



AT Command Set

| | | |
|--|--|----|
| | | OK |
|--|--|----|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------|-------|-------------|
| <string> | name | | |
| <number> | phone number | | |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|-----------------------------------|-------------|
| → | AT+ASTO=HELENA,188890065 | |
| ← | OK | |
| → | AT+ATSO? | |
| ← | +ASTO: HELENA,188890065 OK | |

2.14 Log Level Setup:AT+VDUMP

Set control log level. Store the log level to global variable. It can control log print to android log buffer and to file, log level less than the control log level will be print.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------|------------------------------|
| Set Command | AT+VDUMP=<loglevel> | OK |
| Read Command | AT+VDUMP? | +VDUMP: <loglevel> OK |
| Test Command | AT+VDUMP=? | +VDUMP: (0-8) OK |

Defined values:

| Parameter | Definition | Value | Description |
|------------|---|-------|-------------|
| <loglevel> | the log level less than <loglevel >will be displayed | 0 | LOG_SILENT |
| | | 1 | LOG_EMERG |
| | | 2 | LOG_ALERT |
| | | 3 | LOG_CRIT |
| | | 4 | LOG_ERR |
| | | 5 | LOG_WARNING |
| | | 6 | LOG_NOTICE |
| | | 7 | LOG_INFO |



| | | | |
|--|--|---|-----------|
| | | 8 | LOG_DEBUG |
|--|--|---|-----------|

2.15 Notify MT of MCU Sleep Status:AT*POWERIND

This proprietary AT command is used to notify MT of MCU sleep status. When MCU goes to sleep, MT will not send indication to MCU except MT call and SMS incoming.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------------|---------------------------|
| Set Command | AT*POWERIND=<n> | OK |
| Test Command | AT*POWERIND=? | *POWERIND:(0-1) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|-------------|
| <n> | MUC mode | 0 | is awake |
| | | 1 | is asleep |

2.16 Startup Information

Examples:

| Scenarios | Startup information | Description |
|------------|--|--|
| Scenario 1 | UART Boot Completed RDY +CPIN: SIM REMOVED ^CARDMODE: 255 ^SIMST: 255,0 | if SIM is not inserted, information like this will be reported after module startup. ^CARDMODE:<sim_state> <sim_status>: SIM card status READY– SIM is detected and pin code is not open SIM PIN– SIM is detected and pin code is open SIM REMOVED– SIM is not detected |
| Scenario2 | UART Boot Completed RDY ICCID: 98681071380130312410 ^SIMST: 0 +CPIN: READY | Now is a normal procedure. A SIM card is detected and no SIM PIN is required. |



AT Command Set

| | | |
|--|---|--|
| | <p>^SIMST: 1</p> <p>+MSTK: 11, D0818E010301250002028182050F8000550053 0049004D53615E9475280F0A01807CBE54C16 3A883500F06028077E597F30F0A03806C8390 1A884C8BC10F0A048053C280036D88606F0F 0A05808BED97F352A9624B0F0806806C83506 55EB70F0A07804FBF6C11670D52A10F0C088 0624B673A84254E1A53850F0A09806D4191CF 4E13533A0F0A0A80727960E0793C5305</p> <p>+MSTK: 14</p> | |
|--|---|--|

3 Call Control Commands

Note: Commands in this chapter are not supported yet!

3.1 Select Type of Address:AT+CSTA

Set command selects the type of number for further dialling commands (D) according to GSM/UMTS specifications.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------|--|
| Set Command | AT+CSTA=<type> | OK |
| Read Command | AT+CSTA? | +CSTA: <type> OK |
| Test Command | AT+CSTA=? | +CSTA: (list of supported values for <type>) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|------------|---|
| <type> | type of address octet in integer format | <u>129</u> | Unknown Note:Underline”_” marks the default value out. |
| | | 145 | International number. Diallingstring includes international access code character "+" |
| | | 161 | National number |
| | | 177 | Network specific number |
| | | 193 | dedicated access, short code |
| | | 241 | reserved for extersion |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|--|--|
| → | AT+CSTA=? | Query that if the +CSTA command is supported and the scope of the parameter values |
| ← | +CSTA: (129,145,161,177,193,241) OK | |
| → | AT+CSTA? | Query the current <type> |
| ← | +CSTA: 129 | |



AT Command Set

| | | |
|---|-------------|-----------------------|
| | OK | |
| → | AT+CSTA=145 | Set the <type> to 145 |
| ← | OK | |

3.2 Originate a call:ATD

This command can be used to originate a voice/data call, it also serves to control supplementary services.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|--|
| Execution Command | ATD<dialling string>; | If successfully originated, response is: OK If successfully connected: CONNECT If no dial tone(ATX2 or ATX4) NO DIALTONE If busy(ATX3 or ATX4): BUSY If the call is hanged up: NO CARRIER If the remote station does not answer NO ANSWER |
| | ATD<dialling string> | Originate a data call. If successfully connected, the response is: CONNECT |
| Note | Emergency call 112 is supported whether or not the SIM card is inserted | |

Defined values:

| Parameter | Definition | Value | Description |
|-------------------|---------------|-------|---|
| <dialling string> | Dialed number | - | String of dialing digits and optionally V.25ter modifiers (dialling digits) in set of 0-9, *, #, +, A, B, C |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|-----------------|-----------------------------------|
| → | ATD131623***98; | Initiate a call to 131623***98 |
| ← | OK | The called party accepts the call |



AT Command Set

| | | |
|---|---------|------------------|
| | CONNECT | |
| → | AT+CHUP | Hang up the call |
| ← | OK | |

3.3 Redial last dialed number:ATDL

This Command redials the last voice or data call number.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|--|
| Execution Command | ATDL | <p>If successfully originated,the response is: OK</p> <p>If successfully connected: CONNECT</p> <p>If no dial tone(ATX2 or ATX4) NO DIALTONE</p> <p>If busy(ATX3 or ATX4): BUSY</p> <p>If the call is hanged up: NO CARRIER</p> <p>If the remote station does not answer NO ANSWER</p> <p>Originate a data call. If successfully connected,the response is: CONNECT</p> |

Examples:

| Command(→)/R esponse(←) | AT Sequences | Description |
|----------------------------|-----------------|-------------------------------------|
| → | ATD131623***98; | Call a phone number 131623***98 |
| ← | OK | |
| ←(URC) | CONNECT | The called party accepts the call |
| → | AT+CHUP | Module hangs up the call |
| ← | OK | |
| → | ATDL | Redial the phone number 131623***98 |
| ← | OK | The call is connected |
| | CONNECT | |



3.4 Accept a call:ATA

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|--|
| Execution Command | ATA | Response in case of voice call, if successfully connected: OK |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|--------------|---|
| ←(URC) | RING | RING means there is an incoming call Note:RING is aURC (Unsolicited Result Code) |
| → | ATA | Answer the call |
| ← | OK | OK means the call is connected |

3.5 Hangup a call:AT+CHUP

This command hangs up all active and held calls.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|--|
| Execution Command | AT+CHUP | If call(s) are successfully hung up: OK |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|--------------|---|
| ←(URC) | RING | RING means that there is an incoming call Note:RING is a URC (Unsolicited Result Code) |
| → | ATA | Answer the call |
| ← | OK | OK means the call is connected |
| → | AT+CHUP | Hang up the call |
| ← | OK | |

3.6 List current calls:AT+CLCC

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|-----------|--|
| Execution Command | AT+CLCC | [+CLCC:<id1>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[,<alpha>]]][<CR><LF>+CLCC:<id2>,<dir>,<stat>,<mode>,<mpty>[,<number>,<type>[,<alpha>]]][...]] |
| Test Command | AT+CLCC=? | OK |



Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <idx> | Call id | - | Integer type ,as described in GSM 02.30 subclause4.5.5.1 |
| <dir> | Call direction | 0 | Mobile originated call(MO call) |
| | | 1 | Mobile terminated call(MT call) |
| <stat> | Call status | 0 | Active |
| | | 1 | held |
| | | 2 | dialing(MO call) |
| | | 3 | alerting(MO call) |
| | | 4 | incoming(MT call) |
| | | 5 | waiting(MT call) |
| <mode> | Bearer/tele service | 0 | Voice |
| | | 1 | Data |
| | | 2 | Fax |
| <mpty> | If the call is one of multiparty call parties | 0 | call is not one of multiparty (conference) call parties |
| | | 1 | call is one of multiparty (conference) call parties |
| <number> | Phone number | - | String type, quoted in "" and in format defined by <type> |
| <type> | Type of the <number> | - | Please refer to AT+CSTA |
| <alpha> | alphanumeric representation of <number> | - | Srting type |

Examples:

| Command(→)/R esponse(←) | AT Sequences | Description |
|----------------------------|---|--|
| → | ATD10086; | Call a number 10086 |
| ← | OK | |
| → | AT+CLCC | Query the current call list |
| ← | +CLCC: 1,0,2,0,0,"10086",129,"" OK | <stat>=2 means dialing |
| ← | CONNECT | The called party answers the call |
| → | AT+CLCC | Query the current call list again |
| ← | +CLCC: 1,0,0,0,0,"10086",129,"" OK | <stat>= 0 means the call is setup and active |
| → | AT+CHUP | Hang up the call |
| ← | OK | |



AT Command Set

| | | |
|---|---------|--------------------------------|
| → | AT+CLCC | List the current calls |
| ← | OK | Only OK, NO call is listed now |

3.7 Select bearer service type:AT+CBST

Set command selects the bearer service <name> with data rate <speed>, and the connection element <ce> to be used when data calls are originated (refer 3GPP TS 22.002).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------------------|--|
| Set Command | AT+CBST=[<speed>[,<name>[,<ce>]]] | OK |
| Read Command | AT+CBST? | +CBST: <speed>,<name>,<ce> OK |
| Test Command | AT+CBST=? | +CBST: (list of supported <speed>s),(list of supported <name>s),(list of supported <ce>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|--|
| <speed> | Speed | 0 | autobauding(automatic selection of the speed) |
| | | 7 | 9600 bps (V.32) |
| | | 71 | 9600 bps(V.110 or X.31 flag stuffing) |
| <name> | - | 0 | data circuit asynchronous (UDI or 3.1 kHz modem) |
| <ce> | - | 1 | non-transparent |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|---|
| → | AT+CBST=? | Query the scope of the values of all parameters |
| ← | +CBST: (0-7,12,14,34,36,38,39,43,65,66,68,70,71,75),(0,2) ,(0,1) OK | |
| → | AT+CBST? | Query the current configuration |
| ← | +CBST: 7,0,1 OK | |



4 Commands for Configuration

4.1 Select TE character set:AT+CSCS

Write command informs TA which character set <chset> is used by the TE.

TA is then able to convert character strings correctly between TE and ME character sets.

When TA-TE interface is set to 8-bit operation and used TE alphabet is 7-bit, the highest bit shall be set to zero.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|--|
| Set Command | AT+CSCS=<chset> | OK |
| Read Command | AT+CSCS? | +CSCS: <chset> OK |
| Test Command | AT+CSCS=? | +CSCS: (list of supported <chset> s) OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|--------|---|
| | | "IRA" | International reference alphabet (ITU-T T.50) |
| | | "UCS2" | 16-bit universal multiple-octet coded character set |
| | | "GSM" | GSM default alphabet (GSM 03.38 subclause 6.2.1) |
| | | "HEX" | hex format (Not supported yet) |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|---------------------------------------|-------------|
| → | AT+CSCS? | |
| ← | +CSCS: "IRA" OK | |
| → | AT+CSCS=? | |
| ← | +CSCS: ("IRA","UCS2","GSM") OK | |

4.2 Set relevant parameters to user defined profile:ATZ

This command restores the configuration profile.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | ATZ | OK |

4.3 Set all current parameters to manufacturer defaults:AT&F

This command reloads the factory-stored default configurations into active memory.

This commands is functionality the same as ATZ (reset).

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | AT&F | OK |

4.4 Enable command echo:ATE

This setting determines whether or not the TA echoes characters received from TE during command state.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Execution Command | ATE<value> | OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------|-------|-------------|
| <value> | Echo on or off | 0 | Echo off |
| | | 1 | Echo on |

4.5 Set result code presentation mode:ATQ

This command specifies whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|----------------------|
| Execution Command | ATQ<n> | OK |

Defined values:



AT Command Set

| Parameter | Definition | Value | Description |
|-----------|--|----------|---------------------------------|
| <n> | If the result code (OK/ERROR) is transmitted to TE | <u>0</u> | Result code is routed to TE |
| | | 1 | Result code is not routed to TE |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------|---|
| → | ATQ1 | <n>=1, Result code is not routed to TE |
| ← | | The result code OK does not appear |
| → | AT+CREG? | Query the network resignation information |
| ← | +CREG: 0,1 | The result code OK does not appear, but information text +CREG: 0,1 is not affected at all. |

4.6 Set the response format:ATV

This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses. It also determines whether result codes are transmitted in a numeric form or an alphabetic (or verbose.) form. The text portion of information responses is not affected by this setting.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|------------|----------------------------|
| Execution Command | ATV<value> | <value>=0, Response: 0 |
| | | <value>=1, Response: OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|----------|---|
| <value> | define the format of all the AT command responses | 0 | DCE transmits limited headers and trailers and numeric result code: <numeric code> <numeric code>: 0 for OK 4 for ERROR |
| | | <u>1</u> | DCE transmits full headers and trailers and verbose result code: <verbose code> <verbose code>: OK or ERROR |

Examples:

| Command (→) | AT Sequences | Description |
|-------------|--------------|-------------|
|-------------|--------------|-------------|



AT Command Set

| /Response (←) | | |
|---------------|-----------------|--|
| → | ATV0 | <value>=0,then result code will be displayed as : Information response:< text><CR><LF> Short result code: <numeric code><CR> |
| ← | 0 | 0-OK |
| → | AT+CSCS? | |
| ← | +CSCS: IRA 0 | |

4.7 Set CONNECT result code format and call monitoring:ATX

This parameter setting determines whether or not the TA detects the presence of dial tone and busy signal and whether or not TA transmits particular result codes.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|------------|----------------------|
| Execution Command | ATX<value> | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------|-------|--|
| < value > | Result code mode | 0 | CONNECT result code returned, dial tone and busy detection are both disabled |
| | | 1 | CONNECT<text> result code returned, dial tone and busy detection are both disabled |
| | | 2 | CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled |
| | | 3 | CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled |
| | | 4 | CONNECT<text> result code returned, dial tone and busy detection are both enabled |

4.8 Set number of rings before automatically answering the call:ATS0

This command specifies whether or not the TA will accept an incoming data / fax call without user intervention. <n> determines the number of rings to wait before the TA will automatically answer the call.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------|----------------------|
| Set Command | ATS0=<n> | OK |
| Read Command | ATS0? | <n> OK |



AT Command Set

| | |
|-----------------------|--|
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W |
|-----------------------|--|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-----------------|----------|---|
| <n> | Number of rings | <u>0</u> | disables automatic answer mode |
| | | 1~255 | enables automatic answering after specified number of rings |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------------------------|---|
| → | ATS0=3 | <n>=3, means an incoming call will be answered automatically after 3 rings. |
| ← | OK | |
| ← (URC) | RING RING RING OK | The incoming call is answered after 3 rings. |

4.9 Set command line termination character:ATS3

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Set Command | ATS3=<n> | OK |
| Read Command | ATS3? | <n> OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-----------|--|
| <n> | The ASCII value of the termination character | <u>13</u> | Default value is 13 and the corresponding character is <CR>(carriage return) . Only this value is supported! |



4.10 Set response formatting character:ATS4

This parameter setting determines the character to terminate a line in result code and information text.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Set Command | ATS4=<n> | OK |
| Read Command | ATS4? | <n> OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-----------|--|
| <n> | The ASCII value of the response formatting character | <u>10</u> | default:10(=<LF> ,line feed) Only this value is supported! |

4.11 Set command line editing character:ATS5

This parameter setting determines the character recognized by TA as a request to delete the immediately preceding character from the command line

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Set Command | ATS5=<n> | OK |
| Read Command | ATS5? | <n> OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|----------|--|
| <n> | The ASCII value of line editing character | <u>8</u> | default:8(=<BS> ,Back Space) Only this value is supported! |

Examples:

| Command (→) | AT Sequences | Description |
|---------------|--------------|-------------------------------------|
| /Response (←) | | |
| → | ATS5? | Query the current editing character |



| | | |
|---|-----|-----------|
| ← | 008 | BackSpace |
| | OK | |

4.12 Set command line editing character:ATS6

Pause before blind dialing.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------|----------------------|
| Set Command | ATS6=<n> | OK |
| Read Command | ATS6? | <n> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------|-------|---------------|
| <n> | pause duration | 2~10 | unit: seconds |

4.13 Set command line editing character:ATS7

Set the Number of seconds to establish end-to-end data.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------|----------------------|
| Set Command | ATS7=<n> | OK |
| Read Command | ATS7? | <n> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------|-------|---------------|
| <n> | number of seconds | 1~255 | unit: seconds |

4.14 Set command line editing character:ATS8

Set the Number of seconds to pause when “,” is encountered in dial string.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------|----------------------|
| Set Command | ATS8=<n> | OK |



AT Command Set

| | | |
|--------------|-------|---------------|
| Read Command | ATS8? | <n> OK |
|--------------|-------|---------------|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------|-------|-----------------------------------|
| <n> | number of seconds | 0~255 | unit: seconds,default value is 2. |

4.15 Set CDC function mode:AT&C

This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Execution Command | AT&C[<value>] | OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|--|
| <value> | DCD status | 0 | DCD is always ON |
| | | 1 | DCD is ON in presence of the data carrier only |

4.16 Set DTR function mode:AT&D

This command controls the Data Terminal Ready (DTR) signal. The <value> parameter determines how the TA responds when circuit 108/2 (DTR) is changed from ON to OFF during data mode.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|----------------------|
| Execution Command | AT&D[<value>] | OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|--|
| <value> | DTR 电路状态 | 0 | TA ignores status on DTR. |
| | | 1 | ON->OFF on DTR: Change to command mode while retaining the connected call. |

4.17 Real time clock:AT+CCLK

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|------------------|----------------------|
| Set Command | AT+CCLK=<time> | OK |
| Read Command | AT+CCLK? | +CCLK: <time> OK |
| Test Command | AT+CCLK=? | OK |
| Parameter saving mode | Auto save to NVM | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|---|
| <time> | time | - | String type(quoted in "") in format yy/MM/dd,hh:mm:ss±zz" where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone (in units of 1/4 hour; range: -47...+48) |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-------------------------------------|------------------------|
| → | AT+CCLK? | Query the current time |
| ← | +CCLK: "11/01/01,00:12:58-00" OK | |
| → | AT+CCLK="12/08/07,13:28:29+32" | Set to the right time |
| ← | OK | |
| → | AT+CCLK? | Query again |
| ← | +CCLK: "12/08/07,13:28:38+32" OK | |

4.18 Report mobile equipment error:AT+CMEE

Set command disables or enables the use of result code +CME ERROR: <err> as an indication of an error relating to the functionality of the MT. When enabled, MT related errors cause +CME ERROR: <err> final result code instead of the regular ERROR final result code. ERROR is returned normally when error is related to syntax, invalid parameters, or TA functionality.

Test command returns values supported as a compound value

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------|----------------------|
| Set Command | AT+CMEE=[<n>] | OK |



AT Command Set

| | | |
|-----------------------|--|---|
| Read Command | AT+CMEE? | +CMEE :<n> OK |
| Test Command | AT+CMEE=? | +CMEE:(list of supported values of <n>) OK |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------------|-------|--|
| <n> | Mode of Result code reporting | 0 | disable result code (only 'ERROR' will be displayed) |
| | | 1 | Enable + CME ERROR: <err>,with <err> in numeric format |
| | | 2 | Enable + CME ERROR: <err>,with <err> in verbose format |

4.19 Report Mobile Termination Error:+CME ERROR:<err>

<err> code in + CME ERROR: <err> :

| Numeric <err> values | Verbose <err> values |
|----------------------|-----------------------------|
| 0 | phone failure |
| 1 | no connection to phone |
| 2 | phone-adaptor link reserved |
| 3 | operation not allowed |
| 4 | operation not supported |
| 5 | PH-SIM PIN required |
| 6 | PH-FSIM PIN required |
| 7 | PH-FSIM PUK required |
| 10 | SIM not inserted |
| 11 | SIM PIN required |
| 12 | SIM PUK required |
| 13 | SIM failure |
| 14 | SIM busy |
| 15 | SIM wrong |
| 16 | incorrect password |
| 17 | SIM PIN2 required |
| 18 | SIM PUK2 required |
| 20 | memory full |
| 21 | invalid index |
| 22 | not found |
| 23 | memory failure |
| 24 | text string too long |



AT Command Set

| | |
|-----|---|
| 25 | invalid characters in text string |
| 26 | dial string too long |
| 27 | invalid characters in dial string |
| 30 | no network service |
| 31 | network timeout |
| 32 | network not allowed - emergency calls only |
| 40 | network personalization PIN required |
| 41 | network personalization PUK required |
| 42 | network subset personalization PIN required |
| 43 | network subset personalization PUK required |
| 44 | service provider personalization PIN required |
| 45 | service provider personalization PUK required |
| 46 | corporate personalization PIN required |
| 47 | corporate personalization PUK required |
| 48 | hidden key required |
| 50 | Invalid Param |
| 100 | unknown |
| 103 | Illegal MS |
| 106 | Illegal ME |
| 107 | GPRS services not allowed |
| 111 | PLMN not allowed |
| 112 | Location area not allowed |
| 113 | Roaming not allowed in this location area |
| 132 | service option not supported |
| 133 | requested service option not subscribed |
| 134 | service option temporarily out of order |
| 148 | unspecified GPRS error |
| 149 | PDP authentication failure |
| 150 | invalid mobile class |
| 151 | AT command timeout |
| 300 | ME failure |
| 301 | SMS service of ME reserved |
| 302 | operation not allowed |
| 303 | operation not supported |
| 304 | invalid PDU mode parameter |
| 305 | invalid text mode parameter |
| 310 | (U)SIM not inserted |
| 311 | (U)SIM PIN required |
| 312 | PH-(U)SIM PIN required |
| 313 | (U)SIM failure |
| 314 | (U)SIM busy |
| 315 | (U)SIM wrong |



| | |
|-----|-----------------------------------|
| 316 | (U)SIM PUK required |
| 317 | (U)SIM PIN2 required |
| 318 | (U)SIM PUK2 required |
| 320 | memory failure |
| 321 | invalid memory index |
| 322 | memory full |
| 330 | SMSC address unknown |
| 331 | no network service |
| 332 | network timeout |
| 340 | no +CNMA acknowledgement expected |
| 500 | unknown error |
| 501 | WIFI labtool return error |
| 502 | BT labtool return error |
| 503 | FM labtool return error |
| 504 | MRD file already exist |
| | |
| | |
| | |
| | |

4.20 Extended Error Report:AT+CEER

Execution command causes the TA to return one or more lines of information text <report>, determined by the MT manufacturer, which should offer the user of the TA an extended report of the reason for

- the failure in the last unsuccessful call setup (originating or answering) or in-call modification,
- the last call release,
- the last unsuccessful GPRS attach or unsuccessful PDP context activation,
- the last GPRS detach or PDP context deactivation.

Typically, the text will consist of a single line containing the cause information given by GSM network in textual format.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|-----------|---|
| Execution Command | AT+CEER | TA responses the reason for the last call release: +CEER: <report> |
| | | OK |
| Test Command | AT+CEER=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------|-------|-------------|
| <report> | Error report | - | String type |



Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---------------------------|---|
| → | ATD139*****; | Make a voice call |
| ← | OK | |
| | | The called party answers the call and then hang up it |
| → | AT+CEER | Query the reason for the call release |
| ← | +CEER: Network ended call | |
| | OK | |

5 Commands for Network Services

5.1 Request signal quality:AT+CSQ

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|----------|---|
| Execution Command | AT+CSQ | +CSQ: <rss>, <ber> OK |
| Test Command | AT+CSQ=? | +CSQ: (list of supported <rss>),(list of supported <ber>) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------------------|-------|---|
| <rss> | received signal strength indication | 0 | -113 dBm or less |
| | | 1 | -111dBm |
| | | 2~30 | -109~-53dBm |
| | | 31 | -51 dBm or greater |
| | | 99 | unknown or not detectable |
| <ber> | bit error rate | 0~7 | RXQUAL value defined in GSM 05.08 subclause 8.2.4 |
| | | 99 | unknown or undetectable |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-----------------------|---|
| → | AT+CSQ | Query the signal strength and quality when module is in idle mode |
| ← | +CSQ: 15,99 OK | <rss>=15 <ber>=99 |
| → | ATD131****9873; | Make a voice phone call |
| ← | OK | |
| → | AT+CSQ | Query again when the call has not yet connected |
| ← | +CSQ: 10,99 OK | <ber>=99 |
| ←(URC) | CONNECT | The call is answered |
| → | AT+CSQ | Query again |
| ← | +CSQ: 10,6 OK | <ber>=6 |

5.2 Received signal quality:AT+CESQ

Execution command returns received signal quality parameters. If the current serving cell is not a GERAN cell, <rxlev> and <ber> are set to value 99. If the current serving cell is not a UTRA FDD or UTRA TDD cell, <rscp> is set to 255. If the current serving cell is not a UTRA FDD cell, <ecno> is set to 255. If the current serving cell is not an E-UTRA cell, <rsrq> and <rsrp> are set to 255.

Test command returns values supported as compound values.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|--|
| Execution Command | AT+CESQ | +CESQ: <rxlev>,<rxqual >,<rscp>,<ecno>,<rsrq>,<rsrp> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <rxlev> | integer type; received signal strength level (see 3GPP TS 45.008 subclause 8.1.4) | 0 | rssl < -110 dBm |
| | | 1 | -110 dBm ≤ rssi < -109 dBm |
| | | 2 | -109 dBm ≤ rssi < -108 dBm |
| | | ... | ... |
| | | 61 | -50 dBm ≤ rssi < -49 dBm |
| | | 62 | -49 dBm ≤ rssi < -48 dBm |
| | | 63 | -48 dBm ≤ rssi |
| | | 99 | not known or not detectable |
| <rxqual > | as RXQUAL values in the table in 3GPP TS 45.008 subclause 8.2.4 | 0 | BER < 0.2 % Assumed value = 0.14 % |
| | | 1 | 0.2 % < BER < 0.4 % Assumed value = 0.28 % |
| | | 2 | 0.4 % < BER < 0.8 % Assumed value = 0.57 % |
| | | 3 | 0.8 % < BER < 1.6 % Assumed value = 1.13 % |
| | | 4 | 1.6 % < BER < 3.2 % Assumed value = 2.26 % |
| | | 5 | 3.2 % < BER < 6.4 % Assumed value = 4.53 % |
| | | 6 | 6.4 % < BER < 12.8 % Assumed value = 9.05 % |
| | | 7 | 12.8 % < BER Assumed value = 18.10 % |
| | | 99 | not known or not detectable |
| <rscp> | integer type, received signal code power(see 3GPP TS 25.133 subclause 9.1.1.3 and 3GPP TS 25.123 subclause 9.1.1.1.3) | 0 | rscpl < -120 dBm |
| | | 1 | -120 dBm ≤ rscpl < -119 dBm |
| | | 2 | -119 dBm ≤ rscpl < -118 dBm |
| | | ... | ... |
| | | 94 | -27 dBm ≤ rscpl < -26 dBm |
| | | 95 | -26 dBm ≤ rscpl < -25 dBm |
| | | 96 | -25 dBm ≤ rscpl |
| | | 255 | not known or not detectable |



AT Command Set

| | | | |
|--------|--|-----|--|
| <ecno> | integer type, ratio of the received energy per PN chip to the total received power spectral density (see 3GPP TS 25.133 subclause) | 0 | $E_c/I_o < -24 \text{ dB}$ |
| | | 1 | $-24 \text{ dB} \leq E_c/I_o < -23.5 \text{ dB}$ |
| | | 2 | $-23.5 \text{ dB} \leq E_c/I_o < -23 \text{ dB}$ |
| | | ... | ... |
| | | 47 | $-1 \text{ dB} \leq E_c/I_o < -0.5 \text{ dB}$ |
| | | 48 | $-0.5 \text{ dB} \leq E_c/I_o < 0 \text{ dB}$ |
| | | 49 | $0 \text{ dB} \leq E_c/I_o$ |
| | | 255 | not known or not detectable |
| <rsrq> | integer type, reference signal received quality (see 3GPP TS 36.133 subclause 9.1.7) | 0 | $\text{rsrq} < -19.5 \text{ dB}$ |
| | | 1 | $-19.5 \text{ dB} \leq \text{rsrq} < -19 \text{ dB}$ |
| | | 2 | $-19 \text{ dB} \leq \text{rsrq} < -18.5 \text{ dB}$ |
| | | ... | ... |
| | | 32 | $-4 \text{ dB} \leq \text{rsrq} < -3.5 \text{ dB}$ |
| | | 33 | $-3.5 \text{ dB} \leq \text{rsrq} < -3 \text{ dB}$ |
| | | 34 | $-3 \text{ dB} \leq \text{rsrq}$ |
| | | 255 | not known or not detectable |
| <rsrp> | integer type, reference signal received power (see 3GPP TS 36.133 subclause 9.1.4) | 0 | $\text{rsrp} < -140 \text{ dBm}$ |
| | | 1 | $-140 \text{ dBm} \leq \text{rsrp} < -139 \text{ dBm}$ |
| | | 2 | $-139 \text{ dBm} \leq \text{rsrp} < -138 \text{ dBm}$ |
| | | ... | ... |
| | | 95 | $-46 \text{ dBm} \leq \text{rsrp} < -45 \text{ dBm}$ |
| | | 96 | $-45 \text{ dBm} \leq \text{rsrp} < -44 \text{ dBm}$ |
| | | 97 | $-44 \text{ dBm} \leq \text{rsrp}$ |
| | | 255 | not known or not detectable |

5.3 Enable CSQ Indicator: AT*CSQ

This is a generic AT command used to enable or disable CSQ Indicators.
CSQ indicators are as follows:

+CSQ:<rssI>,<ber>

+CESQ:<rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp>

***CESQ: <rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp>,<sinr>**

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------|---------------------------------------|
| Set Command | AT*CSQ=<n> | OK |
| Read Command | AT*CSQ? | *CSQ:<n> OK |
| Test Command | AT*CSQ=? | *CSQ = (list of supported <n>s) OK |



Defined values:

| Parameter | Definition | Value | Description |
|-------------------------------------|---|-------|---------------------------|
| <n> | | 0 | CSQ Indicator is disabled |
| | | 1 | CSQ Indicator is enabled |
| <rsqi>,<ber> | please refer to AT+CSQ | | |
| <rxlev>,<rscp>,<ecno>,<rsrq>,<rsrp> | please refer to AT+CESQ | | |
| <sinr> | signal to interference plus noise ratio | | |

5.4 Network registration information:AT+CREG

Set command controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the MT network registration status, or code +CREG: <stat>[,<lac>,<ci>] when <n>=2 and there is a change of the network cell.

Read command returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the MT. Location information elements <lac> and <ci> are returned only when <n>=2 and MT is registered in the network.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|--|---|
| Set Command | AT+CREG=<n> | OK |
| Read Command | AT+CREG? | <n>=0 (default) or 1: +CREG: <n>,<stat> |
| | | OK |
| | | <n>=2: +CREG: <n>,<stat>,<lac>,<ci> |
| Test Command | AT+CREG=? | +CREG: (list of supported <n> values) |
| | | OK |
| URC report | +CREG: <stat> | If <n>=1,when the network registration status changes ,a URC (unsolicited result code) as this will be reported |
| | +CREG: <stat>[,<lac>,<ci>] | If <n>=2,when the network registration status or CI changes ,a URC (unsolicited result code) as this will be reported |
| Parameter saving mode | Parameters of this command can be saved to NVM by AT&W | |

Defined values:



AT Command Set

| Parameter | Definition | Value | Description |
|-----------|-----------------------------|-------|--|
| <n> | URC Reported status | 0 | Disable network registration unsolicited result code |
| | | 1 | Enable network registration unsolicited result code +CREG: <stat> |
| | | 2 | Enable network registration and location information unsolicited result code +CREG:<stat>[,<lac>,<ci>] |
| <stat> | Network registration status | 0 | Not registered, MT is not currently searching for a new operator to register to |
| | | 1 | Registered to home network. |
| | | 2 | Not registered, but MT is currently searching for a new operator to register to |
| | | 3 | Registration denied. |
| | | 4 | Unknown |
| | | 5 | Registered, roaming |
| <lac> | Location Area Code | - | string type, two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal) |
| <ci> | Cell Id | - | String type , two byte cell ID in hexadecimal format |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|--------------------------|---|
| → | AT+CREG=? | Query the scope of the <n> |
| ← | +CREG:(0-2) OK | |
| → | AT+CREG? | Query the registration status |
| ← | +CREG: 0,1 OK | <n>=0 <stat>=1 (Registered to home network) |
| → | AT+CREG=1 | Insert a nonlocal SIM card,power on and set <n>=1 |
| ← | OK | |
| → | AT+CREG? | Query the registration status |
| ← | +CREG: 1,5 OK | <n>=1 <stat>=5 (Registered, roaming) |
| ← (URC) | +CREG:0 | Unplug the antenna or go into the zero signal area,a URC like this will be reported |
| ← (URC) | +CREG:5 | Plug the antenna or go back to a signal covered area,a URC like this will be reported |
| → | AT+CREG=2 | Set <n>=2 |
| ← | OK | |
| → | AT+CREG? | Query the registration status |
| ← | +CREG: 2,5,"18be","9351" | When <n>=2, the Lac(0x9191) and cell ID(0x2E50) is reported. <n>=0,<stat>=5,<lac>=18be,<ci>=9351 |



| | | |
|---------|------------------------|--|
| | OK | |
| ← (URC) | +CREG: 5,"18be","9363" | Move the module to a different place until the ci changes ,then a URC like this will be reported |

5.5 EPS network registration status in E-UTRAN:AT+CREG

The set command controls the presentation of an unsolicited result code +CREG: <stat> when <n>=1 and there is a change in the MT's EPS network registration status in E-UTRAN, or unsolicited result code +CREG: <stat>,[<tac>],[<ci>],[<AcT>]] when <n>=2 and there is a change of the network cell in E-UTRAN. The parameters <AcT>, <tac> and <ci> are sent only if available. The value <n>=3 further extends the unsolicited result code with [<cause_type>,<reject_cause>], when available, when the value of <stat> changes.

NOTE1 :If the EPS MT in GERAN/UTRAN/E-UTRAN also supports circuit mode services and/or GPRS services, the +CREG command and +CREG: result codes and/or the +CGREG command and +CGREG: result codes apply to the registration status and location information for those services.

The read command returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the MT. Location information elements <tac>, <ci> and <AcT>, if available, are returned only when <n>=2 and MT is registered in the network. The parameters [<cause_type>,<reject_cause>], if available, are returned when <n>=3.

Test command returns values supported as a compound value.

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+CREG=<n> | OK |
| Read Command | AT+CREG? | +CREG: <n>,<stat>,[<tac>],[<ci>],[<AcT>],[<cause_type>,<reject_cause>]] OK |
| Test Command | AT+CREG=? | +CREG: (list of supported <n>s) OK |
| URC report | +CREG: <stat> | when <n>=1 and there is a change in the MT's EPS network registration status in E-UTRAN ,a URC (unsolicited result code) as this will be reported |
| | +CREG: <stat>,[<tac>],[<ci>],[<AcT>]] | when <n>=2 and there is a change of the network cell in E-UTRAN or a change in <stat> |
| | +CREG: <stat>,[<tac>],[<ci>],[<AcT>],[<cause_type>,<reject_cause>]] | when <n>=3 and there is a change of the network cell in E-UTRAN or a change in <stat> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|-------------|
|-----------|------------|-------|-------------|

| | | | |
|--------|---|----|--|
| <n> | URC Reported status | 0 | Disable network registration unsolicited result code |
| | | 1 | Enable network registration unsolicited result code +CEREG: <stat> |
| | | 2 | Enable network registration and location information unsolicited result code +CEREG:<stat>[,<lac>,<ci>] |
| | | 3 | enable network registration, location information and EMM cause value information unsolicited result code +CEREG: <stat>[,<tac>],[<ci>],[<AcT>][,<cause_type>,<reject_cause>]] |
| <stat> | Network registration status | 0 | Not registered, MT is not currently searching for a new operator to register to |
| | | 1 | Registered to home network. |
| | | 2 | Not registered, but MT is currently searching for a new operator to register to |
| | | 3 | Registration denied |
| | | 4 | Unknown(e.g. out of E-UTRAN coverage) |
| | | 5 | Registered, roaming |
| | | 6 | registered for "SMS only", home network (not applicable) |
| | | 7 | registered for "SMS only", roaming (not applicable) |
| | | 8 | attached for emergency bearer services only (See NOTE 2) |
| | | 9 | registered for "CSFB not preferred", home network (not applicable) |
| | | 10 | registered for "CSFB not preferred", roaming (not applicable) |
| | | 11 | emergency bearer services only |
| <tac> | tracking Area Code | - | string type, two byte tracking area code in hexadecimal format (e.g. "00C3" equals 195 in decimal) |
| <ci> | Cell Id | - | String type , four byte E-UTRAN cell ID in hexadecimal format |
| <AcT> | integer type; indicates the access technology of the serving cell | 0 | GSM (not applicable) |
| | | 1 | GSM Compact (not applicable) |
| | | 2 | UTRAN (not applicable) |



AT Command Set

| | | | |
|----------------|--|---|--|
| | | 3 | GSM w/EGPRS (see NOTE 3) (not applicable) |
| | | 4 | UTRAN w/HSDPA (see NOTE 4) (not applicable) |
| | | 5 | UTRAN w/HSUPA (see NOTE 4) (not applicable) |
| | | 6 | UTRAN w/HSDPA and HSUPA (see NOTE 4) (not applicable) |
| | | 7 | E-UTRAN |
| | | 8 | UTRAN HSPA+ |
| <cause_type> | integer type; indicates the type of <reject_cause> | 0 | Indicates that <reject_cause> contains an EMM cause value, see 3GPP TS 24.301 Annex A. |
| | | 1 | Indicates that <reject_cause> contains a manufacturer-specific cause |
| <reject_cause> | integer type; contains the cause of the failed registration. | | The value is of type as defined by <cause_type> |

Note2: 3GPP TS 24.008 and 3GPP TS 24.301 specify the condition when the MS is considered as attached for emergency bearer services.

NOTE 3: 3GPP TS 44.060 specifies the System Information messages which give the information about whether the serving cell supports EGPRS.

NOTE 4: 3GPP TS 25.331 specifies the System Information blocks which give the information about whether the serving cell supports HSDPA or HSUPA.

5.6 Operator selection:AT+COPS

Set command forces an attempt to select and register the GSM/UMTS network operator. <mode> is used to select whether the selection is done automatically by the MT or is forced by this command to operator <oper> (it shall begin in format <format>). If the selected operator is not available, no other operator shall be selected (except <mode>=4). The selected operator name format shall apply to further read commands (+COPS?) also. <mode>=2 forces an attempt to deregister from the network. The selected mode affects to all further network registration (e.g. after <mode>=2, MT shall be unregistered until <mode>=0 or 1 is selected). This command should be abortable when registration/deregistration attempt is made.

Read command returns the current mode, the currently selected operator and the current Access Technology.

Test command returns a set of five parameters, each representing an operator present in the network. A set consists of an integer indicating the availability of the operator <stat>, long and short alphanumeric format of the name of the operator, numeric format representation of the operator and access technology. Any of the formats may be unavailable and should then be an empty field. The list of operators shall be in order: home network,



AT Command Set

networks referenced in SIM or active application in the UICC (GSM or USIM) in the following order: HPLMN selector, User controlled PLMN selector, Operator controlled PLMN selector and PLMN selector (in the SIM or GSM application), and other networks.

It is recommended (although optional) that after the operator list TA returns lists of supported <mode>s and <format>s. These lists shall be delimited from the operator list by two commas.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+COPS=<mode>[,<format>,<oper>[,<AcT>[, <Domain>]]]] | OK |
| Read Command | AT+COPS? | +COPS: <mode>[,<format>,<oper>[,<AcT>][, <Domain>]] OK |
| Test Command | AT+COPS=? | +COPS: [list of supported (<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>[,<AcT>])s][, (list of supported <mode>s), (list of supported <format>s)] OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------------------|-------|--|
| <mode> | Operator registration mode | 0 | Automatic mode; <oper> field is ignored. |
| | | 1 | manual operator selection(<oper> field shall be present and <AcT> optionally) |
| | | 2 | manually deregister from network and remain unregistered until mode 0,1,4 is selected |
| | | 3 | Set only <format> (for read command +COPS?), do not attempt registration/deregistration (<oper> field is ignored); this value is not applicable in read command response |
| | | 4 | manual/automatic mode; if manual selection fails, MT switches to automatic mode (<mode>=0). (<oper> field must be present) |
| <format> | format | 0 | long format alphanumeric <oper>; up to 16 characters. |
| | | 1 | short format alphanumeric <oper>; up to 8 characters. |
| | | 2 | numeric <oper>; GSM Location Area Identification number. |
| <oper> | Operator as per <format> | - | Operator as per <format>. The numeric format is the GSM Location Area Identification number which consists of a 3-digit country code plus a 2-digit network code. hence the number has a structure: (country code digit 3)(country code digit 2)(country code digit 1)(network code digit 3)(network code digit 2)(network code digit 1) |
| <stat> | Operator availability status | 0 | Unknown |
| | | 1 | operator available |
| | | 2 | current operator (registered) |



AT Command Set

| | | | |
|----------|--|---|---|
| <AcT> | | 3 | Forbidden operator |
| | | 0 | GSM (not applicable) |
| | | 1 | GSM Compact (not applicable) |
| | | 2 | UTRAN (not applicable) |
| | | 3 | GSM w/EGPRS (see NOTE 3) (not applicable) |
| | | 4 | UTRAN w/HSDPA (see NOTE 4) (not applicable) |
| | | 5 | UTRAN w/HSUPA (see NOTE 4) (not applicable) |
| | | 6 | UTRAN w/HSDPA and HSUPA (see NOTE 4) (not applicable) |
| | | 7 | E-UTRAN |
| | | 8 | UTRAN HSPA+ |
| <Domain> | | 0 | CS only |
| | | 1 | PS only |
| | | 2 | combined CS/PS |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|-------------------------------------|--|
| → | AT+COPS? | Query the information about the current network operator |
| ← | +COPS: 0,2,"46001",7 OK | |
| → | AT+COPS=3,1 | Set <format>=1 (short format alphanumeric) |
| ← | OK | |
| → | AT+COPS? | Query the information about the current network operator |
| ← | +COPS: 0,1,"UNICOM",7 OK | |
| → | AT+COPS=3,0 | Set <format>=0(long format alphanumeric) |
| ← | OK | |
| → | AT+COPS? | Query the information about the current network operator |
| ← | +COPS: 0,0,"CHN-UNICOM",7 OK | |

5.7 Automatic Time Zone Update:AT+CTZU

Read command returns the current settings in the MT.

Test command returns supported values.

Note: NITZ=Network Identity and Time Zone, is a mechanism for provisioning local time and date information to mobile devices via a wireless network.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------|---|
| Read Command | AT+CTZU? | +CTZU: <fun> OK |
| Test Command | AT+CTZU=? | +CTZU: (list of supported <fun>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------------------|-------|------------------------------|
| <fun> | Status of time zone update | 0 | Disable NITZ update, default |
| | | 1 | Enable NITZ update |

5.8 (URC) Network Identity and Time Zone: +NITZ:<time>,<ds>

Syntax:

| URC |
|-------------------|
| +NITZ:<time>,<ds> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------------|----------------------|---|
| <time> | time | yy/mm/dd,hh:mm:ss±tz | tz :time zone, -48~+48 for example: +NITZ: 0, ,11/08/02,09:27:39+32,0 |
| <ds> | daylight saving time | 0 | No adjustment for daylight saving time |
| | | 1 | +1 hour(equals 4 quarters in <tz>) adjustment for daylight saving time |
| | | 2 | +2 hour(equals 8 quarters in <tz>) adjustment for daylight saving time |

5.9 Time Zone Report:AT+CTZR

Read command returns the current settings in the MT.

Test command returns supported on- and off-values.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------|---|
| Read Command | AT+CTZR? | +CTZR: <fun> OK |
| Test Command | AT+CTZR=? | +CTZR: (list of supported <fun>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------|-------|---|
| <fun> | Status of report | 0 | Disable Time and time Zone Reporting, default |
| | | 1 | Enable Time and time Zone Reporting |

5.10 DTMF and tone generation:AT+VTS

This command allows the transmission of DTMF tones. These tones may be used (for example) when announcing the start of a recording period.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|---|
| Set Command | AT+VTS=<dtmf-string>or AT+VTS=<dtmf>[,<duration>] | OK |
| Test Command | AT+VTS=? | +VTS:(list of supported <dtmf>s),,(list of supported <duration>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|---|-------|---|
| <dtmf-string> | DTMF string | | String quoted with"" ; the maximum length is20 characters inthe set 0-9, #, *, A, B, C, D. Note: 1) every character is separated by comma 2) the length of each tone in <dtmf-string> is defined by +VTD |
| <dtmf> | A single ASCII character in the set 0-9, #, *,A-D | | The duration of the <dtmf> is defined as follows: AT+VTS=<dtmf> , the duaration is defined by +VTD ; AT+VTS=<dtmf>,<duration>,the duaration is defined by <duration> |



AT Command Set

| | | | |
|------------|------------------|-------|--------------------------|
| <duration> | Duration of tone | 1~255 | In units of 1/10 seconds |
|------------|------------------|-------|--------------------------|

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|--|--|------------------------------|
| → | AT+VTS=? | |
| ← | +VTS: (0-9,*,#,A,B,C,D),,(1-255) OK | |
| The following is an example to input an extension : | | |
| → | ATD5487**06; | Call a switchboard 5487**06 |
| ← | OK CONNECT | The switchboard is connected |
| → | AT+VTS="1,0,9" | Connect to extension 109 |
| ← | OK | |
| The following is an example to select a service during an automatic speech service : | | |
| → | ATD10086; | Dial a speech service number |
| ← | OK CONNECT | connected |
| → | AT+VTS=2 | Select service 2 |
| ← | OK | |

5.11 DTMF Tone Duration:AT+VTD

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------|---|
| Set Command | AT+VTD=<n> | OK |
| Read Command | AT+ VTD? | + VTD:<n> OK |
| Test Command | AT+ VTD =? | + VTD: (list of supported <n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------|-------|--------------------------|
| <n> | The length of tone | 1~255 | In units of 1/10 seconds |

5.12 Set Cell Background Searching:AT+BGLTEPLMN

This command is used to set cell background searching.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------------|--|
| Set Command | AT+BGLTEPLMN=<mode>,<interval> | + BGLTEPLMN: OK OK |
| Read Command | AT+BGLTEPLMN? | + BGLTEPLMN: <mode>,<interval> OK |
| Test Command | AT+BGLTEPLMN=? | +BGLTEPLMN:[list of supported (<stat>,long alphanumeric <oper>,short alphanumeric <oper>,numeric <oper>)],<AcT>,<rsrp>]]s][,.(list of supported<format>s)] OK |

Defined values:

| Parameter | Definition | Value | Description |
|------------------------------|--|-----------------------------------|------------------------------------|
| <mode> | cell background searching enabled or not | 0 | cell background searching disabled |
| | | 1 | cell background searching enabled |
| <interval> | time interval between searching | 0 | search immediately |
| | | 0xFFFF | don't search |
| | | Other values between 1 and 0xFFFF | search with seconds |
| <stat>,<oper>,<AcT>,<format> | | | please refer to +COPS=? |
| <rsrp> | | | please refer to +CESQ |

5.13 Enable/Disable HSDPA and HSUPA:AT*EHSDPA

This command is used to set cell background searching.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|----------------------|
| Set Command | AT*EHSDPA=<mode>[,<DL_CATEGORY>[,<UL_CATEGORY>[,<CPC_STATE>[,<DPA_CATEGORY_EXT>[,<EDCH_CATEGORY_EXT>[,<F-DPC | OK |



AT Command Set

| | | |
|-----------------|--|---|
| | HState>[,<enhanced F-DPCHState>]]]]]]] | |
| Read Command | AT*EHSDPA? | *EHSDPA:<mode>,<DL_CATEGORY>,<UL_CATEGORY>,<CPC_STATE>,<DPA_CATEGORY_EXT>,<EDCH_CATEGORY_EXT>,<F-DPCHState>,<enhanced F-DPCHState> OK |
| Test Command | AT*EHSDPA=? | In TDSCDMA mode: *EHSDPA: (0-3),(1-11,13-16,23,35),(6),(0),(0),(0),(0),(0) OK In WCDMA mode: *EHSDPA: (0-2,4),(1-12),(1-6),(0,1),(1-14),(7),(0,1),(0,1) OK |



AT Command Set

Defined values:

| Parameter | Definition | Value | Description |
|---------------------|-------------------------------|-------|---|
| <mode> | | 0 | disable HSDPA(also disable HSUPA if UE is supported) for Rel5 |
| | | 1 | enable HSDPA(also Enable HSUPA if UE is supported) for Rel7 |
| | | 2 | enable HSDPA only (not include HSUPA) for Rel5 |
| | | 3 | enable DLDC for Rel9 for TD production |
| | | 4 | enable HSPA only for Rel6 |
| In TDSCDMA mode: | | | |
| <DL_CATEGORY> | default value is 14 | 1,2,3 | Max TB size: 2788 Max speed: 0.5M |
| | | 4,5,6 | Max TB size: 5600 Max speed: 1.1M |
| | | 7,8,9 | Max TB size: 8416 Max speed: 1.6M |
| | | 10,11 | Max TB size: 11226Max speed: 2.2M |
| | | 13,14 | Max TB size: 14043Max speed: 2.8M |
| <UL_CATEGORY> | default value is 6 | 6 | Max TB size: 11160 Max speed: 2.2M |
| <CPC_STATE> | | 0 | not supported |
| In WCDMA mode: | | | |
| <DL_CATEGORY> | default value is 6 | 1 | Max TB size: 7298Max speed: 1.2M |
| | | 2 | Max TB size: 7298 Max speed: 1.2M |
| | | 3 | Max TB size: 7298 Max speed: 1.8M |
| | | 4 | Max TB size: 7298 Max speed: 1.8M |
| | | 5 | Max TB size: 7298 Max speed: 3.6M |
| | | 6 | Max TB size: 7298 Max speed: 3.6M |
| <UL_CATEGORY> | | 0 | not supported |
| <CPC_STATE> | | 0 | not supported |
| <DPA_CATEGORY_EXT> | for WCDMA Rel7 support 1~20 | 1~20 | default 14 for Rel7 |
| <EDCH_CATEGORY_EXT> | for WCDMA Rel7 only support 7 | 7 | |
| <F-DPCHState> | in TD mode | 0 | not supported, default value |
| | In WCDMA mode | 0 | disabled |
| | | 1 | enabled |

5.14 Set GSM/UMTS Engineering Mode indicator:AT+EEMOPT

Set/Get GSM/UMTS Engineering Mode indicator.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------------------|---------------------------------------|
| Set Command | AT+EEMOPT=<option>[,<value>] | OK |
| Read Command | AT+EEMOPT? | +EEMOPT: <option>[,<value>] OK |
| Test Command | AT+EEMOPT=? | list of options |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|---|
| <option> | | 0 | Turn off indicator. This is the default mode after ME boot-up |
| | | 1 | Set to query mode. In this mode, no indicator reported (NOTE: but user can query the network parameter by +EEMGINFO?) |
| | | 2 | Set to periodic mode. In this mode, the GSM Engineering Mode's information will be reported in specific timeinterval, which specified by <value> second. (NOTE: refer to indicator +EEMGINFOBASIC, +EEMGINFOSVC, +EEMGINFOPS, +EEMGINFONC) |
| | | 3 | Snapshot mode. The old <value> will stored as snapshot |
| | | 4 | Restore to snapshot <value> |
| <value> | Time interval in seconds for reporting indicators. Only valid when <option> is set to 2. | | |

xamples:

| Cmd(→)/ Rsp(←) | AT Sequences |
|-------------------|---|
| → | AT+EEMOPT=? |
| ← | AT+EEMOPT=0 :Turn off indicator. This is default mode after ME bootup |
| | AT+EEMOPT=1 :Set to query mode. User can use +EEMGINFO to query network parameter |
| | AT+EEMOPT=2,<interval>:Set to periodic mode. Report EM info in <value> seconds |
| | AT+EEMOPT=3 :The old <value> will be stored as snapshot |
| | AT+EEMOPT=4 :Restore to snapshot <value> |

5.15 Query GSM/UMTS/LTE Information in Engineering Mode:AT+EEMGINFO

Query GSM/UMTS/LTE information in Engineering Mode. Only valid in query mode (use AT+EEMOPT=1 to set MT to query mode).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------|---------------------------------------|
| Read Command | AT+EEMGINFO? | +EEMGINFO:<state>,<nw_type> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------|-------|-------------------|
| <state> | MT state | 0 | in Idle mode |
| | | 1 | in Dedicated mode |
| | | 2 | in PS PTM mode |
| | | 3 | invalid state |
| <nw_type> | network type | 0 | GSM |
| | | 1 | UMTS |
| | | 2 | LTE |

5.16 GSM/UMTS/LTE Mode and Band Settings:AT*BAND

Set command controls parameters for GSM/UMTS/LTE user mode and optionally band settings.

The new parameters will be saved in NVM

UE will be reset to apply the new settings.

<mode>=0 forces the UE to search GSM network only, whereas

<mode>=1 forces the UE to search UMTS network only.

<mode>=2 forces the UE to dual mode (GSM and UMTS) (auto)

<mode>=3 forces the UE to dual mode(GSM and UMTS) (GSM preferred)

<mode>=4 forces the UE to dual mode(GSM and UMTS) (UMTS preferred)

<mode>=5 forces the UE to search LTE network only.

<mode>=6 forces the UE to dual mode(GSM and LTE) (auto)

<mode>=7 forces the UE to dual mode(GSM and LTE).(GSM preferred)

<mode>=8 forces the UE to dual mode(GSM and LTE).(LTE preferred)

<mode>=9 forces the UE to dual mode(UMTS and LTE).(auto)

<mode>=10 forces the UE to dual mode(UMTS and LTE). (UMTS preferred)



<mode>=11 forces the UE to dual mode(UMTS and LTE). (LTE preferred)
<mode>=12 forces the UE to trip mode(GSM,UMTS,LTE).(auto)
<mode>=13 forces the UE to trip mode(GSM,UMTS,LTE).(GSM preferred)
<mode>=14 forces the UE to trip mode(GSM,UMTS,LTE).(UMTS preferred)
<mode>=15 forces the UE to trip mode(GSM,UMTS,LTE). (LTE preferred)

Detailed <band>setting refers to below chart.

<roamingConfig>=0 forces the UE not support roaming.
<roamingConfig>=1 forces the UE to support roaming.
<roamingConfig>=2 means the UE should not change the roaming setting.

<srvDomain>=0 forces the UE to change service to CS (circuit service) only.
<srvDomain>=1 forces the UE to change service to PS (GPRS service) only.
<srvDomain>=2 forces the UE to change service to CS and PS both.
<srvDomain>=3 means let the UE choose a default service domain.
<srvDomain>=4 means the UE should not change the service domain setting.

< bandPriorityFlag > =0: default.
< bandPriorityFlag > =1: set TD-LTE band preferred.
< bandPriorityFlag > =2: set FDD-LTE band preferred.

If <mode> is GSM network, only bands defined in GSM band options can be selected.

If <mode> is UMTS network, one or more of the defined UMTS bands can be selected.

If <mode> is LTE network ,one or more of the defined LTE bands can be selected.

If <mode>are Dual mode, trip mode, there is no need to enter <band> parameter(s) since band will bereset to default settings. If this parameter will be entered it will be ignored.

Note that if <band> is not entered for <mode> GSM or UMTS the band setting inTTPCom_NRAM2_ABMM_WRITEABLE_DATA.gki will remain unmodified.

The default values of <roamingConfig> and <srvDomain> are 2 and 4.

The default value of <bandPriorityFlag> is 0, it only works if <mode> is LTE.

Read command returns the settings.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|----------------------|
| Set Command | AT*BAND=[<mode>[<GSMband>,<UMTSband>,<LTEbandH>,<LTEbandL>[,<roamingConfig>,<srvDomain>,<bandPriorityFlag>]]] | OK |



AT Command Set

| | | |
|--------------|-----------|--|
| Read Command | AT*BAND? | <p>*BAND :<mode>,<GSMband>,<UMTSband>,<LTEbandH>,<LTEbandL>,<roamingConfig>,<srvDomain>,< bandPriorityFlag ></p> <p>OK</p> |
| Test Command | AT*BAND=? | <p>*BAND: (list of supported<mode>s),<GSMband>,<UMTSband>,<LTEbandH>,<LTEbandL>,<bandPriorityFlag >,<srvDomain>,< bandPriorityFlag ></p> <p>OK</p> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|--|
| <mode> | integer type | 0 | GSM network |
| | | 1 | UMTS network |
| | | 2 | Dual mode(GSM and UMTS) (auto) |
| | | 3 | Dual mode(GSM and UMTS) (GSM preferred) |
| | | 4 | Dual mode(GSM and UMTS) (UMTS preferred) |
| | | 5 | LTE network |
| | | 6 | Dual mode(GSM and LTE)(auto) |
| | | 7 | Dual mode(GSM and LTE)(GSM preferred) |
| | | 8 | Dual mode(GSM and LTE)(LTE preferred) |
| | | 9 | Dual mode(UMTS and LTE)(auto) |
| | | 10 | Dual mode(UMTS and LTE)(UMTS preferred) |
| | | 11 | Dual mode(UMTS and LTE)(LTE preferred) |
| | | 12 | Trip mode(auto) |
| | | 13 | Trip mode(GSM preferred) |
| | | 14 | Trip mode(TD preferred) |
| | | 15 | Trip mode(LTE preferred) |
| <GSMband> | integer type, a sum of integers each representing a GSM band(bit mask) | 1 | PGSM 900 (standard or primary) |
| | | 2 | DCS GSM 1800 |
| | | 4 | PCS GSM 1900 |
| | | 8 | EGSM 900 (extended) |



AT Command Set

| | | | |
|-----------------|---|--------|----------------|
| | | 16 | GSM 450 |
| | | 32 | GSM 480 |
| | | 64 | GSM 850 |
| <UMTSband> | integer type, a sum of integers each representing a UMTS band(bit mask) | 1 | UMTS_BAND_1 |
| | | 2 | UMTS_BAND_2 |
| | | 4 | UMTS_BAND_3 |
| | | 8 | UMTS_BAND_4 |
| | | 16 | UMTS_BAND_5 |
| | | 32 | UMTS_BAND_6 |
| | | 64 | UMTS_BAND_7 |
| | | 128 | UMTS_BAND_8 |
| | | 256 | UMTS_BAND_9 |
| <LTEbandH> | integer type(32 bit), a sum of integers each representing a TDD LTEband(bit mask) | 32 | TDLTE_BAND_38 |
| | | 64 | TDLTE_BAND_39 |
| | | 128 | TDLTE_BAND_40 |
| | | 256 | TDLTE_BAND_41 |
| <LTEbandL> | integer type(32 bit), a sum of integers each representing a FDD LTEband(bit mask) | 1 | FDDLTE_BAND_1 |
| | | 4 | FDDLTE_BAND_3 |
| | | 8 | FDDLTE_BAND_4 |
| | | 64 | FDDLTE_BAND_7 |
| | | 65536 | FDDLTE_BAND_17 |
| | | 524288 | FDDLTE_BAND_20 |
| <roamingConfig> | integer type | 0 | support |
| | | 1 | not support |
| | | 2 | no change |
| <srvDomain> | integer type | 0 | CS_ONLY |
| | | 1 | PS_ONLY |
| | | 2 | CS_PS |



AT Command Set

| | | | |
|--------------------|--------------|---|-----------|
| <bandPriorityFlag> | integer type | 3 | ANY |
| | | 4 | No Change |
| | | 0 | default |
| | | 1 | TD-LTE |
| | | 2 | FDD-LTE |
| | | | |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|-------------------------------------|---|
| → | AT*BAND? | |
| ← | *BAND:15,74,129,480,133,0,2,0 OK | 480=LTEbandH =00000000 00000000 0000 0001 11100000 =32+64+128+256 =TDLTE_BAND_38& TDLTE_BAND_39& TDLTE_BAND_40 &TDLTE_BAND_41 133=LTEbandL =00000000 00000000 00000000 10000101 =1+4+8 =FDDLTE_BAND_1 &FDDLTE_BAND_3& FDDLTE_BAND_4 |

5.17 Indicates the Current Band:AT*BANDIND

Indicates the current band.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|------------------------------------|
| Set Command | AT*BANDIND[=<n>] | OK |
| Read Command | AT*BANDIND? | *BANDIND: <n>[,<band>,<Act>] OK |
| Test Command | AT*BANDIND=? | *BANDIND: (0,1) OK |
| URC | <n>=1 and the band changes,there will be URC: *BANDIND: <band>, <Act> sent from MT to TE. | |

Defined values:

| Parameters | Definition | Value | Description |
|------------|--|-------|-------------|
| <n> | <n>=1 and the band changes,there will be an URC: *BANDIND: <band>, <Act>reported | 0 | disable |
| | | 1 | enable |



AT Command Set

| | | | |
|--------|--|---|---------------|
| <band> | refer <GSMband>,<UMTSband>,<LTEbandH>,<LTEbandL> in AT*BAND | | |
| <act> | | 0 | GSM |
| | | 1 | GSM Compact |
| | | 2 | UTRAN |
| | | 3 | GSM w/EGPRS |
| | | 4 | UTRAN w/HSDPA |
| | | 5 | UTRAN w/HSUPA |
| | | 6 | UTRAN w/HSPA |
| | | 7 | E-UTRAN |
| | | 8 | UTRAN HSPA+ |

5.18 Get the Access Technology:AT^CACAP

This command is used to get the access technology of the serving cell.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------|-------------------------|
| Read Command | AT^CACAP? | +CACAP:(0-7) OK |
| Test Command | AT^CACAP=? | +CACAP: <act> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|---------------|
| <act> | | 0 | GSM |
| | | 1 | GSM Compact |
| | | 2 | UTRAN |
| | | 3 | GSM w/EGPRS |
| | | 4 | UTRAN w/HSDPA |
| | | 5 | UTRAN w/HSUPA |



AT Command Set

| | | | |
|--|--|---|--------------|
| | | 6 | UTRAN w/HSPA |
| | | 7 | E-UTRAN |
| | | 8 | UTRAN HSPA+ |

5.19 Query Current System Information:AT^SYSINFO

This command is used to query current system information, for example: system service status, domain, roaming or not, etc.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|------------|---|
| Execution Command | AT^SYSINFO | ^SYSINFO:<srv_status>,<srv_domain>,<roam_status>,<sys_mode>,<sim_state>,<sys_submode> |
| | | OK |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|------------|-------|-------------------------|
| <srv_status> | | 0 | no service |
| | | 1 | restricted service |
| | | 2 | valid service |
| | | 3 | restricted area service |
| | | 4 | power service |
| <srv_domain> | | 0 | no service |
| | | 1 | CS only |
| | | 2 | PS only |
| | | 3 | CS and PS |
| <roam_status> | | 0 | no roaming |
| | | 1 | roaming |
| <sys_mode> | | 0 | no service |
| | | 1 | reserved |
| | | 2 | reserved |
| | | 3 | GSM/GPRS |
| | | 4 | WCDMA |



AT Command Set

| | | | |
|---------------|--|-----|--|
| | | 5 | TD_SCDMA |
| | | 17 | LTE |
| <sim_state> | | 0 | sim invalid |
| | | 1 | sim valid |
| | | 255 | sim not insert or PINunchecked/unblocked |
| <sys_submode> | | 0 | GSM |
| | | 1 | GSM Compact |
| | | 2 | UTRAN |
| | | 3 | GSM w/EGPRS |
| | | 4 | UTRAN w/HSDPA |
| | | 5 | UTRAN w/HSUPA |
| | | 6 | UTRAN w/HSDPA and HSUPA |
| | | 7 | E-UTRAN |

5.20 Cell/Frequency Lock:AT*Cell

This proprietary AT command is used to requests to activate or to deactivate Cell/Frequency lock.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT*Cell=<mode>[,<act>[,<band>][, <freq>[, <cellId>]]] | OK |
| Test Command | AT*Cell=? | *Cell:<mode>,<act>,<band>,<freq>,<cellId> OK |
| URC | *Cell:<mode>,<act>,<band>,<freq>,<cellId> | |

Defined values:

| Parameters | Definition | Value | Description |
|------------|------------|-------|------------------------------|
| <mode> | lock mode | 0 | Cell/Frequency lock disabled |
| | | 1 | Frequency lock enabled |
| | | 2 | Cell locke enabled |



AT Command Set

| | | | |
|--------------|---|--|----------------|
| <act>,<band> | refer to AT*BAND | | |
| <freq> | Absolute radio frequency channel number | no need | no need in GSM |
| | | umts_band:0~7 | in UMTS-TD |
| | | umts_band:0~8 | in UMTS-WB |
| | | 0-599, 1200-1949, 2400-2649, 2750-3449, 3450-3799, 5180-5279, 5730-5849,6150-6449, 37750-38249,38250-38649, 38650-39649, 39650-41589 | in LTE |
| | | | |
| <cellId> | Physical Cell ID | no need | no need in GSM |
| | | 0-127 | in UMTS |
| | | 0-503 | in LTE |

5.21 Set the System Mode:AT^SYSCONFIG

This command sets the system mode,G/W access order ,roaming support and domain characteristics

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT^SYSCONFIG=<mode>,<acqorder>,<roam>,<srvdomain> | OK |
| Read Command | AT^SYSCONFIG? | ^SYSCONFIG:<mode>,<acqorder>,<roam>,<srvdomain> OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------------------|-------|-----------------------|
| <mode> | system mode | 2 | Automatic selection |
| | | 13 | GSM ONLY |
| | | 14 | WCDMA ONLY |
| | | 15 | TD-SCDMA ONLY |
| | | 16 | No Change |
| <acqorder> | Network access sequence | 0 | Automatic |
| | | 1 | GSM first, then UTRAN |



AT Command Set

| | | | |
|-------------|-----------------|---|-----------------------|
| | | 2 | UTRAN first ,then GSM |
| | | 3 | No Change |
| <roam> | Roaming support | 0 | roaming disabled |
| | | 1 | roaming enabled |
| | | 2 | No Change |
| <srvdomain> | Domain Setting | 0 | CS_ONLY |
| | | 1 | PS_ONLY |
| | | 2 | CS_PS |
| | | 3 | ANY |
| | | 4 | No Change |

5.22 Brand information:AT^SPN

This command can read the brand information which includes network operator brand such as China Mobile, ChinaUnicom, China Telecom etc. and user brand such as M-zone,GoTone etc.The brand information is usually stored in the files with the file identifier EFSPN and the file ID 6F46 in the SIM/USIM card.

This command is used to read the brand information in ths SIM/USIM card.For USIM card, there're two EFSPN files, which respectively locates in the GSM directory and in the USIM directory, so it needs to specify which file to read.The EFSPN file format follows the 3GPP TS 31.102 V5.9.0.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------|---------------------------------------|
| Set Command | AT^SPN=<spn_type> | ^SPN:<disp_rplmn>,<coding>,<spn_name> |
| | | OK |
| Test Command | AT^SPN=? | ^SPN:list of supported <spn_type>s |
| | | OK |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|------------|-------|-------------|
| < spn_type > | SPN type | 0 | GSM_SPN |



AT Command Set

| | | | |
|--------------|--|----|---|
| | | 1 | USIM_SPN |
| <disp_rplmn> | whether to display RPLMN | 0 | not display RPLMN |
| | | 1 | display RPLMN |
| | | 99 | the field is invalid, and no need to read the span_name field |
| <coding> | coding scheme, identify the <span_name> field character encoding and specify language | 0 | GSM 7 bit Default Alphabet |
| | | 1 | UCS2 |
| <spn_name> | stringstyle. When<spn_name> is coded using GSM7bit, it is no more than 16 bytes; when coded using UCS2, the content data of this string is described with the type of sixteen hexadecimal text value, and the length is no more than 32 bytes. | | |

5.23 GSM Location and Time:AT+CIPGSMLOC

This command can read the local time and/or GSM base station location.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|---|
| Set Command | AT+CIPGSMLOC=<type>,<cid> | If <type>=1: +CIPGSMLOC:<locationcode>[,<longitude>,<latitude>,<date>,<time>]] OK If <type>=2: +CIPGSMLOC: <locationcode>[,<date>,<time>] OK If error is related to ME functionality: +CME ERROR: <err> |
| Test Command | AT+CIPGSMLOC=? | +CIPGSMLOC:(list of supported <type>s),(range of <cid>) OK |

Defined values:



AT Command Set

| Parameter | Definition | Value | Description |
|----------------|------------------------------|-------|---------------------------------------|
| <type > | operation type | 0 | View the longitude, latitude and time |
| | | 1 | View the time only |
| <cid> | as <cid> defined in +SAPBR | 1-3 | |
| <longitude> | Current longitude in degrees | | |
| <latitude> | Current latitude in degrees | | |
| <date> | the format is yy/mm/dd | | for example 18/11/08 |
| <time> | the format is hh/mm/ss | | for example 15:47:26 |
| <locationcode> | | 0 | Success |
| | | 404 | Not Found |
| | | 408 | Request Time-out |
| | | 601 | Network Error |
| | | 602 | No memory |
| | | 603 | DNS Error |
| | | 604 | Stack busy |
| | | 65535 | Other Error |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|---------------------------------------|---|
| → | AT+SAPBR=3,1,"CONTYPE","GPRS" | set bearer type SAPBR command is used to activate PDP context ,thus UDP protocol can be used to resolve the domain name. |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | set APN |
| ← | OK | |
| → | AT+SAPBR =1,1 | activate the GPRS PDP context |
| ← | OK | |
| → | AT+SAPBR=2,1 | query the status of the bearer |
| ← | +SAPBR: 1,1,010.169.179.213 OK | the first parameter 1 is cid the second parameter 1 means the connection is setup the third parameter is IP address |
| → | AT+CIPGSMLOC=1,1 | query location and time |



AT Command Set

| | | |
|---|---|-----------------------|
| ← | +CIPGSMLOC: 0,31.241045,121.472313,18/11/08,15:37:30 OK | |
| → | AT+CIPGSMLOC=2,1 | query the time only |
| ← | +CIPGSMLOC: 0,18/11/08,15:47:26 OK | |
| → | AT+SAPBR=0,1 | deactivate the bearer |
| ← | OK | |

5.24 (URC) Manual PLMN selection option:+MSRI

Notification of allowing/disallowing Manual PLMN selection option in the user menu. The protocol stack sends an indication regarding whether manual PLMN selection appearance in the user's menu. The decision regarding allowing / disallowing the appearance of this option in the user's menu is done by SIM.

Syntax:

| |
|--------------|
| URC |
| +MSRI: <ind> |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|-------------|
| <ind> | | 0 | not allowed |
| | | 1 | allowed |

6 NTP Related Commands;

NTP (Network Time Protocol) is a networking protocol for clock synchronization between computer systems over packet-switched, variable-latency data networks.

NTP is intended to synchronize all participating computers to within a few milliseconds of Coordinated Universal Time. It uses the intersection algorithm to select accurate time servers and is designed to mitigate the effects of variable network latency. NTP can usually maintain time to within tens of milliseconds over the public Internet, and can achieve better than one millisecond accuracy in local area networks under ideal conditions.

6.1 Set GPRS Bearer ID:AT+CNTPCID

| Type of Command | Command | Possible response(s) |
|-----------------|---------|----------------------|
|-----------------|---------|----------------------|



AT Command Set

| | | |
|--------------|------------------|-----------------------------|
| Set Command | AT+CNTPCID=<cid> | |
| Read Command | AT+CNTPCID? | +CNTPCID:<cid> OK |
| Test Command | AT+CNTPCID=? | +CNTPCID:(<cid>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------|-------|----------------------|
| <cid> | GPRS bearer id | 1-3 | as <cid> in AT+SAPBR |

6.2 Time Synchronizing:AT+CNTP

| Type of Command | Command | Possible response(s) |
|-------------------|---|--|
| Set Command | AT+CNTP=<NTP server>[,<time zone>] | OK |
| Execution Command | AT+CNTP | OK +CNTP: <code> |
| Read Command | AT+CNTP? | +CNTP: <NTP server>,<time zone> OK |
| Test Command | AT+CNTP=? | +CNTP: length of <NTP server>,range of <time zone> OK |
| Note | After successful time synchronization,AT+CCLK? can be used to query the local time. | |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|-----------------|----------------------|--|
| <NTP server> | NTP server | domain or ip address | URL of NTP server |
| <time zone> | local time zone | -47~+48 | unit: 1/4 time zone. In fact,the time zone range is -12~+12,but some countries or regions adopt half time zone or even fourth time zone,so the unit is 1/4 time zone here. + positive means East time zone -negative means West time zone |



AT Command Set

| | | | |
|--------|-----|----|--|
| <code> | 操作码 | 1 | network time synchronization is successful |
| | | 61 | Network error |
| | | 62 | DNS resolution error |
| | | 63 | connection error |
| | | 64 | service response error |
| | | 65 | service response timeout |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|---|-------------|
| → | AT+SAPBR=3,1,"Contype","GPRS" | |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | |
| ← | OK | |
| → | AT+SAPBR=1,1 | |
| ← | OK | |
| → | AT+CNTPCID=1 | |
| ← | OK | |
| → | AT+CNTP | |
| ← | OK +CNTP:1 | |
| → | AT+CCLK? | |
| ← | +CCLK: "18/05/16,15:49:28+32" OK | |

7 Mobile Termination Control and Status Commands

7.1 Phone activity status:AT+CPAS

Execution command returns the activity status <pas>of the MT. It can be used to interrogate the MT before requestingaction from the phone.

Test command returns values supported by the MT as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|-----------|---|
| Execution Command | AT+CPAS | +CPAS: <pas> OK |
| Test Command | AT+CPAS=? | +CPAS: (list of supported <pas>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-----------------|-------|-------------------------------|
| <pas> | Activity status | 0 | MT is ready |
| | | 2 | unknown |
| | | 3 | ringing |
| | | 4 | call in progress or call hold |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|----------------------------|--|
| → | AT+CPAS=? | Query the scope of <pas> |
| ← | +CPAS: (0,2,3,4) OK | |
| → | ATD138*****; | Make a call |
| ← | OK | |
| → | AT+CPAS | Make a query at once |
| ← | +CPAS: 3 OK | 3 – ringing on the called party's side |



AT Command Set

| | | |
|---------|------------|--|
| ← (URC) | CONNECT | The call is answered by the called party |
| → | AT+CPAS | Query again |
| ← | +CPAS: 4 | 4- the call is in progress |
| | OK | |
| ← (URC) | NO CARRIER | The called party hangs up the call |
| → | AT+CPAS | Query again |
| ← | +CPAS: 0 | 0- MT is ready(idle) |
| | OK | |

7.2 Set phone functionality:AT+CFUN

Set command selects the level of functionality <fun> in the MT. Level "full functionality" is where the highest level of power is drawn. "Minimum functionality" is where minimum power is drawn. Level of functionality between these may also be specified by manufacturers. When supported by manufacturers, MT resetting with <rst> parameter may be utilized.

Test command returns values supported by the MT as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------------|-------------------------|--|
| Set Command | AT+CFUN=[<fun>[,<rst>]] | OK |
| Read Command | AT+CFUN? | +CFUN: <fun> OK |
| Test Command | AT+CFUN=? | +CFUN: (list of supported <fun> s),(list of supported <rst> s) OK |
| Parameter saving mode | Auto save to NVM | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------------|-------|---|
| <fun> | Functionality mode | 0 | Minimum functionality |
| | | 1 | Full functionality |
| | | 3 | disable phone receive RF circuits |
| | | 4 | Flying mode. disable phone both transmit and receive RF circuits in this mode |
| | | 5 | disable SIM |
| | | 6 | turn off full secondary receive |
| <rst> | reset is needed or not | 0 | do not reset the MT before setting it to <fun> power level |



AT Command Set

| | | | |
|--|--|---|---|
| | | 1 | reset the MT before setting it to <fun> power level |
|--|--|---|---|

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|--------------------|---|
| → | AT+CFUN? | Query the current <fun> |
| ← | +CFUN: 1 OK | |
| → | AT+CFUN=1,1 | Set <fun> =1 and <rst>=1, which means the module will reset and then go into full functionality mode after reset. |
| ← | OK | |

7.3 Power off:AT+CPOWD

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------|--|
| Set Command | AT+CPOWD=<n> | <n>=0: Urgent Power off(the "NORMAL POWER DOWN" URC will not be printed) <n>=1: Normal Power off(the "NORMAL POWER DOWN" URC will be printed) |

7.4 Input PIN:AT+CPIN

Set command sends to the MT a password which is necessary before it can be operated (SIM PIN, SIM PUK, PH-SIM PIN, etc.). If no PIN request is pending, no action is taken towards MT and an error message, +CME ERROR, is returned to TE.

If the PIN required is SIM PUK or SIM PUK2, the second pin is required. This second pin, <newpin>, is used to replace the old pin in the SIM.

Read command returns an alphanumeric string with mixed mode, to indicate whether a password is required.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|---|
| Set Command | AT+CPIN=<pin>[,<new pin>] | OK |
| Read Command | AT+CPIN? | TA returns an alphanumeric string indicating whether or not a password is required. Response: +CPIN: <code> |



AT Command Set

| | | |
|--------------|---------------|----|
| | | OK |
| Test Command | AT+CPIN=? | OK |
| URC | +CPIN: <code> | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------|-------------|---|
| <pin> | Password | - | String type |
| <new pin> | New password | - | String type |
| <code> | | READY | PIN has already been entered, or MT is not pending for any password |
| | | SIM PIN | MT is waiting for SIM PIN to be given |
| | | SIM PUK | MT is waiting for SIM PUK1 to be given if PIN1 was disabled after three failed attempts to enter PIN1 |
| | | SIM PIN2 | MT is waiting for SIM PIN 2 to be given |
| | | SIM PUK2 | MT is waiting for SIM PUK 2 to be given |
| | | SIM REMOVED | SIM card is removed |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|----------------------------------|------------------------|--|
| → | AT+CPIN? | Query the PIN status |
| ← | +CPIN: READY OK | |
| → | AT+CLCK="SC",1,"1234" | Open the PIN request, 1234 is PIN code, SC=SIM card |
| ← | OK | Reset the module after OK |
| ← | +CPIN: SIM PIN | After initialization, URC like this is reported, which means SIM PIN:ON and PIN request is pending |
| → | AT+CPIN="1234" | Input PIN code |
| ← | +CPIN: READY OK | PIN code is correct |
| → | AT+CLCK="SC",2 | Query the facility lock for SIM PIN |
| ← | +CLCK: 0 OK | 0- PIN code request is pending |
| → | AT+CLCK="SC",0,"1234" | Set the facility lock for SIM PIN disabled |
| ← | OK | Reset the module after OK |
| ← | +CPIN: READY | After initialization, URC like this is reported, which means SIM PIN:OFF |

7.5 Remaining Number of Retry:AT+EPIN

Get PIN's remaining number of retry.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------|---|
| Read Command | AT+EPIN? | +EPIN:<p1 retry>,<p2 retry>,<puk1 retry>,<puk2 retry> OK |
| Test Command | AT+EPIN=? | +EPIN: (0-3),(0-3),(0-10),(0-10) OK |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|--|-------|-------------|
| <p1 retry> | remaining number of retry for PIN1 | 0-3 | |
| <p2 retry> | remaining number of retry for PIN2 | 0-3 | |
| <puk1 retry> | remaining number of retry for for PUK1 | 0-10 | |
| <puk2 retry> | remaining number of retry for for PUK2 | 0-10 | |

7.6 Facility lock:AT+CLCK

Set command is used to lock, unlock or interrogate a MT or a network facility <fac>. Password is normally needed to do such actions. When querying the status of a network service (<mode>=2) the response line for 'not active'case (<status>=0) should be returned only if service is not active for any <class>.

Test command returns facility values supported as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+CLCK=<fac>,<mode>[,<password>[,<class>]] | <mode>≠2,use this command to lock, unlock a MT or a network facility <facility>.Response: OK |
| | | <mode>=2,use this command to interrogate a MT or a network facility <facility>.Response: +CLCK:<status>[,<class1><CR><LF>+CLCK:<status>,<class2>[...]] OK |
| Test Command | AT+CLCK=? | +CLCK:(list of supported <fac>s) OK |



AT Command Set

Defined values:

| Parameter | Definition | Value | Description |
|------------|---------------|-------|---|
| <fac> | Facility | "AO" | BAOC (Bar All Outgoing Calls) |
| | | "OI" | BOIC (Bar Outgoing International Calls) |
| | | "OX" | BOIC-exHC (Bar Outgoing International Calls except to Home Country) |
| | | "AI" | BAIC (Bar All Incoming Calls) |
| | | "IR" | BIC-Roam (Bar Incoming Calls when Roaming outside the home country) |
| | | "AB" | All Barring services (applicable only for <mode>=0) |
| | | "AG" | All outGoing barring services (applicable only for <mode>=0) |
| | | "AC" | All inComing barring services (applicable only for <mode>=0) |
| | | "SC" | SIM (lock SIM/UICC card) (SIM/UICC asks password in MT powerup and when this lock command issued) |
| | | "FD" | SIM fixed dialing memory |
| | | "PN" | Network Personalisation (GSM 02.22) |
| | | "PP" | Service Provider Personalisation (GSM 02.22) |
| | | "PU" | Network subset Personalisation(GSM 02.22) |
| | | "PC" | Corporate Personalization (refer 3GPP TS 22.022) |
| <mode> | mode | 0 | Unlock |
| | | 1 | Lock |
| | | 2 | Query status |
| <status> | status | 0 | Off |
| | | 1 | on |
| <classx> | Service class | 1 | Voice |
| | | 2 | data |
| | | 4 | Fax |
| | | 8 | short message service |
| | | 16 | data circuit sync |
| | | 32 | data circuit async |
| | | 64 | dedicated packet access |
| | | 128 | dedicated PAD access |
| <password> | password | | Password string used to lock or unlock a <facility>. String type. |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|--------------|----------------------------|
| | | Please refer to +CPIN item |

7.7 Change password:AT+CPWD

Set command sets a new password for the facility lock function defined by command Facility Lock +CLCK.

Test command returns a list of pairs which present the available facilities and the maximum length of their password.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------------|---|
| Set Command | AT+CPWD=<fac>,<oldpwd>,<newpwd> | OK |
| Test Command | AT+CPWD=? | +CPWD: list of supported (<fac>,<pwdlength>)s OK |

Defined values:

| Parameter | Definition | Value | Description |
|-------------------|------------------------------|-------|--|
| <oldpwd>,<newpwd> | oldpassword, new password | - | string type; <oldpwd>shall be the same as password specified for the facility from the ME user interface or with command Change Password +CPWD and <newpwd>is the new password;maximumlength of password can be determined with <pwdlength> |
| <pwdlength> | Length of password | - | integer type ; maximum length of password for the facility |
| <fac> | facility | | The same as the <fac> in AT+CLCK |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|----------------------------|---|
| → | AT+CLCK="SC",1,"1234" | PIN code lock must be enabled before changing the password |
| ← | OK | |
| → | AT+CPWD="SC","1234","8888" | Change thePINcode from 1234 to8888 |
| ← | OK | Reset the module after OK |
| | | reset the MT |
| ← | +CPIN: SIM PIN | After initialization ,URC like this is reported , which means SIM PIN:ON and PIN request is pending |
| → | AT+CPIN="8888" | Input the new PIN code |
| ← | +CPIN: READY | The pin code is correct |
| | OK | |



7.8 Set TE-TA baud rate:AT+IPR

Set command specifies the data rate at which the DCE will accept commands.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+IPR=<rate> | OK |
| Read Command | AT+IPR? | +IPR: <rate> OK |
| Test Command | AT+IPR=? | +IPR: (list of supported <rate>s) OK |
| Note | The default value of <rate> is 0(auto bauding).When <rate>=0,please note that: 1) once the baudrate is synchronized, AT commands in uppercase/lowercase/combined characters are eligible. 2) "AT+IPR=x;&W"(take x=115200,for example) can set the moudle to fixed baudrate x and save the baudrate to NVM. After the restart of the module,the baudrate is still x. | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------------------------|--------|--------------|
| < rate> | Baud rate in bps(bit per second) | 0 | auto bauding |
| | | 1200 | |
| | | 2400 | |
| | | 4800 | |
| | | 9600 | |
| | | 14400 | |
| | | 19200 | |
| | | 28800 | |
| | | 38400 | |
| | | 57600 | |
| | | 115200 | |
| | | 230400 | |
| | | 460800 | |
| | | 921600 | |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|--------------|-------------|
|-------------------------------|--------------|-------------|



AT Command Set

| | | |
|---|---|-----------------------------|
| → | AT+IPR=? | Query the current baud rate |
| ← | +IPR: (),(1200,2400,4800,9600,14400,19200,28800,38400,57600,115200,230400,460800,921600) OK | |

7.9 Set DTE-DCE character framing:AT+ICF

Set command is used to determine the local serial port start-stop (asynchronous) character framing that the DCE shall use while accepting DTE commands and while transmitting information text and result code.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------------|---|
| Set Command | AT+ICF=<format>[,<parity>] | OK |
| Read Command | AT+ICF? | +ICF: < format >[,<parity >] OK |
| Test Command | AT+ICF=? | +ICF: (list of supported <format>s),(list of supported <parity>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|------------|----------------|-------|--|
| < format > | Framing format | 0 | auto detect |
| | | 1 | 8 data bits,0 parity bits, 2 stop bits |
| | | 2 | 8 data bits,1 parity bits, 1 stop bits |
| | | 3 | 8 data bits,0 parity bits, 1 stop bits |
| | | 4 | 7 data bits,0 parity bits, 2 stop bits |
| | | 5 | 7 data bits,1 parity bits, 1 stop bits |
| | | 6 | 7 data bits,0 parity bits, 1 stop bits |
| <parity> | Parity bit | | Note: 0 parity bits means <parity> shall be ignored. |
| | | 0 | odd |
| | | 1 | even |
| | | 2 | mark |
| | | 3 | space |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------|--|
| → | AT+ICF=? | Query the scope of the value of the parameters |



| | | |
|---|-------------------|--|
| ← | +ICF: (1-6),(0-3) | |
| | OK | |

7.10 DTE-DCE Local flow control:AT+IFC

Flow Control Introduction:

Flow control is very important for correct communication between the module and DTE. For in the case such as a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to achieve data flow control: software flow control and hardware flow control.

And AirM2M wireless modules support both.

- software flow control

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. It is quite useful in some applications that only use three wires on the serial interface.

To enable software flow control, type the following AT:

AT+IFC=1, 1

This setting is stored volatile, for use after restart, AT+IFC=1, 1 should be stored to the user profile with AT&W. For example, if you want to set the module to 9600 baudrate permanently, type:

AT+IPR=9600;&W

Note: Software Flow control should not be used for data calls where binary data will be transmitted or received (e.g. TCP/IP) as the DTE interface may interpret binary data as flow control characters.

- hardware flow control

Hardware flow control achieves the data flow control by controlling the RTS/CTS line. When the data transfer should be suspended, the CTS line is set inactive until the transfer from the receiving buffer has completed. When the receiving buffer is ok to receive more data, CTS goes active once again.

To achieve hardware flow control, ensure that the RTS/CTS lines are present on your application platform.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------------------------|--|
| Set Command | AT+IFC=<dce_by_dte>,[<dte_by_dce>] | OK |
| Read Command | AT+IFC? | +IFC: < dce_by_dte>,< dte_by_dce> OK |
| Test Command | AT+IFC=? | +IFC: (list of supported <dce_by_dte>s),(list of supported <dte_by_dce>s) |



AT Command Set

| | |
|--|----|
| | OK |
|--|----|

Defined values:

| Parameter | Definition | Value | Description |
|--------------|---|-------|---|
| <dce_by_dte> | The follow control method adopted by DTE when receiving data from DCE | 0 | NO flow control |
| | | 1 | Software flow control , do not pass XON/XOFF characters to the remote DCE |
| | | 2 | Hardware flow control(RTS) |
| | | 3 | Software flow control , pass XON/XOFF characters to the remote DCE |
| <dte_by_dce> | The follow control method adopted by DCE when receiving data from DTE | 0 | NO flow control |
| | | 1 | Software flow control |
| | | 2 | Hardware flow control(CTS) |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|-----------------------------|--|
| → | AT+IFC=? | Query the scope of <dce_by_dte> and <dte_by_dce> |
| ← | +IFC: (0-3),(0-2) OK | |
| → | AT+IFC? | Query the current flow control method |
| ← | +IFC: 0,0 OK | |

7.11 Set Flicker Frequency of NET_LED:AT+SLEDS

This command is able to set the flicker frequency of the NET_LED.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT+SLEDS=<mode>, <timer_on>,<timer_off> | OK |
| Read Command | AT+SLEDS? | +SLEDS:<mode>,<timer_on>,<timer_off> OK |
| Test Command | AT+SLEDS=? | +SLEDS: (list of <mode>s), (list of <timer_on>s), (list of <timer_off>s) OK |



AT Command Set

Defined values:

| Parameter | Definition | Value | Description |
|-------------|------------------------|---------------|--|
| <mode> | mode of module | 1 | unregistered |
| | | 2 | registered |
| | | 3 | in PPP link |
| <timer_on> | time span of light on | 0 or 40~65535 | in unit of ms 0 means the LED is always on |
| <timer_off> | time span of light off | 0 or 40~65535 | in unit of ms 0 means the LED is always off |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|--|----------------------------|
| → | AT+SLEDs=? | test command |
| ← | +SLEDs : (1-3),(0,40-65535),(0,40-65535) OK | |
| → | AT+SLEDs? | Read command |
| ← | +SLEDs:<2>,<64>,<3000> +SLEDs:<1>,<64>,<800> +SLEDs:<3>,<64>,<300> OK | this is the default config |

7.12 Hardware Detection of SIM:AT*SIMDETEC

The set command is used to detect the sim in specified slot was removed or not.

The test command returns supported sim slot.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------------------|------------------------------|
| Set Command | AT*SIMDETEC=<simslot> | *SIMDETEC: <state> OK |
| Test Command | AT*SIMDETEC=? | *SIMDETEC: (1,2) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------|----------|-----------------|
| <simslot> | which sim slot | <u>1</u> | master sim slot |



AT Command Set

| | | | |
|---------|-------------|-----|--|
| | | 2 | slave sim slot(not supported yet) |
| <state> | string type | NOS | SIM was removed |
| | | SIM | SIM was inserted |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|----------------|----------------------------|
| → | AT*SIMDETEC=1 | |
| ← | *SIMDETEC: NOS | the master sim was removed |
| | OK | |

7.13 Control Sim State Event Report:AT^CARDMODE

The set command controls the URC report ^CARDMODE.

When <n>=1 and the state of the SIM/USIM card changes,^CARDMODE:<sim_state> will be reported.

The read command returns the current SIM/USIM card state.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------------------|-------------------------------------|
| Set Command | AT^CARDMODE=<n> | OK |
| Read Command | AT^CARDMODE? | ^CARDMODE:<sim_state>[,<n>] |
| | | OK |
| Test Command | AT^CARDMODE=? | ^CARDMODE: (list of supported <n>s) |
| | | OK |
| URC | ^CARDMODE:<sim_state> | |

Defined values:

| Parameter | Definition | Value | Description |
|-------------|----------------|-------|--|
| <n> | | 0 | prohibit the active report event ^CARDMODE |
| | | 1 | enable the active report event CARDMODE:<sim_state>. |
| <sim_state> | SIM card state | 0 | unknown mode |
| | | 1 | SIM CARD |
| | | 2 | USIM CARD |
| | | 255 | no SIM/USIM card or the pin has not been checked or unlocked |



7.14 Get Sim Type:AT*EUICC

Get the SIM card type.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------|-----------------------|
| Read Command | AT*EUICC? | *EUICC: <n> OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---------------|-------|-------------|
| <n> | SIM card type | 0 | SIM |
| | | 1 | USIM |

8 Phonebook

8.1 Select phonebook storage:AT+CPBS

This command is used to select the active phonebook storage, i.e. the phonebook storage that all subsequent phonebook commands will be operating on.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+CPBS=<storage>[,<password>] | OK |
| Read Command | AT+CPBS? | +CPBS:<storage>[,<used>,<total>] OK |
| Test Command | AT+CPBS=? | +CPBS: (list of supported <storage>s) OK |
| Note | Please set the <storage> type with the Set command before any other AT commands related to phonebook. | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|--|
| <storage> | storage type | "SM" | SIM/USIM phonebook |
| | | "LD" | Last Dialing number |
| | | "FD" | SIM fixed dialing number |
| | | "ON" | Own Numbers,MSISDNs IN SIM card(can be read by+CNUM too) |
| | | "DC" | Dialed Calls List |
| | | "AP" | Selected application phonebook. If a UICC with an active USIM application is present, the application phonebook, DFPHONEBOOK under ADFUSIM is selected |
| <used> | indicating the number of used locations in selected storage | - | Integer type. |
| <total> | maximum number of locations allowed in the selected storage | - | Integer type. |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|--------------|-------------|
|----------------------------|--------------|-------------|



AT Command Set

| | | |
|---|--|------------------------------------|
| → | AT+CPBS=? | Query all the storage type |
| ← | +CPBS: ("SM","FD","LD","DC","ON","AP") OK | |
| → | AT+CPBS="SM" | Set SM as the storage type |
| ← | OK | |
| → | AT+CPBS? | Query the current storage type |
| ← | +CPBS: "SM",6,250 OK | |
| → | AT+CPBR=1,2 | List all the SIM phonebook numbers |
| ← | +CPBR: 1,"+8613762613263",145,"" OK | |

8.2 Find a phonebook entry:AT+CPBF

Execution command returns phonebook entries (from the current phonebook memory storage selected with +CPBS) which alphanumeric field starts with string <findtext>. Entry fields returned are location number <indexn>, phone number stored there,<number> (of format <type>), text <text> associated with the number .If listing fails in an MT error, +CME ERROR: <err> is returned.

Test command returns the maximum lengths of <number> and <text> fields.

Syntax:

| Type of Command | Command | Responses |
|-----------------|---------------------|---|
| Set Command | AT+CPBF=<find text> | [+CPBF:<index1>,<number>,<type>,<text>[[...]<CR><LF>+CBPF:<index2>,<number>,<type>,<text>]] OK |
| Test Command | AT+CPBF=? | +CPBF:[<nlength>],[<tlength>] OK |

Defined values:

| Parameter | Definition | Value | Description |
|-------------------|---------------------------------|-------|--|
| <index1>,<index2> | Index for entry | - | Integer type values in the range of location numbers of phonebook memory |
| <number> | Phone number | - | String type phone number of format <type> |
| <type> | Type of phone number | - | Please refer to GSM 04.08 subclause10.5.4.7AT+CSTA |
| <text>,<findtext> | The name of the phonebook entry | - | String type, and the character set is specified by +CSCS |



AT Command Set

| | | | |
|-----------|---------------------------------|---|--------------------------------|
| <nlength> | The max length of <number> | - | Integer type,in units of bytes |
| <tlength> | The max length of the <text> | - | Integer type,in unit of bytes |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--|--|
| → | AT+CPBF=? | |
| ← | +CPBF: 40,14 OK | The max length of the name:14 The max length of the phone number:40 |
| → | AT+CPBF="TOM" | Find a contact named "TOM" |
| ← | +CPBF: 5,"13601***187",129,"TOM" OK | Find it ,index=5 |

8.3 Read the phonebook entry:AT+CPBR

Execution command returns phonebook entries in location number range <index1>... <index2> from the current phonebook memory storage selected with +CPBS. If <index2> is left out, only location <index1> is returned. Entry fields returned are location number <indexn>, phone number stored there <number> (of format <type>), text <text> associated with the number. If all queried locations are empty (but available), no information text lines may be returned. If listing fails in an MT error, +CME ERROR: <err> is returned.

Test command returns location range supported by the current storage as a compound value and the maximum lengths of <number> and <text> fields.

Syntax:

| Type of Command | Command | Response |
|-----------------|-----------------------------|---|
| Set Command | AT+CPBR=<index1>[,<index2>] | [+CPBR: <index1>,<number>,<type>,<text><CR><LF> [...]+CPBR: <index2>,<number>,<type>,<text>] OK |
| Test Command | AT+CPBR=? | +CPBR:(list of supported<index>s),[<nlength>], [<tlength>] OK |

Defined values:

| Parameter | Definition | Value | Description |
|-------------------|-----------------|-------|---|
| <index1>,<index2> | Index for entry | - | Integer type values in the range of location number s of phonebook memory |



AT Command Set

| | | | |
|-----------|---------------------------------|---|--|
| <number> | Phone number | - | String type,defined by <type> |
| <type> | Type of phone number | - | Please refer to GSM 04.08 subclause 10.5.4.7 AT+CSTA |
| <text> | The name of the phonebook entry | - | String type, and the character set is defined by +CSCS |
| <nlength> | The max length of <number> | - | Integer type, unit: bytes |
| <tlength> | The max length of the <text> | - | Integer type,unit: bytes |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|---|-----------------------------------|
| → | AT+CPBR=1,5 | List pb entry whose index=1~5 |
| ← | +CPBR: 1,"137***8187",129,"Test" +CPBR: 2,"139****8096",129,"TEST" +CPBR: 5," 13601***187",129,"zhangsan" OK | The result of the query |
| → | AT+CPBR=? | Query the range of the parameters |
| ← | +CPBR: (1-250),40,14 OK | |
| → | AT+CPBS="ON" | Set "ON" as the PB storage type |
| a← | OK | |
| → | AT+CPBR=? | Query the range of the parameters |
| ← | +CPBR: (1-2),40,14 OK | |
| → | AT+CPBS="ME" | Set "ME" as the PB storage type |
| ← | OK | |
| → | AT+CPBR=? | Query the range of the parameters |
| ← | +CPBR: (1-18),40,21 OK | |

8.4 Write phonebook entry:AT+CPBW

Set command writes phonebook entry in location number <index>in the current phonebook memory storageselectd with +CPBS. Entry fields written are phone number <number>(in the format <type>), text <text>associated with the number. If <index> is given as the only parameter, the phonebook entry specified by <index>is deleted. If writing fails in an MT error, +CME ERROR: <err>is returned.

Test command returns location range supported by the current storage as a compound value, the maximum



AT Command Set

length of <number> field, supported number formats of the storage, and the maximum length of <text> field. In case of SIMStorage, the lengths may not be available.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+CPBW=[<index>][,<number>,<type>,<text>]] | OK |
| Test Command | AT+CPBW=? | +CPBW: (list of supported <index>s), [<nlength>], (list of supported <type>s), [<tlength>] OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------------------------|-------|--|
| <index> | Index for entry | | Integer type value in the range of location number of phonebook memory |
| <number> | Phone number | | String type, defined by <type> |
| <type> | Type of phone number | | Please refer to GSM 04.08 subclause 10.5.4.7 AT+CSTA in this doc |
| <text> | The name of the phonebook entry | | String type, and the dcs is defined by +CSCS |
| <nlength> | The max length of the phone number | | Integer type, in units of byte |
| <tlength> | The max length of the name | | Integer type, in units of byte |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|--|---|
| → | AT+CPBW=? | |
| ← | +CPBW:(1-500),40,(128,129,145,161,177) OK | |
| → | AT+CPBW=1, "150*****58",129,"T" | Write an entry at a location (index=1) |
| ← | OK | |
| → | AT+CPBR=1,200 | Query all the PB entry (the storage type is defined by +CPBS) |
| ← | +CPBR: 1,"150*****58",129,"T" +CPBR: 2,"152*****59",129,"LIAO" +CPBR: 3,"1502650",129,"" +CPBR: 4,"021*****52",129,"W" +CPBR: 5,"021*****68",129,"A" | Total 6 entries |



AT Command Set

| | | |
|---|--|---|
| | +CPBR: 6,"1",129,"" | |
| | OK | |
| → | AT+CPBW=1 | Delete the entry whose index=1 |
| ← | OK | |
| → | AT+CPBW=2 | Delete the entry whose index=2 |
| ← | OK | |
| → | AT+CPBR=1,6 | Query again |
| ← | +CPBR: 3,"1502650",129,"" +CPBR: 4,"02131252252",129,"W" +CPBR: 5,"02131252252",129,"A" +CPBR: 6,"1",129,"" OK | The 1 st and the 2 nd entries are missing |

8.5 Subscriber number:AT+CNUM

Action command returns the MSISDNs related to the subscriber.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|-----------|---|
| Execution Command | AT+CNUM | +CNUM:[<alpha1>],<number1>,<type1>[,<speed>,<service>][<CR><LF> +CNUM:[<alpha2>],<number2>,<type2>[,<speed>,<service>]][...] OK |
| Test Command | AT+CNUM=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---------------------------------|-------|---|
| <alpha> | Name of the number | | Optional alphanumeric string associated with <number>, whose coding sytem is defined by +CSCS |
| <number> | Own number | | String type, in format of <typex> |
| <typex> | Type of <number> | | Defined in GSM 04.08 subclause 10.5.4.7 |
| <speed> | speed | | Refer to <speed> in AT+CBST |
| <service> | Service related to phone number | 0 | asynchronous Modem |
| | | 1 | synchronous Modem |
| | | 2 | PAD access(asynchronous) |
| | | 3 | Packet access(synchronous) |
| | | 4 | Voice |
| | | 5 | fax |



Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------------------------------|--|
| → | AT+CPBS="ON" | SetON(Own Number) as the PB storage type |
| ← | OK | |
| → | AT+CPBW=1,"180*****",145 | Write the own number in |
| ← | OK | |
| → | AT+CNUM | Query the own number(i.e. subscriber number) |
| ← | +CNUM: "", "+180*****",145 OK | |

8.6 (URC)Phonebook Ready: +MPBK

AirM2M extended AT command to indicate that the SIM and/or NVRAM phonebooks are ready to use.

Syntax:

| URC |
|------------------|
| +MPBK: <bReady > |

Defined values:

| Parameter | | Value | Description |
|-----------|--|-------|-------------|
| <bReady> | whether SIM and/or NVRAM phonebooks are ready for use | 0 | ready |
| | | 1 | not ready |

9 Commands for SIM Card Operation

9.1 Generic SIM Access:AT+CSIM

Set command transmits to the MT the SIM command it then shall send as it is to the SIM.

This command allows a direct control of the SIM by a distant application on the TE. The TE shall then take care of processing SIM information within the frame specified by GSM/UMTS.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------------|--|
| Set Command | AT+CSIM=<length>,<Command> | +CSIM: < length >,< response > OK |
| Test Command | AT+CSIM=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|------------|---|-------|---|
| <length> | length of characters sent to the TE in <Command> or <response> | | Integer type,twice the number of octets in the raw data |
| <Command> | command passed on by the MT to the SIM in the format as described in GSM 51.011 | | string type(string should be included in quotation marks), hexadecimal character format |
| <response> | response to the command passed on by the SIM to the MT in the format as described in GSM 51.011 | | string type(string should be included in quotation marks), hexadecimal character format |

A command APDU has the following general format:

| | | | | | |
|-----|-----|----|----|----|------|
| CLA | INS | P1 | P2 | P3 | Data |
|-----|-----|----|----|----|------|

The response APDU has the following general format:

| | | |
|------|-----|-----|
| Data | SW1 | SW2 |
|------|-----|-----|

The bytes have the following meaning:

CLA is the class of instruction, 'A0' is used in the GSM application;

INS is the instruction code for each command.

- ✧ P1, P2, P3 are parameters for the instruction. P1, P2, P3 are parameters for the instruction. They are specified in below table. 'FF' is a valid value for P1, P2 and P3. P3 gives the length of the data element. P3='00' introduces a 256 byte data transfer from the SIM in an outgoing data transfer command

(response direction). In an ingoing data transfer command (command direction), P3='00' introduces no transfer of data;

- ✧ SW1 and SW2 are the status words indicating the successful or unsuccessful outcome of the command.

Coding of the commands

| COMMAND | INS | P1 | P2 | P3 | S/R |
|-------------------|------|-------------|------------|------|-----|
| SELECT | 'A4' | '00' | '00' | '02' | S/R |
| STATUS | 'F2' | '00' | '00' | lgth | R |
| READ BINARY | 'B0' | offset high | offset low | lgth | R |
| UPDATE BINARY | 'D6' | offset high | offset low | lgth | S |
| READ RECORD | 'B2' | rec No. | Mode | lgth | R |
| UPDATE RECORD | 'DC' | rec No. | Mode | lgth | S |
| SEEK | 'A2' | '00' | type/mode | lgth | S/R |
| INCREASE | '32' | '00' | '00' | '03' | S/R |
| VERIFY CHV | '20' | '00' | CHV No. | '08' | S |
| CHANGE CHV | '24' | '00' | CHV No. | '10' | S |
| DISABLE CHV | '26' | '00' | '01' | '08' | S |
| ENABLE CHV | '28' | '00' | '01' | '08' | S |
| UNBLOCK CHV | '2C' | '00' | see note2 | '10' | S |
| INVALIDATE | '04' | '00' | '00' | '00' | |
| REHABILITATE | '44' | '00' | '00' | '00' | |
| RUN GSM ALGORITHM | '88' | '00' | '00' | '10' | S/R |
| SLEEP | 'FA' | '00' | '00' | '00' | |
| GET RESPONSE | 'C0' | '00' | '00' | lgth | R |
| TERMINAL PROFILE | '10' | '00' | '00' | lgth | S |
| ENVELOPE | 'C2' | '00' | '00' | lgth | S/R |
| FETCH | '12' | '00' | '00' | lgth | R |
| TERMINAL RESPONSE | '14' | '00' | '00' | lgth | S |

NOTE1:

The direction of the data is indicated by (S) and I, where (S) stands for data sent by the ME while I stands for data received by the ME.

NOTE2:

If the UNBLOCK CHV command applies to CHV1 then P2 is coded '00'; if it applies to CHV2 then P2 is coded '02'.

NOTE3: for detail information, please refer to 3GPP TS 11.11



Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|---|---|
| → | AT+CSIM=14,A0A40000023F00 | first use "SELECT" command(INS is A4) to select master file of GSM, file ID is 3F00 |
| ← | +CSIM:48,000000003F0001000000000009 9301020400838A838A9000 | the end two bytes 9000 mapping SW1 and SW2 show the correctly executed of command |
| → | AT+CSIM=14,A0A40000026F07 | then use "SELECT" command to select element file EFIMSI that contain IMSI, file ID is 6F07 |
| ← | +CSIM:34,000000096F07040014FF14010 200009000 | |
| → | AT+CSIM=10,A0B0000009 | use "READ BINARY" command(INS is B0) to read the IMSI |
| ← | +CSIM:22,0849060057432199449000 | |
| → | AT+CSIM=10,A0F200002F | CSIM is for all kinds of SIM-ME interface commands, on condition that the user must be familiar with GSM11.11 and GSM11.14. Here,take STATUS command for example,we can use it to query the current MF/DF/EF information: 10 –the number of characters in the following "" A0 - CLA F2 - INS 00 - P1 00 - P2 2F - P3 Please refer to GSM11.11 chapter 9 |
| ← | +CSIM: 48,"000022c07f100200000000000991000c 0600838a838a91d3" OK | 48 –the length of the <response> quoted in "" 0000 – RFU(For Future Use) 22c0 – the remaining space in DF/EF 7F10– fileid ,7F10 means this is a DF file (DFTELECOM) 02 – type of file,02 means DF 0000000000 – RFU(reserved for future use) 09 – the length of the following data(GSM specific data here) |

9.2 Restricted SIM access:AT+CRSM

By using this command instead of Generic SIM Access +CSIM TE application has easier but more limited access to the SIM database. Set command transmits to the MT the SIM <command> and its required parameters. MT handles internally all SIM-MT interface locking and file selection routines. As response to the command, MT sends the actual SIM information parameters and response data. MT error result code +CME ERROR may be returned when the command cannot be passed to the SIM, but failure in the execution of the command in the SIM is reported in <sw1> and <sw2> parameters.

Coordination of command requests to SIM and the ones issued by GSM/UMTS application inside the MT is implementation dependent. However the TE should be aware of the precedence of the GSM/UMTS application commands to the TE commands.

Syntax:

| Type | of | Command | Possible response(s) |
|------|----|---------|----------------------|
|------|----|---------|----------------------|



AT Command Set

| Command | | |
|--------------|---|---|
| Set Command | AT+CRSM=<command>[,<fileid>[,<P1>,<P2>,<P3>[,<data>[,<pathid>]]]] | +CRSM:<sw1>,<sw2> [,<response>] OK |
| Test Command | AT+CRSM=? | +CRSM: (176,178,192,214,220,242),(12037-28599),(0-255),(0-255),(0-255),<data>,<pathid> OK |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|---|--------------|---|
| <command> | The command sent to SIM (please refer to GSM51.011) | 176 | READ BINARY |
| | | 178 | READ RECORD |
| | | 192 | GET RESPONSE |
| | | 214 | UPDATE BINARY |
| | | 220 | UPDATE RECORD, |
| | | 242 | STATUS |
| | | other values | Reserved |
| <fileid> | EF File ID Necessary for every command except STATUS | (2FE2)12258 | ICCID file |
| | | (6F37)28471 | ACMmax |
| | | (6F07)28423 | IMSI |
| | | (6F39)28473 | ACM file |
| | | (6F3A)28474 | ADN file(i.e. SIM PB) |
| | | (6F40)28480 | MSISDN |
| | | (6F41)28481 | PUKT |
| | | (6F42)28476 | SMS |
| | | (6F46)28486 | SPN |
| | | (6FAD)28589 | EF _{AD} (Administrative data) |
| | | (6FC9)28617 | EF _{MBI} (Mailbox Identifier) |
| | | - | Other Value |
| <data> | | - | Information sent to SIM card (in hexadecimal format) |
| <sw1>, <sw2> | Reponse information | 0x90 0x00 | 144,0,command executed successfully |
| | | 0x9F 0xXX | length XX of the response data |
| | | 0x92 0x0X | update successful but after using an internal retry routine X times |
| | Integer type Please refer to GSM 11.11 | 0x92 0x40 | memory problem |
| | | 0x94 0x02 | out of range (invalid address) |
| | | 0x94 0x04 | file ID not found; pattern not found |



AT Command Set

| | | 0x94 0x08 | file is inconsistent with the command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------|--|-------------|--|---------|-----|----|----|----|-----|--------|------|------|------|------|---|-------------|------|-------------|------------|------|---|---------------|------|-------------|------------|------|---|-------------|------|---------|------|------|---|---------------|------|--------|------|------|---|--------------|------|------|------|------|---|
| | | 0x98 0x02 | no CHV initialized | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x98 0x04 | access condtion not fullfild / unsuccessfull CHV verify / authentication failed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x98 0x08 | in contradiction with CHV status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x98 0x10 | in contradiction with invalidation status | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x98 0x40 | Unsuccessfull CHV-verif. or UNBLOCK CHF / CHV blocked /UNBL.blocked | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x98 0x50 | increase can not be performed. Max. value reached | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x67 0xXX | incorrect parameter P3 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x6B 0xXX | incorrect parameter P1 or P2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x6D 0xXX | unknown instruction code given in the command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x6E 0xXX | wrong instruction class given in the command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | 0x6F 0xXX | technical problem with no diagnostic given | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <response> | | - | Response for command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <P1>,<P2> | File access conditions,please refer to GSM 11.11 | 0~255 | <div><div><P1>,<P2>,<P3> are all decimal integer,defined as:</div><table><tr><th>COMMAND</th><th>INS</th><th>P1</th><th>P2</th><th>P3</th><th>S/R</th></tr><tr><td>STATUS</td><td>'F2'</td><td>'00'</td><td>'00'</td><td>lgth</td><td>R</td></tr><tr><td>READ BINARY</td><td>'B0'</td><td>Offset high</td><td>Offset low</td><td>lgth</td><td>R</td></tr><tr><td>UPDATE BINARY</td><td>'D6'</td><td>Offset high</td><td>Offset low</td><td>lgth</td><td>S</td></tr><tr><td>READ RECORD</td><td>'B2'</td><td>Rec No.</td><td>Mode</td><td>lgth</td><td>R</td></tr><tr><td>UPDATE RECORD</td><td>'DC'</td><td>Rec No</td><td>Mode</td><td>lg h</td><td>S</td></tr><tr><td>GET RESPONSE</td><td>'C0'</td><td>'00'</td><td>'00'</td><td>lgth</td><td>R</td></tr></table></div> | COMMAND | INS | P1 | P2 | P3 | S/R | STATUS | 'F2' | '00' | '00' | lgth | R | READ BINARY | 'B0' | Offset high | Offset low | lgth | R | UPDATE BINARY | 'D6' | Offset high | Offset low | lgth | S | READ RECORD | 'B2' | Rec No. | Mode | lgth | R | UPDATE RECORD | 'DC' | Rec No | Mode | lg h | S | GET RESPONSE | 'C0' | '00' | '00' | lgth | R |
| COMMAND | INS | P1 | P2 | P3 | S/R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| STATUS | 'F2' | '00' | '00' | lgth | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| READ BINARY | 'B0' | Offset high | Offset low | lgth | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UPDATE BINARY | 'D6' | Offset high | Offset low | lgth | S | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| READ RECORD | 'B2' | Rec No. | Mode | lgth | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| UPDATE RECORD | 'DC' | Rec No | Mode | lg h | S | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| GET RESPONSE | 'C0' | '00' | '00' | lgth | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <P3> | File length | 0~255 | <div>P3=00 means: 1) in ME->SIM direction(command),P3=00 means no data input 2) in SIM->ME direction(response),P3=00 means there are 256 bytes waiting for fetch</div> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

AT Command Set

| | |
|-----------------------|--|
| <p><pathid></p> | <p>string type; contains the path of an elementary file on the SIM/UICC in hexadecimal format as defined in ETSI TS 102 221 (e.g. “7F205F70” in SIM and UICC case). The <pathid> shall only be used in the mode “select by path from MF” as defined in ETSI TS 102 221n</p> <p>Note: Since valid elementary file identifiers may not be unique over all valid dedicated file identifiers the <pathid> indicates the targeted UICC/SIM directory path in case of ambiguous file identifiers. For earlier versions of this specification or if <pathid> is omitted, it could be implementation specific which one will be selected</p> |
|-----------------------|--|

Examples:

| Command(→)/ Response(←) | AT Sequences | Description | | | | | | | | | | | | | | | | | | |
|---|--|---|-----------|------------|------------|-------|--------------|------------------|-------|----------|--|----------------------------|-------------|---|---|------|-----------------|-----|------|--------------------------------------|
| Reading and writing of a SIM Short Messages(EFSMS): | | | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM=178,28476,9,4,176 | Read a SIM message(i.e.EFsms) <table border="1"> <thead> <tr> <th>Parameter</th><th>Definition</th><th>decription</th></tr> </thead> <tbody> <tr> <td>178</td><td><command></td><td>READ RECORD</td></tr> <tr> <td>28476</td><td><fileid></td><td>SIMEF_{SMS}</td></tr> <tr> <td>9</td><td><P1></td><td>9-index of the SM</td></tr> <tr> <td>4</td><td><P2></td><td>4-absolute mode</td></tr> <tr> <td>176</td><td><P3></td><td>176-length of the SIM message record</td></tr> </tbody> </table> | Parameter | Definition | decription | 178 | <command> | READ RECORD | 28476 | <fileid> | SIMEF _{SMS} | 9 | <P1> | 9-index of the SM | 4 | <P2> | 4-absolute mode | 176 | <P3> | 176-length of the SIM message record |
| Parameter | Definition | decription | | | | | | | | | | | | | | | | | | |
| 178 | <command> | READ RECORD | | | | | | | | | | | | | | | | | | |
| 28476 | <fileid> | SIMEF _{SMS} | | | | | | | | | | | | | | | | | | |
| 9 | <P1> | 9-index of the SM | | | | | | | | | | | | | | | | | | |
| 4 | <P2> | 4-absolute mode | | | | | | | | | | | | | | | | | | |
| 176 | <P3> | 176-length of the SIM message record | | | | | | | | | | | | | | | | | | |
| ← | +CRSM: 144,0,"010891683110304105F16005A10110F1000811808212742423880500033B02015C0A656C76845BA26237FF0C60A8672C6B214E0A7F516D4191CF0030002E003000370035004D0042FF0C672C67087D2F8BA14F7F7528672C57306D4191CF0032003700330036002E003300340030004D0042FF0C595799105185672C670852694F59672C57306D4191CF003300330035002E003600360030004D0042FF0C672C6708FFFFFFFFFFFFFFFFFFFFFFFFFF" | The result of the query. <table border="1"> <thead> <tr> <th>Parameter</th><th>Definition</th><th>decription</th></tr> </thead> <tbody> <tr> <td>144,0</td><td><sw1>, <sw2></td><td>command succeeds</td></tr> <tr> <td>"01"</td><td>status</td><td> 01-read MT SM; 00-empty MT SM; 02-unread MT SM ; 05-sent MO SM; 07-unsent MO SM. Please refer to GSM11.1110.3.3 </td></tr> <tr> <td>"0891683110304105....FFFF"</td><td>TPDU packet</td><td>Please refer to GSM 03.40 and GSM 04.11</td></tr> </tbody> </table> | Parameter | Definition | decription | 144,0 | <sw1>, <sw2> | command succeeds | "01" | status | 01-read MT SM; 00-empty MT SM; 02-unread MT SM ; 05-sent MO SM; 07-unsent MO SM. Please refer to GSM11.1110.3.3 | "0891683110304105....FFFF" | TPDU packet | Please refer to GSM 03.40 and GSM 04.11 | | | | | | |
| Parameter | Definition | decription | | | | | | | | | | | | | | | | | | |
| 144,0 | <sw1>, <sw2> | command succeeds | | | | | | | | | | | | | | | | | | |
| "01" | status | 01-read MT SM; 00-empty MT SM; 02-unread MT SM ; 05-sent MO SM; 07-unsent MO SM. Please refer to GSM11.1110.3.3 | | | | | | | | | | | | | | | | | | |
| "0891683110304105....FFFF" | TPDU packet | Please refer to GSM 03.40 and GSM 04.11 | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM=220,28476,2,4,176,"010891683110304105F16005A10110F1000811808212742423880500033B02015C0A656C76845BA26237FF0C60A8672C6B214E0A7F516D4191CF0030002E003000370035004D0042FF0C672C67087D2F8BA14F7F7528672C57306D4191CF0032003700330036002E003300340 | Write a message. The parameters are just the same as above. | | | | | | | | | | | | | | | | | | |



AT Command Set

| | 030004D0042FF0C595799105185672 C670852694F59672C57306D4191CF0 03300330035002E003600360030004D 0042FF0C672C6708FFFFFFFFFFFFFFF FFFFFFFFFFFFFFF" | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|---|-----------|------------|------------|-----|-----------|---------------|-------|-----------|--------------------|---|------|-----------------------|---|------|-----------------|----|------|-----------------------|--|---------------------------|----------------|----|---------------------------|--|----|---------|--|------------------|-----------------------------------|------------------------------|
| ← | +CRSM: 144,0,"" OK | This command is executed successfully | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Reading and writing of a SIM PB entry (i.e.EFADN) : | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CPBR=? | Query the max length for the name of a SIM PB entry (i.e. Alpha Identifier) : X | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CPBR: (1-250),40,14 OK | <tlength>=X=14,so The record length=X+14=28 bytes (as to why ,please refer to GSM11.11 subclause 10.3.1) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM=220,28474,3,4,28,"545454 5430313233343536373839078131363 83838F8FFFFFFFFFFFFFFF" | Having known the record length,we can use UPDATE RECORD to write a SIM PB record(index=3) <table border="1"> <thead> <tr> <th>Parameter</th><th>Definition</th><th>decription</th></tr> </thead> <tbody> <tr> <td>220</td><td><command></td><td>UPDATE RECORD</td></tr> <tr> <td>28474</td><td><file id></td><td>SIM PB (i.e.EFADN)</td></tr> <tr> <td>3</td><td><P1></td><td>3-index of the record</td></tr> <tr> <td>4</td><td><P2></td><td>4-absolute mode</td></tr> <tr> <td>28</td><td><P3></td><td>the record length =28</td></tr> <tr> <td>54545454 30313233 34353637 3839</td><td>The name of a PB entry</td><td>TTTT0123456789</td></tr> <tr> <td>07</td><td>length of phone number</td><td></td></tr> <tr> <td>81</td><td>TON/NPI</td><td></td></tr> <tr> <td>31363838 38F8</td><td>Phone number (in BCD form)</td><td>The number is 13638383838</td></tr> </tbody> </table> | Parameter | Definition | decription | 220 | <command> | UPDATE RECORD | 28474 | <file id> | SIM PB (i.e.EFADN) | 3 | <P1> | 3-index of the record | 4 | <P2> | 4-absolute mode | 28 | <P3> | the record length =28 | 54545454 30313233 34353637 3839 | The name of a PB entry | TTTT0123456789 | 07 | length of phone number | | 81 | TON/NPI | | 31363838 38F8 | Phone number (in BCD form) | The number is 13638383838 |
| Parameter | Definition | decription | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 220 | <command> | UPDATE RECORD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28474 | <file id> | SIM PB (i.e.EFADN) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | <P1> | 3-index of the record | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | <P2> | 4-absolute mode | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 28 | <P3> | the record length =28 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 54545454 30313233 34353637 3839 | The name of a PB entry | TTTT0123456789 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 07 | length of phone number | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 81 | TON/NPI | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 31363838 38F8 | Phone number (in BCD form) | The number is 13638383838 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CRSM: 144,0,"" OK | This command is executed successfully | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM=176,28474,3,4,28 | Read the PB record(index=3) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CRSM: 144,0," 5454545430313233343536373839078 13136383838F8FFFFFFFFFFFFFFF " OK | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Read IMSI: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM=176,28423,0,0,9 | READ BINARY, file ID(6F07) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CRSM: 144,0,084906005743219944 | generic success code, 9 bytes of file data | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Read other EF file: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CRSM =176,12258,0,0,10 | This EF file is transparent type,so it must be read with | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |



AT Command Set

| | | |
|---|--|--|
| | | READ BINARY offset high and offset low is 0,the length of the file is 10,so here P3=10 |
| ← | +CRSM: 144,0,"98681011271300853289" OK | |

9.3 SIM Toolkit Application Related Service: AT+MSTK

Services related to SIM Toolkit application [AirM2M private AT command].

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+MSTK=<cmd>[,<data>] | +MSTK:<cmd>, <response data> OK |
| Test Command | AT+MSTK=? | +MSTK: (0-3),<data> OK |
| URC | There will be unsolicited result code +MSTK:<cmdType>[,<value>] sent from MT to TE after set command is applied | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|---|
| <cmd> | | 0 | enable/disable proactive command Indication |
| | | 1 | download ME capability profile |
| | | 2 | requests SIMAT notification capability info |
| | | 3 | get SIM card profile |
| | | 4 | send envelope command |
| | | 11 | respond to proactive command |
| | | 12 | respond to setup call request from STK app |
| <cmdType> | | 11 | proactive indication |
| | | 12 | setup call indication |
| | | 13 | display Info indication |
| | | 14 | session end indication |
| | | 15 | set up call status indication |
| | | 16 | set up call result indication |
| | | 18 | send SM status indication |
| | | 19 | send SM result indication |
| | | 20 | send USSD result indication |



AT Command Set

Examples:

| cmd(→)/ rsp(←) | AT Sequences | Description |
|---|--|--|
| disable proactive command indication: | | |
| → | AT+MSTK=0,0 | |
| ← | OK | |
| enable proactive command indication: | | |
| → | AT+MSTK=0,1 | |
| ← | OK | |
| get SIM(USIM) card profile, every bit represent each facility supported or not by SIM | | |
| → | AT+MSTK=3 | |
| ← | +MSTK:3, FFFFFFFF7F11009F3F0000000000000000 (+MSTK:3, FFFFFFFF7F1100DFFF0000000000000000) OK | SIM USIM |
| request SIMAT notification capability info: | | |
| → | AT+MSTK=2 | |
| ← | +MSTK: 2, 111212111333421211 OK | |
| download ME capability profile, every bit represent each facility supported or not by SIM(USIM) | | |
| → | AT+MSTK=1, FFFFFFFF7F11009F3F0000000000000000 (AT+MSTK=1, FFFFFFFF7F1100DFBF0000000000000000) | SIM USIM |
| ← | OK | |
| proactive SIM toolkit commands: | | |
| ← | +MSTK: 11, D05E010302250002028182050F80005500530049004D53615 E9475280F082880624B673A62A50F0C5680624B673A84254E 1A53850F06688070AB94C30F0A778065B095FB5A314E500F0 AA880638C4E0A80A15E020F0ABF807CBE5F694E0A6D77 | proactive SIM commands "SET UP MENU" indication |
| → | AT+MSTK=11,010302250082028281830100 | respond to proactive command "SET UP MENU" |
| ← | OK | |
| → | AT+MSTK=4,d30782020181900128 | send envelope command "MENU SELECTION" |
| ← | OK | |
| ← | +MSTK: 11, D02F0103042400020281820F10018065B095FB65E9665A62A 55B9A52360F06028053D66D880F0A03804E1A52A14ECB7EC D | proactive SIM commands "SELECT ITEM" indication |
| → | AT+MSTK=11,010304240082028281830111 | respond to proactive command "SELECT ITEM" |
| ← | OK | |
| ← | +MSTK: 14 | Session End indication |

10 Commands for Short Messages

10.1 PDU Introduction

| Octet 1 | | | | | | | | Octet 2 | | | | | | | | Octet sequence |
|---|------|-----|-----|--------|-----|-------|---|-----------------|-----|---|---|-----|---|---|---|--|
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| SCA Length = n | | | | | | | | 1 | TON | | | NPI | | | | 1 ~ 2 |
| SCA | | | | | | | | | | | | | | | | 3 ~ (1+n) |
| RP | UDHI | SRR | VPF | R D | MTI | TP-MR | | | | | | | | | | (2+n)~ (3+n) |
| DA – length = m | | | | | | | | 1 | TON | | | NPI | | | | (4+n)~(5+n) |
| Destination Address | | | | | | | | | | | | | | | | (6+n) ~ (6 + n + (m+1) / 2) |
| PID | | | | | | | | DCS | | | | | | | | (7 + n + (m+1) / 2) ~ (8 + n + (m+1) / 2) |
| VP (Valid Period) (length = s , s= 1 octet or 7 octet according to VPF value) | | | | | | | | | | | | | | | | (8 + n + (m+1) / 2)~ (8 + s + n + (m+1) / 2) |
| UDL (User Data Length) = x | | | | | | | | UD (user data) | | | | | | | | (9 + s + n + (m+1) / 2) ~ (10 + x + s + n + (m+1) / 2) |
| UD (user data) | | | | | | | | | | | | | | | | |

Figure 2:MO PDU format

| Octet 1 | | | | | | | | Octet 2 | | | | | | | | Octet sequence |
|-----------------------------------|------|-----|---|---|---|---------|-----|--------------------------|-----|---|---|-----|---|---|---|----------------|
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| SCA Length = n | | | | | | | | 1 | TON | | | NPI | | | 1 ~ 2 | |
| SCA (Service Center Address) | | | | | | | | | | | | | | | 3 ~ (1+n) | |
| R P | UDHI | SRI | | | | M MS | MTI | OA length = m | | | | | | | (2+n)~ (3+n) | |
| | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | |
| 1 | TON | | | | | NPI | | OA (Originating Address) | | | | | | | (4+n)~(5+n) | |
| OA (Originating Address) | | | | | | | | | | | | | | | (6+n) ~ (5 + n + (m+1) / 2) | |
| PID | | | | | | | | DCS | | | | | | | (6 + n + (m+1) / 2) ~ (7 + n + (m+1) / 2) | |
| SCTS (Service Center Time Stamp) | | | | | | | | | | | | | | | (8 + n + (m+1) / 2)~ (14 + s + n + (m+1) / 2) | |
| UDL (User Data Length) = x | | | | | | | | UD (user data) | | | | | | | (15 + x + n + (m+1) / 2)~(16 + x + n + (m+1) / 2) | |
| UD (user data) | | | | | | | | | | | | | | | | |

Figure 3:MT PDU format

Defined values:

| Parameter | Definition | Description |
|------------|----------------------------|--|
| MO | Mobile Originated | |
| MT | Mobile Terminated | |
| SCA Length | Length of SCA | SCA: Short message Center Address |
| TON | Type of Number | 000: unknown 001: international 010: national 111: reserved |
| NPI | Numbering Plan Identifier | 0000:unknown 0001:ISDN/phone number 1111:reserved |
| SCA | ShortMessageCenter Address | |
| MTI | Message Type Identifier | <div>Bit</div> <div>1 0</div> <div>Description</div> <div>11 Reserved</div> <div>10 SMS-STATUS REPORT (SC => MS)</div> <div>01 SMS-SUBMIT (MS => SC)</div> <div>00 SMS-DELIVER (SC => MS)</div> |
| RD | Reject Duplicate | |
| VPF | Validity Period Format | |
| SRR | Status Report Request | |



| | | |
|------|----------------------------|--|
| SRI | Status Report Indication | |
| UDHI | User Data Header Indicator | |
| RP | Reply Path | |

10.2 Short message Service:AT+CSMS

Set command selects messaging service <service>. It returns the types of messages supported by the MT: <mt> for mobile terminated messages, <mo> for mobile originated messages and <bm> for broadcast type messages. If chosen service is not supported by the MT (but is supported by the TA), final result code +CMS ERROR: <err> shall be returned.

Also read command returns supported message types along the current service setting.

Test command returns a list of all services supported by the TA.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------|--|
| Set Command | AT+CSMS=<service> | +CSMS:<mt>,<mo>,<bm> OK |
| Read Command | AT+CSMS? | +CSMS:<service>,<mt>,<mo>,<bm> OK |
| Test Command | AT+CSMS=? | +CSMS:(list of supported <service>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-----------------------------|-------|---|
| <service> | Short message service level | 0 | 3G TS 23.040 and 3G TS 23.041 |
| | | 1 | 3GTS 23.040 and 3G TS 23.041 (the requirement of <service> setting 1 is mentioned under corresponding command descriptions) |
| <mt> | SMS-MO (sent message) | 0 | type not supported |
| | | 1 | type supported |
| <mo> | SMS-MT (received message) | 0 | type not supported |
| | | 1 | type supported |
| <bm> | Cell broadcast message | 0 | type not supported |
| | | 1 | type supported |

10.3 Preferred Message Storage:AT+CPMS

Set command selects memory storages <mem1>, <mem2> and <mem3> to be used for reading, writing, etc.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------------------|---|
| Set Command | AT+CPMS=<mem1>[,<mem2>[,<mem3>]] | +CPMS:<used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK |
| Read Command | AT+CPMS? | +CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK |
| Test Command | AT+CPMS=? | +CPMS:(list of supported <mem1>s),(list of supported <mem2>s),(list of supported <mem3>) OK |

Defined values:

| Parameter | Definition | Value | Description |
|--------------------------|--|-------|---------------------|
| <mem1> | string type; memory from which messages are read and deleted The related commands are: AT+CMGL, AT+CMGR ,AT+CMGD | "SM" | SIM message storage |
| | | "ME" | ME message storage |
| <mem2> | string type; memory to which writing and sending operations are made The related commands are:AT+CMSS and AT+CMGW | "SM" | SIM message storage |
| | | "ME" | ME message storage |
| <mem3> | string type; memory to which received SMs are preferred to be stored (unless forwarded directly to TE; refer command New Message Indications +CNMI) | "SM" | SIM message storage |
| | | "ME" | ME message storage |
| <used1><used2><used3> | Number of messages currently in <mem1,2,3> | - | Integer type. |
| <total1><total2><total3> | total number of message locations in <mem1,2,3> | - | Integer type. |

Examples:



AT Command Set

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|--|---|
| → | AT+CPMS=? | |
| ← | +CPMS: ("SM"),("SM"),("SM") OK | |
| → | AT+CPMS? | The current preferred SM storage type |
| ← | +CPMS: "SM",8,50,"SM",8,50,"SM",8,50 OK | |
| → | AT+CPMS="SM","SM","SM" | set "SM" storage type for <mem1>, <mem2> and <mem3> |
| ← | OK | Note: only SM type is supported at present |

10.4 Service Center Address:AT+CSCA

Set command updates the SMSC address, through which mobile originated SMs are transmitted. In text mode, setting is used by send and write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into <pdu> parameter equals zero.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------------|-------------------------------|
| Set Command | AT+CSCA=<sca>[,<tosca>] | OK |
| Read Command | AT+CSCA? | +CSCA:<sca>,<tosca> OK |
| Test Command | AT+CSCA=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------------------|---------|--|
| <sca> | ShortMessage Service Center Address | - | String type, the format is defined by <tosca> |
| <tosca> | Type of sca, Integer type | 145 | ISDN / telephone numbering design, the world number |
| | | 129 | ISDN / telephone numbering design, the country / world is unknown. |
| | | 161 | ISDN / telephone numbering design, the country's number. |
| | | 128~255 | other values please refer to GSM 04.08 section 10.5.4.7 |

Examples:

| Command (→) | AT Sequences | Description |
|-------------|--------------|-------------|
|-------------|--------------|-------------|



AT Command Set

| /Response (←) | | |
|---------------|--------------------------------------|----------------------|
| → | AT+CSCA="+8613010314500",145 | Set the SCA number |
| ← | OK | |
| → | AT+CSCA? | Query the SCA number |
| ← | +CSCA:"+8613010314500",145 OK | |

10.5 Select SMS Message Format:AT+CMGF

Set command tells the TA, which input and output format of messages to use. <mode> indicates the format of messages used with send, list, read and write commands and unsolicited result codes resulting from received messages.

Mode can be either PDU mode (entire TP data units used) or text mode (headers and body of the messages given as separate parameters). Text mode uses the value of parameter <chset> specified by command Select TE Character Set +CSCS to inform the character set to be used in the message body in the TA-TE interface.

Test command returns supported modes as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------|--|
| Set Command | AT+CMGF=[<mode>] | OK |
| Read Command | AT+CMGF? | +CMGF: <mode> OK |
| Test Command | AT+CMGF=? | +CMGF: (list of supported <mode>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|-------------|
| <mode> | the input, output,display format of the short messages | 0 | PDU,default |
| | | 1 | TEXT |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------------|--------------------------|
| → | AT+CMGF? | Query the current format |
| ← | +CMGF: 0 OK | PDU |



10.6 Set Text Mode Parameters:AT+CSMP

Set command is used to select values for additional parameters needed when SM is sent to the network or placed in storage when text format message mode is selected. It is possible to set the validity period starting from when the SM is received by the SMSC (<vp> is in range 0... 255) or define the absolute time of the validity period termination (<vp> is a string). The format of <vp> is given by <fo>. If TA supports the EVPF, rf. 3GPP TS 23.040 [3], it shall be given as a hexadecimal coded string (refer e.g. <pdu>) with double quotes.

NOTE: When storing a SMS-DELIVER from the TE to the preferred memory storage in text mode (refer command Write Message to Memory +CMGW), <vp> field can be used for <scts>.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------------------|---|
| Set Command | AT+CSMP=[<fo>[,<vp>[,<pid>[,<dc>]]]] | OK |
| Read Command | AT+CSMP? | +CSMP:<fo>,<vp>,<pid>,<dc> OK |
| Test Command | AT+CSMP=? | +CSMP: (list of supported <fo>s),(list of supported <vp>s), (list of supported <pid>s), (list of supported <dc>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------|-------|---|
| <fo> | First Octet | | Detailed information about <fo> (take SMS-SUBMIT for example) : |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



AT Command Set

| | | | RP:Reply Path RD:Reject Duplicate | | | | | | | | | | |
|-------------------|----------------------------------|----------|--|------------|--------------|-----------------|-----------------------|-------------------|----------------------------------|-------------------|-----------------------|-------------------|------------------------|
| <vp> | Valid Period | | <p>The foramat is defined by VPF in <fo>:</p> <ul style="list-style-type: none">If VPF=10(Binary),<vp> is in relative format,and the valid period is defined as follows: <table><tr><th><vp> value</th><th>Valid period</th></tr><tr><td>0-143(00 to 8F)</td><td>(vp + 1) x5 minutes</td></tr><tr><td>144-167(90 to A7)</td><td>12hours + (vp – 143)x30minutes</td></tr><tr><td>168-196(A8 to C)</td><td>(vp – 166) x 1 days</td></tr><tr><td>197-255(C5 to FF)</td><td>(vp – 192) x 1 weeks</td></tr></table> <ul style="list-style-type: none">If VPF=11(Binary),<vp> is in absolute format which is a 7-byte string. | <vp> value | Valid period | 0-143(00 to 8F) | (vp + 1) x5 minutes | 144-167(90 to A7) | 12hours + (vp – 143)x30minutes | 168-196(A8 to C) | (vp – 166) x 1 days | 197-255(C5 to FF) | (vp – 192) x 1 weeks |
| <vp> value | Valid period | | | | | | | | | | | | |
| 0-143(00 to 8F) | (vp + 1) x5 minutes | | | | | | | | | | | | |
| 144-167(90 to A7) | 12hours + (vp – 143)x30minutes | | | | | | | | | | | | |
| 168-196(A8 to C) | (vp – 166) x 1 days | | | | | | | | | | | | |
| 197-255(C5 to FF) | (vp – 192) x 1 weeks | | | | | | | | | | | | |
| <pid> | TP-protocol-id | <u>0</u> | Integer type ,please refer to GSM03.40 for details | | | | | | | | | | |
| <dc> | Data coding scheme | | <p>Integer type ,please refer to GSM03.38 for details, generally:</p> <p>0- 7bit GSM Default</p> <p>4- 8bit Data</p> <p>8- UCS2</p> | | | | | | | | | | |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|----------------------------------|-------------------|---|
| → | AT+CSMP=17,11,0,0 | <p>Set the TEXTParameters:</p> <p><fo>=17 (default) ,means:</p> <p>MTI=01 (binary) =SMS-SUBMIT,and</p> <p>VPF=10 (binary) = Relative format</p> <p><vp>=11,means the valid period is (11+1) x5minutes=1 hour</p> <p><dc>=0,means 7bit GSM Default</p> |
| ← | OK | |

10.7 Show text mode parameters:AT+CSDH

Set command controls whether detailed header information is shown in text mode result codes.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------|----------------------|
| Set Command | AT+CSDH=[<show>] | OK |
| Read Command | AT+CSDH? | +CSDH:<show> |
| | | OK |
| Test Command | AT+CSDH=? | +CSDH:<show> |
| | | OK |



AT Command Set

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|---|
| <show> | If the header information will be showed | 0 | do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dcsc>) nor <length>, <toda> or <tooa> in AT+CNMI, AT+CMGL, AT+CMGR result codes for SMS-DELIVERs and SMSSUBMITs in text mode; for SMS-COMMANDs in AT+CMGR result code, do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata> |
| | | 1 | Show the header informations mentioned above |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|--|
| → | AT+CSDH? | Query about <show> |
| ← | +CSDH: 0 OK | Header information is not displayed |
| → | AT+CMGR=8 | Read the SM whose index=8 |
| ← | +CMGR: "REC READ", "+86131*****56", "12/08/08,10:43:04+32" Good! OK | <fo>, <vp>, <pid>, <dcsc>, <sca>, <tosca> are not displayed |
| → | AT+CNMI=2,2,0,0,0 | Set that new message is routed to TE directly |
| ← | OK | |
| ← (URC) | +CMT: "+86131*****56", "12/08/08,11:09:23+32" Report | <fo>, <vp>, <pid> and <dcsc>, <sca>, <tosca> are not displayed |
| → | AT+CSDH=1 | Set <show>=1 |
| ← | OK | |
| → | AT+CMGR=8 | Read the SM whose index=8 |
| ← | +CMGR: "REC UNREAD", "+86131*****56", "12/08/08,10:43:04+32", 145,17,0,0, "+8613800210500", 145,4 Good! OK | <fo>, <vp>, <pid> and <dcsc>, <sca>, <tosca> are displayed |
| ← (URC) | +CMT: "+86131*****56", "12/08/08,11:05:45+32", 145,17,0,0, "+8613800210500", 145,7 weather | A new message is reported. <fo>, <vp>, <pid> and <dcsc>, <sca>, <tosca> are displayed |

10.10 New Message Indications to TE:AT+CNMI

Set command selects the procedure, how receiving of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in 3GPP TS 23.038.

When DTR signal is not available or the state of the signal is ignored (V.25ter command &D0), reliable message transfer can be assured by using +CNMA acknowledgement procedure.

<mode> controls the processing of unsolicited result codes specified within this command, <mt> sets the result code indication routing for SMS-DELIVERs, <bm> for CBMs and <ds> for SMS-STATUS-REPORTs. <bfr> defines the handling method for buffered result codes when <mode> 1, 2 or 3 is enabled. If ME does not support requested item (although TA does), final result code +CMS ERROR: <err> is returned.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]] | OK |
| Read Command | AT+CNMI? | +CNMI:<mode>,<mt>,<bm>,<ds>,<bfr> OK |
| Test Command | AT+CNMI=? | +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <mode> | controls the processing of unsolicited result codes specified within this command | 0 | Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications. |
| | | 1 | Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE. |
| | | 2 | Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE. |
| | | 3 | Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode |
| <mt> | the rules | 0 | No SMS-DELIVER indications are routed to the TE. |

| | | | | | | |
|--|--|---|---|--|--|---------|
| | for storing received SMSs depend on its data coding scheme | 1 | If SMS-DELIVER is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CMTI: <mem>,<index> | | | |
| | | 2 | SMS-DELIVERs (except class 2 messages and messages in the message waiting indication group (store message)) are routed directly to the TE using unsolicited result code in the following formats: +CMT:[<alpha>],<length><CR><LF><pdu> (PDU mode) or +CMT:<oa>, [<alpha>] , <scts> , <toa>, <fo>, <pid>,<dc>,<sca>,<tosca>,<length>]<CR><LF><data>(TEXT mode) If ME has its own display device then class 0 messages and messages in the message waiting indication group (discard message) may be copied to both ME display and to TE. In this case, ME shall send the acknowledgement to the network (refer table 2). Class 2 messages and messages in the message waiting indication group (store message) result in indication as defined in <mt>=1. | | | |
| | | 3 | Class 3 SMS-DELIVERs are routed directly to TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1 | | | |
| | | The relationship between SMS-DELIVER result code (+CMT, +CMTI) and +CNMA: | | | | |
| | | <mt> | n class or class 1 | class 0 or messagewaiting indication group (discard) | class 2 or messagewaiting indication group (store) | class 3 |
| | | 1 | +CMTI | [+CMTI ₁] | +MTI | +CMTI |
| 2 | +CMT & +CNMA ₃) | +CMT [& +CNMA ₂] | +CMTI | +CMT & +CNMA ₃) | | |
| 3 | +CMTI | [+CMTI ₁] | +CMTI | +CMT& +CNMA ₃) | | |
| 1) This result code is displayed if AT is the only display device; 2) When +CSMS <service>=1 and AT is the only display device for ME,+CNMA is needed for confirmation. 3) When +CSMS <service>=1, confirmation of +CNMA is needed in due time,otherwise,NO new SM will be routed to TE. | | | | | | |
| <bm> | the rules for storing received CBMs depend on its data coding scheme | 0 | No CBM indications are routed to the TE. | | | |
| | | 2 | New CBMs are routed directly to the TE using unsolicited result code: +CBM:<length><CR><LF><pdu> (PDU mode) or +CBM:<sn>,<mid>,<dc>,<page>,<pages><CR><LF><data> (TEXT mode) | | | |
| <ds> | Status report mode | 0 | 无SMS-STATUS-REPORTS发送到TE. | | | |
| | | 1 | SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS:<length><CR><LF><pdu>(PDU mode) or +CDS:<fo>,<mr>,<ra>,<tora>,<scts> , <dt>,<st>(TEXT mode) | | | |



AT Command Set

| | | |
|-------|---|---|
| <bfr> | 0 | TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1...3 is entered (OK response shall be given before flushing the codes). |
| | 1 | TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1...3 is entered. |

Examples:

| Command(→) /Response(←) | AT Sequences | Description |
|----------------------------|---|--|
| → | AT+CNMI=? | |
| ← | +CNMI: (0-3),(0-3),(0,2,3),(0-1),(0) OK | |
| → | AT+CNMI? | Query the the current value of parameters |
| ← | +CNMI: 2,1,0,0,0 OK | 2,1,0,0,0 is the current and default configuration |
| ← (URC) | +CMTI: "SM",1 | A new message has arrived,buffered in <mem1>,report the new message index indication via +CMTI to TE |
| → | AT+CNMI=2,2 Or AT+CNMI=2,2,0,0,0 | <mt>=2,i.e. new message is not buffered but routed to TE directly |
| ← | OK | |
| → | AT+CMGF? | |
| ← | +CMGF: 0 OK | PDU mode now |
| ← (URC) | +CMT: ,24 0891683108200105F0040D916831 29634152F6000021808041844223 04F7349B0D | A new PDU short message is in: +CMT: ,24 24-length of PUD,length of SCA is not included 08- Length of SCA (in bytes,TON/NPI is included) 91- TON/NPI 683108200105F0- SCA, 8613800210500. 04- First Octet of PDU 0D-length of OA 91683129634152F6- OA,8613923614256 00- PID (Protocol Identifier) 00- DCS (Data Coding Scheme) :7BIT GSM DEFAULT 21801341844223- SCTS (SM Center Time Stamp) ,08/31/2012,14:48:24,+8GMT 04- length of user data F7349B0D- 7BIT GSM DEFAULT decoded "will" |
| → | AT+CNMA | +CNMA is needed |
| ← | OK | |
| → | AT+CMGF=1 | Set to TEXT mode |
| ← | OK | |
| ← (URC) | +CMT: "+86131*****56",,"12/08/08,11:05:4 | Receive a new TEXT short message |



AT Command Set

| | | |
|---|--|-----------------|
| | 5+32",145,17,0,0,"+8613800210500",145,7 Will-go | |
| → | AT+CNMA | +CNMA is needed |
| ← | OK | |

10.11 New Message Acknowledgement to TA/ME:AT+CNMA

Execution command confirms correct reception of a new message (SMS-DELIVER or SMS-STATUS-REPORT) which is routed directly to the TE.

This acknowledgement command (causing ME to send RP-ACK to the network) shall be used when +CSMS parameter <service> equals 1. TA shall not send another +CMT or +CDS result code to TE before previous one is acknowledged.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|--|----------------------|
| Execution Command | TEXT mode (AT+CMGF=1) : AT+CNMA | OK |
| | PDU mode (AT+CMGF=0) : AT+CNMA[=<n>[,<length>[<CR>PDU is given <ctrl-Z/ESC>]]] | OK |
| Test Command | AT+CNMA=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------------|-------|---|
| <n> | The +CNMA application methods | 0 | command operates similarly as defined for the text mode |
| | | 1 | Send RP-ACK (or buffered result of receiving the correct code) |
| | | 2 | send RP-ERROR (if PDU is not given, ME/TA shall send SMS-DELIVER-REPORT with 3GPP TS 23.040 TP-FCS value set to 'FF' (unspecified error cause)) |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------|-------------------------------|
| | | Look up +CNMI for application |

10.12 Send a short message:AT+CMGS

Set command sends message from a TE to the network (SMS-SUBMIT). Message reference value <mr> is returned to the TE on successful message delivery.

Syntax:



AT Command Set

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | In TEXT mode (AT+CMGF=1): | +CMGS:<mr> |
| | AT+CMGS=<da>[,<toda>]<CR>text to send <CTRL-Z/ESC> | OK Note:< CTRL-Z > sends a message,<ESC> cancel sending |
| | | +CMS ERROR: <err> |
| | In PDU mode (AT+CMGF=0): | +CMGS:<mr> |
| | AT+CMGS=<length><CR>PDU to send <CTRL-Z/ESC> | OK |
| | | +CMS ERROR: <err> |
| Test Command | AT+CMGS=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---------------------|-------|--|
| <da> | Destination Address | - | 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in 3GPP TS 27.007); type of address given by <toda> |
| <toda> | Type of <da> | - | 3GPP TS 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43), default is 145, otherwise default is 129) |
| <length> | PDU length | - | integer type, SCA length is not included |
| <mr> | Message Reference | 0~255 | integer type, GSM 03.40 TP-Message-Reference |

Examples:

| Command (→) | AT Sequences | Description |
|---|-----------------------|---|
| /Response (←) | | |
| Send an english short message in TEXT mode: | | |
| → | AT+CMGF=1 | Set to TEXT mode |
| ← | OK | |
| → | AT+CSMP? | Query the parameters in TEXT mode |
| ← | +CSMP: 17,11,0,0 | Current <dcs>=0 (GSM 7 bit default) |
| | OK | |
| | AT+CSCS? | |
| | +CSCS: "IRA" | |
| | OK | |
| → | AT+CMGS="139****6785" | Send an English short message to a cell phone |



AT Command Set

| | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|-----|----|----|-----|----|----|----|----|----|------|-----|-----|--|----|-----|--|--|---|---|---|---|---|---|--|
| | >HI! <ctrl-Z > | | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CMGS: 108 OK | succeed,<mr>=108 | | | | | | | | | | | | | | | | | | | | | | | | |
| Send a chinese short message in TEXT mode: | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CSMP=17,167,0,8 | <dc>=8 (UCS2) | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | OK | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CMGS="1381671****" >611F8C22<ctrl-Z > | Send a Chinese SM to 1381671**** Note:in software,please input 611F8C22 in hexadecimal format,and send with <ctrl-Z > (0x001A in hexadecimal format) | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | +CMGS: 109 OK | succeed,<mr>=109 | | | | | | | | | | | | | | | | | | | | | | | | |
| Send an chinese short message in PDU mode: | | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CMGF=0 | Set to PDU mode | | | | | | | | | | | | | | | | | | | | | | | | |
| ← | OK | | | | | | | | | | | | | | | | | | | | | | | | | |
| → | AT+CMGS=19 >0011100D91683161450179F90008 0004611F8C22 [CTRL+Z] | 19- PDU length(SCA length is not included) 00- Means the SCA length is 0,in which case ,SCA is got from SIM card. This byte(00) is not include in PDU. 11- PDU first octet <table><tr><td>b7</td><td>b6</td><td>b5</td><td>b4</td><td>b3</td><td>b2</td><td>b1</td><td>b0</td></tr><tr><td>RP</td><td>UDHI</td><td>SRR</td><td colspan="2">VPF</td><td>RD</td><td colspan="2">MTI</td></tr><tr><td></td><td>0</td><td>0</td><td>1</td><td>0</td><td>0</td><td colspan="2">1</td></tr></table> 10- TP-MR,benchmark 0D- DA length 91683161450179F9- DA (Destination Address) ● Protocol Identifier (PID) 08- Data coding scheme (DCS),8 =UCS2 00- Valid Period (VP) 04- User Data length 611F8C22- Unicode for Chinese character | b7 | b6 | b5 | b4 | b3 | b2 | b1 | b0 | RP | UDHI | SRR | VPF | | RD | MTI | | | 0 | 0 | 1 | 0 | 0 | 1 | |
| b7 | b6 | b5 | b4 | b3 | b2 | b1 | b0 | | | | | | | | | | | | | | | | | | | |
| RP | UDHI | SRR | VPF | | RD | MTI | | | | | | | | | | | | | | | | | | | | |
| | 0 | 0 | 1 | 0 | 0 | 1 | | | | | | | | | | | | | | | | | | | | |
| ← | +CMGS: 110 OK | | | | | | | | | | | | | | | | | | | | | | | | | |

10.13 Send Message from Storage:AT+CMSS

Set command sends message with location value <index> from preferred message storage <mem2> to the network (SMS-SUBMIT or SMS-COMMAND). If new recipient address <da> is given for SMS-SUBMIT, it shall be used instead of the one stored with the message. Reference value <mr> is returned to the TE on successful message delivery.

Syntax:

| Type of Command | Command | Response |
|-----------------|---------------------------------|------------|
| Set Command | AT+CMSS=<index>[,<da>[,<toda>]] | +CMSS:<mr> |



AT Command Set

| | | |
|--------------|-----------|----|
| | | OK |
| Test Command | AT+CMSS=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------------------|-------|---|
| <index> | The index of the SM to be sent | - | integer type |
| <da> | Destination Address | - | 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in 3GPP TS 27.007); type of address given by <tda> |
| <tda> | Type of <da> | - | 3GPP TS 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43), default is 145, otherwise default is 129) |
| <mr> | Message Reference | 0~255 | integer type, GSM 03.40 TP-Message-Reference |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-------------------------|---|
| → | AT+CMSS=6 | Send previously stored message(index=6), the receiver's number is still the one which is stored in the message by +CMGW |
| ← | +CMSS: 11 OK | Sent successfully ,<mr>=11 |
| → | AT+CMSS=7,"136017*****" | Send previously stored message(index=7), and change the recipient number to 136017***** |
| ← | +CMSS: 12 OK | Sent successfully |

10.14 More message to send:AT+CMMS

Set command controls the continuity of SMS relay protocol link. When feature is enabled (and supported by network) multiple messages can be sent much faster as link is kept open.

Test command returns supported values as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------|----------------------|
| Set Command | AT+CMMS= [<n>] | OK |
| Read Command | AT+CMMS? | +CMMS: <n> |



AT Command Set

| | | |
|--------------|-----------|---|
| | | OK |
| Test Command | AT+CMMS=? | +CMMS: (list of supported <n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|---|
| <n> | - | 0 | disable |
| | | 1 | Keep enabled until the time between the response of the latest message send command (+CMGS, +CMSS, etc.) and the next send command exceeds 1-5 seconds (the exact value is up to ME implementation), then ME shall close the link and TA switches <n> automatically back to 0 |
| | | 2 | enable if the time between the response of the latest message send command and the next send command exceeds 1-5 seconds (the exact value is up to ME implementation), ME shall close the link but TA shall not switch automatically back to <n>=0 |

10.15 Write Message to Memory:AT+CMGW

Set command stores message (either SMS-DELIVER or SMS-SUBMIT) to memory storage <mem2>. Memory location <index> of the stored message is returned. By default message status will be set to 'stored unsent', but parameter <stat> allows also other status values to be given.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|----------------------|
| Set Command | In TEXT mode (AT+CMGF=1) : AT+CMGW[=<oa/da>,<tooa/toda>,<stat>]]]<CR>text is entered <ctrl-Z/ESC> | +CMGW: <index> |
| | | OK |
| | | +CMS ERROR: <err> |
| | In PDU mode (AT+CMGF=0) : AT+CMGW=<length>,<stat>] <CR> PDU is given <ctrl-Z/ESC> | +CMGW: <index> |
| | | OK |
| | | +CMS ERROR: <err> |
| Test Command | AT+CMGW=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---------------------|-------|---|
| <da> | Destination Address | - | 3GPP TS 23.040 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default |



AT Command Set

| | | | |
|----------|---------------------|------------|---|
| | | | alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in 3GPP TS 27.007); type of address given by <tda> |
| <tda> | Type of <da> | - | 3GPP TS 24.011 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43), default is 145, otherwise default is 129) |
| <oa> | Originating Address | - | 3GPP TS 23.040 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM 7 bit default alphabet characters) are converted to characters of the currently selected TE character set (refer command +CSCS in TS 07.07); type of address given by <toa> |
| <toa> | Type of <oa> | - | 3GPP TS 24.011 TP-Originating-Address Type-of-Address octet in integer format |
| <length> | PDU length | - | integer type, SCA length is not included |
| <stat> | Message state | REC UNREAD | received unread message (in TEXT mode, i.e. +CMGF=1) |
| | | REC READ | received read message (in TEXT mode, i.e. +CMGF=1) |
| | | STO UNSENT | stored unsent message (in TEXT mode, i.e. +CMGF=1) |
| | | STO SENT | stored sent message (in TEXT mode, i.e. +CMGF=1) |
| | | 0 | received unread message (in PDU mode, i.e. +CMGF=0) |
| | | 1 | received read message (in PDU mode, i.e. +CMGF=0) |
| | | 2 | stored unsent message (in PDU mode, i.e. +CMGF=0) |
| | | 3 | stored sent message (in PDU mode, i.e. +CMGF=0) |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|-------------------------------------|--|---|
| Store a short message in TEXT mode: | | |
| | AT+CMGF=1 | |
| | OK | |
| | AT+CMGW="139****6785" >HII!<ctrl-Z > | |
| | +CMGW: 6 OK | index=6, means this message is stored in location 6 |
| Store a short message in PDU mode: | | |
| → | AT+CMGF=0 | |
| ← | OK | |
| → | AT+CMGW=19 >0011100D91683161450179F900080004611F8 C22 [CTRL+Z] | 683161450179F9-detection address, 8613165410979 |



AT Command Set

| | | |
|---|----------|--|
| ← | +CMGW: 7 | index=7,means this message is stored in location 7 |
| | OK | |

10.16 Read a short message:AT+CMGR

Set command returns message with location value <index> from message storage <mem1> to the TE. About text mode parameters in italics, refer command Show Text Mode Parameters +CSDH. If status of the message is 'received unread', status in the storage changes to 'received read'.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------------|--|
| Set Command | AT+CMGR=<index> | In PDU mode (AT+CMGF=0) ,Response: +CMGR:<stat>,[<alpha>],<length><CR><LF><pdu> OK |
| | | In TEXT mode (AT+CMGF=1) : for SMS-DELIVER,response: +CMGR:<stat>,<oa>,[<alpha>],<scts>,[<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data> OK |
| | | for SMS-SUBMIT,response: +CMGR:<stat>,<da>,[<alpha>],[<toda>,<fo>,<pid>,<dcs>,<vp>],<sca>,<tosca>,<length>]<CR><LF><data> OK |
| | | for SMS-STATUS-REPORT,response: +CMGR:<stat>,<fo>,<mr>,[<ra>],[<tora>],<scts>,<dt>,<st> OK |
| | | for SMS-COMMAND,response: +CMGR:<stat>,<fo>,<ct>,[<pid>,<mn>],[<da>],[<toda>],<length><CR><LF><cdata>] OK |
| Test Command | AT+CMGR=? | OK |



Defined values:

| Parameter | Definition | Value | Description |
|--------------|--------------------------------------|-------|---|
| <da>,<oa> | | | Please refer to AT+CMGW |
| <toa>,<tooa> | | | |
| <length> | | | |
| <stat> | | | |
| <alpha> | Name of <da> or <oa> | | String type |
| <pid> | Protocol Identification | | Please refer to AT+CSMP |
| <fo> | PDU first octet | | |
| <vp> | Valid Period | | |
| <dc> | Data Coding System | | |
| <scts> | ShortMessageCenter Time Stamp | | GSM 03.40 TP-Service-Centre-Time-Stamp |
| <dt> | Discharge time | | GSM 03.40 TP-Discharge-Time |
| <st> | Status | | integer type,GSM 03.40 TP-Status |
| <ct> | Command Type | | integer type,GSM 03.40 TP-Command-Type,default value is 0 |
| <ra> | Receiver address | | String type,GSM 03.40 TP-Recipient-Address-Value |
| <cdata> | Response to SMS-COMMAND in TEXT mode | | GSM 03.40 TP-Command-Data |
| <mr> | Message Reference | | integer type, GSM 03.40 TP-Message-Reference |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|------------------------------|
| Read a message in TEXT mode: | | |
| → | AT+CMGF=1 | Set to TEXT mode |
| ← | OK | |
| → | AT+CSCS="GSM" | |
| ← | OK | |
| → | AT+CMGR=6 | Read a message whose index=6 |
| ← | +CMGR: "REC READ","+86139*****9","12/03/30,20:40:31+32" HI! | |
| Read a message in PDU mode: | | |
| → | AT+CMGF=0 | Set to PDU mode |
| ← | OK | |
| → | AT+CMGR=9 | Read a message whose index=9 |



| | | |
|---|--|--|
| ← | +CMGR: 0,,24 0891683108200105F0240D9168316145017 9F900082180904121102304611F8C22 OK | |
|---|--|--|

10.17 List messages:AT+CMGL

Set command returns messages with status value <stat> from message storage <mem1> to the TE. About text mode parameters in *italics*, refer command Show Text Mode Parameters +CSDH.

If status of the message is 'received unread', status in the storage changes to 'received read'.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------|---|
| Set Command | AT+CMGL=<stat> | In PDU mode (AT+CMGF=0) : |
| | | +CMGL:<index>,<stat>,<[alpha]>,<length><CR><LF><pdu><CR><LF>+CMGL:<index>,<stat>,<[alpha]>,<length><CR><LF><pdu>[...]] |
| | | OK |
| | | In TEXT mode (AT+CMGF=1) : |
| | | SMS-DELIVER or SMS-SUBMIT, Response: +CMGL:<index>,<stat>,<oa/da>,<[alpha]>,<[scts]>,<[tooa/toda>,<length><CR><LF><data><CR><LF>+CMGL:<index>,<stat>,<da/oa>,<[alpha]>,<[scts]>,<[tooa/toda>,<length><CR><LF><data>[...]] |
| | | OK |
| | | SMS-STATUS-REPORT,Response: +CMGL:<index>,<stat>,<fo>,<mr>,<[ra]>,<[tora>,<scts>,<dt>,<st>[<CR><LF>+CMGL:<index>,<stat>,<fo>,<mr>,<[ra]>,<[tora>,<scts>,<dt>,<st>[...]] |
| | | OK |
| | | To SMS-COMMAND,Response: +CMGL:<index>,<stat>,<fo>,<ct>[<CR><LF>+CMGL:<index>,<stat>,<fo>,<ct>[...]] |
| | | OK |



AT Command Set

| | | |
|--------------|--|--|
| Test Command | AT+CMGL=? | +CMGL: (list of supported <stat>s) OK |
| Note | All the values of <stat> in text mode must be capitalized and quoted in "". | |

Defined values:

| Parameter | Value | | Description |
|-----------|-----------------------------|---------------------|--|
| <stat> | in PDU mode (AT+CMGF=0) | <u>0</u> | received unread messages (i.e. new messages) |
| | | 1 | received read messages |
| | | 2 | stored unsent messages |
| | | 3 | stored sent messages |
| | | 4 | all messages |
| | in TEXT mode (AT+CMGF=1) | <u>"REC UNREAD"</u> | received unread messages (i.e. new messages) |
| | | "REC READ" | received read messages |
| | | "STO UNSENT" | stored unsent messages |
| | | "STO SENT" | stored sent messages |
| | | "ALL" | all messages |

Examples:

| Command(→) /Response(←) | AT Sequences | Description |
|-----------------------------------|---|----------------------------|
| List short messages in TEXT mode: | | |
| → | AT+CMGF=1 | Set to TEXT mode |
| ← | OK | |
| → | AT+CMGL=? | Query the scope of <stat>s |
| ← | +CMGL: "REC UNREAD","REC READ","STO UNSENT","STO SENT","ALL" OK | |
| → | AT+CMGL="ALL" | List all messages |
| List | +CMGL: 8,"REC READ","+8613162310263",,"12/08/08,10:43:04+32" hi +CMGL: 9,"REC READ","+8613162310263",,"12/08/09,14:12:01+32" aœ" OK | |
| List short messages in PDU mode: | | |
| → | AT+CMGF=0 | Set to PDU mode |



AT Command Set

| | | |
|---|--|-------------------|
| ← | OK | |
| → | AT+CMGL=? | |
| ← | +CMGL: (0-4) OK | |
| → | AT+CMGL=4 | List all messages |
| ← | +CMGL: 8,1,,24 0891683108200105F0240D91683161320162F3 00002180800134402304D7A2930A +CMGL: 9,1,,24 0891683108200105F0240D91683161320162F3 00082180904121102304611F8C22 OK | |

10.18 Delete message:AT+CMGD

Execution command deletes message from preferred message storage <mem1> location <index>. If <delflag> is present and not set to 0 then the ME shall ignore <index> and follow the rules for <delflag> shown below.

Test command shows the valid memory locations and optionally the supported values of <delflag>.

Syntax:

| Type of Command | Command | Possible response(s) | Description |
|-----------------|--|--|---|
| Set Command | AT+CMGD=<index> | OK | Delete message whose location is <index> |
| | AT+CMGD=<index>,<delflag> | OK | Delete all the messages whose state=<delflag> |
| Test Command | AT+CMGD=? | +CMGD:(list of supported <index>s),(list of supported <delflag>s) OK | |
| Note | When <delflag>=1,2,3,4,<index>shall be ignored | | |

Defined values:

| Parameters | Definition | Value | Description |
|------------|----------------------------|-------|--|
| <index> | SM location index | - | integer type |
| <delflag> | Delete flag, integer type. | 0 | delete the message specified in <index> |
| | | 1 | Delete all read messages from preferred message storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched |
| | | 2 | Delete all read messages from preferred message storage and sent mobile originated messages, leaving unread messages and |



AT Command Set

| | | | |
|--|--|---|---|
| | | | unsent mobile originated messages untouched |
| | | 3 | Delete all read messages from preferred message storage, sent and unsent mobile originated messages leaving unread messages untouched |
| | | 4 | Delete all messages from preferred message storage including unread messages |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------|-----------------------------------|
| → | AT+CPMS="SM" | Set storage type to SIM |
| ← | OK | |
| → | AT+CMGD=1 | Delete the message whose index =1 |
| ← | OK | |
| → | AT+CMGD=1,4 | All short messages are deleted |
| ← | OK | |

10.19 Select Cell Broadcast Message Types:AT+CSCB

Set command selects which types of CBMs are to be received by the ME.

Syntax:

| Type of Command | Command | Response |
|-----------------|------------------------------------|--|
| Set Command | AT+CSCB=[<mode>[,<mids>[,<dcss>]]] | OK |
| Read Command | AT+CSCB? | +CSCB:<mode>,<mids>,<dcss> OK |
| Test Command | AT+CSCB=? | +CSCB: (list of supported <mode>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|--|
| <mode> | | 0 | message types specified in <mids> and <dcss> are accepted |
| | | 1 | message types specified in <mids> and <dcss> are not accepted |
| <mids> | all different possible combinations of CBM message identifiers | - | String type; default is empty string, e.g. "0,1,5,320-478,922" |
| <dcss> | all different possible combinations of CBM data coding schemes | - | String type; default is empty string, e.g. "0-3,5" |



10.20 Reset Memory Full Status:AT*RSTMemFull

Execution command resets memory full status. The PS will send the network an indication that there is enough memory to send at least one SMS. The network can start forwarding the pending messages that were held due to memory full status.

Syntax:

| Type of Command | Command | Response |
|-----------------|-----------------|------------------------|
| Set Command | AT*RSTMemFull | OK |
| Test Command | AT*RSTMemFull=? | *RSTMemFull: OK |

10.21 (URC)SMS Status Change Indication:+MMSG

AirM2M extended AT command to indicate an Short Messages Storage status change.

Syntax:

| URC |
|------------------------------|
| +MMSG: <smsReady>, <smsFull> |

Defined values:

| Parameter | Definition | Value | Description |
|------------|--|-------|-------------|
| <smsReady> | indicates if the SIM is ready for SMS | 0 | not ready |
| | | 1 | ready |
| <smsFull> | indicates if the memory capacity of SIM for SMS has been reached | 0 | not reached |
| | | 1 | reached |

10.22 Short Message Service Failure Result Code:CMS ERROR:<err>

Final result code +CMS ERROR: <err> indicates an error related to mobile equipment or network. The operation is similar to ERROR result code. None of the following commands in the same command line is executed. Neither ERROR nor OK result code shall be returned. ERROR is returned normally when error is related to syntax or invalid parameters.

| <err> code | Definition |
|------------|------------------------------|
| 300 | ME failure |
| 301 | Reserved SMS operation of ME |
| 302 | operation not allow |



AT Command Set

| | |
|-----|---|
| 303 | operation not support |
| 304 | Invalid parameters of PDU mode |
| 305 | Invalid parameters of Text mode |
| 310 | need SIM card PIN number |
| 311 | need PH-SIM card PIN number |
| 312 | SIM failure |
| 313 | SIM busy |
| 314 | SIM error |
| 315 | need SIM card PUK |
| 316 | need SIM card PIN2 |
| 317 | need SIM card PUK2 |
| 318 | Memory failure |
| 320 | need SIM card PIN number |
| 321 | Invalid memory index |
| 322 | Memory full |
| 323 | Invalid Parameter |
| 324 | Invalid inputting format |
| 330 | SMSC address unknown |
| 331 | no network service |
| 332 | SMSC address unknown |
| 340 | No confirmation is expected in the + CNMA |
| 500 | Unknown error |
| 511 | Reserved value within 256 ~ 511 |
| 512 | Vary according to the manufacturer |
| 513 | Unread record in SIM |
| 514 | CB unknown error |
| 515 | PS busy |
| 517 | SM not ready |
| 528 | Invalid(non-hexadecimal) character in PDU |
| 529 | PDU length wrong |
| 530 | invalid MTI |
| 531 | Invalid(non-hexadecimal) character in address |
| 532 | Invalid address |
| 533 | PDU length (UDL) wrong |
| 534 | SCA length wrong |
| 536 | Invalid first octet |
| 537 | Invalid type of Command |
| 538 | SRR bit is not set |
| 539 | SRR set |
| 540 | invalid User Data Header IE |
| 753 | CRSM Parameter lack |
| 754 | CRSM invalid command |
| 755 | CRSM invalid file |



AT Command Set

| | |
|-----|--|
| 756 | CRSM missing P Parameter |
| 757 | CRSM invalid P Parameter |
| 758 | CRSM command data lack |
| 759 | CRSM invalid character in command line |
| 765 | Invalid input |
| 766 | Mode not supported |
| 767 | Operation fail |
| 770 | SIM network refuse |
| 771 | Setting up call |
| 772 | SIM closed |
| 773 | SIM file not present |

11 Commands for Supplementary Services

11.1 Call Forwarding Number and Conditions:AT+CCFC

This command allows control of the call forwarding supplementary service according to 3GPP TS 22.082. Registration, erasure, activation, deactivation, and status query are supported. When querying the status of a network service (<mode>=2) the response line for 'not active' case (<status>=0) should be returned only if service is not active for any <class>.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|---|
| Set Command | AT+CCFC=<reason>,<mode>[,<number>[,<type>[,<class>[,<subaddr>[,<atype>[,<time>]]]]]] | If <mode>≠2 and the command is executed successfully: OK |
| | | If <mode> = 2 and the command is executed successfully (In which case <reason>= 0 ~3,in other words ,when <mode>=2,<reason> is not allowed to be 4 or 5) : <ul style="list-style-type: none"> For a SIM card whose call forwarding service has been activated: +CCFC: <status>,<class1>[,<number>,<type>[,<subaddr>,<satype>[,<time>]]][<CR><LF>+CCFC: <status>,<class2>[,<number>,<type>[,<subaddr>,<satype>[,<time>]]][...] OK For a SIM card whose call forwarding service has not been activated: +CCFC: <status> , <class> OK |
| Test Command | AT+CCFC=? | +CCFC: (list of supported<reason>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------------------|-------|--|
| <reason> | The reason for call forwarding | 0 | unconditional |
| | | 1 | mobile busy |
| | | 2 | no reply |
| | | 3 | not reachable |
| | | 4 | all call forwarding (please refer to 3GPP TS 22.030) |



AT Command Set

| | | | |
|-----------|--|-------|---|
| | | 5 | all conditional call forwarding (please refer to 3GPP TS 22.030) |
| <mode> | The state of call forwarding | 0 | disable |
| | | 1 | enable |
| | | 2 | query status |
| | | 3 | registration |
| | | 4 | erasure |
| <number> | phone number of forwarding address in format specified by <type> | | |
| <type> | The type of <number> | | defined by <type> in AT+CSTA default 145 when dialling string includes international access code character "+", otherwise 129 |
| <class> | is a sum of integers each representing a class of service | 1 | voice (telephony) |
| | | 2 | data (refers to all bearer services; with <mode>=2 this may refer only to some bearer service if TA does not support values 16, 32, 64 and 128) |
| | | 4 | fax (facsimile services) |
| | | 7 | All of the above 3 |
| <subaddr> | subaddress of format specified by <satype> | | String type |
| <satype> | type of <subaddr> | | integer type |
| <time> | Waiting time | 1~30s | when "no reply" is enabled or queried, this gives the time in seconds to wait before call is forwarded,default value is 20 |
| <status> | Status | 0 | not active |
| | | 1 | active |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|----------------------|--|
| | AT+CCFC=? | Query the scopt of value of <reason> |
| | +CCFC: (0,1,2,3,4,5) | <reason>=0,1,2,3,4,5 |
| | OK | |
| → | AT+CCFC=0,2 | Query the current states of unconditionalcall forwarding supplementary services |
| ← | +CCFC: 0,7 | <status>=0, not active <class>=7, all types of call forwarding supplementary services supported by module |
| | OK | |
| → | AT+CCFC=1,2 | Query the current states of mobile busy call forwarding supplementary services |
| ← | +CCFC: 0,1 | Call forwarding services for class 1/2/4 are not registered yet |



AT Command Set

| | | |
|---|--|--|
| | +CCFC: 0,2 +CCFC: 0,4 OK | |
| → | AT+CCFC=1,3,"1360*****7" | Set a mobile busy call forwarding to number 1360*****7 |
| ← | OK | |
| → | AT+CCFC=1,2 | Query the current states of mobile busy call forwarding supplementary services |
| ← | +CCFC: 1,1,"+861360*****7",145,, +CCFC: 0,2 +CCFC: 0,4 OK | <status>=1 and <class>=1 means mobile busy call forwarding service for voice has been registered/enabled |
| → | AT+CCFC=1,4 | Erasure of mobile busy call forwarding service |
| ← | OK | |
| → | AT+CCFC=1,2 | Query the current states of mobile busy call forwarding supplementary services again |
| ← | +CCFC: 0,1 +CCFC: 0,2 +CCFC: 0,4 OK | Call forwarding services for class 1 is erased |

11.2 Call Waiting:AT+CCWA

This command allows control of the Call Waiting supplementary service according to 3GPP TS 22.083. Activation,deactivation and status query are supported. When querying the status of a network service (<mode>=2) the responseline for 'not active' case (<status>=0) should be returned only if service is not active for any <class>. Parameter<n>is used to disable/enable the presentation of an unsolicited result code +CCWA:<number>,<type>,<class>[,<alpha>] to the TE when call waiting service is enabled. Command should be abortable when network isinterrogated.

The interaction of this command with other commands based on other GSM/UMTS supplementary services is describedin the GSM/UMTS standards.

Test command returns values supported as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------------|--|
| Set Command | AT+CCWA=<n>[,<mode>[,<class>]] | <mode>≠2,and the command is executed successfully: OK |



AT Command Set

| | | |
|--------------|---|--|
| | | <p><mode> = 2 and the command is executed successfully: +CCWA :<status>,<class1>[<CR><LF>+CCWA:<status>,<class2>[...]]</p> <p>OK</p> |
| Read Command | AT+CCWA? | <p>+CCWA: <n></p> <p>OK</p> |
| Test Command | AT+CCWA=? | <p>+CCWA: (list of supported <n>s)</p> <p>OK</p> |
| URC report | +CCWA: <number>,<type>,<class>[,<alpha>] | When AT+CCWA=1,1(Set call waiting on),a URC like this will be routed to TE if another call is coming in during call connection state. |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|----------|---|
| <n> | sets/shows the result code presentation status to the TE | <u>0</u> | disabled |
| | | 1 | enabled |
| <mode> | when <mode> parameter is not given, network is not interrogated | 0 | disabled |
| | | 1 | enabled |
| | | 2 | query status |
| <class> | a sum of integers each representing a class of information (default 7) | 1 | voice (telephony) |
| | | 2 | data |
| | | 4 | fax (facsimile services) |
| | | <u>7</u> | all (1+2+4) |
| <status> | status | 0 | Inactive |
| | | 1 | active |
| <number> | phone number of calling address in format specified by <type> | | string type |
| <type> | type of address octet | | integer format (refer TS 24.008 subclause 10.5.4.7) |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--------------|---|
| → | AT+CCWA=1,2 | Query the current state of call waiting |
| ← | +CCWA: 0,7 | The call waiting service is inactive |
| | OK | |
| → | AT+CCWA=1,1 | Set call waiting service to active |
| ← | OK | |
| → | AT+CCWA=1,2 | Query the current state of call waiting |
| ← | +CCWA: 1,1 | <status>=1 and <class>=1 means the call waiting |



AT Command Set

| | | |
|---------|-----------------------------|---------------------------------------|
| | OK | service for voice has been registered |
| → | ATD137*****98; | Originate a voice call |
| ← | OK | |
| ← (URC) | CONNECT | The call is connected |
| ← (URC) | +CCWA: "13601*****97",129,1 | Another call is coming in |

11.3 Call related supplementary services:AT+CHLD

This command allows the control of the following call related services:

- A call can be temporarily disconnected from the ME but the connection is retained by the network;
- Multiparty conversation (conference calls);
- The served subscriber who has two calls (one held and the other either active or alerting) can connect the other parties and release the served subscriber's own connection.

Calls can be put on hold, recovered, released, added to conversation, and transferred similarly as defined in 3GPP TS 22.030.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------|---------------------------------------|
| Set Command | AT+CHLD=<n> | OK |
| Test Command | AT+CHLD=? | +CHLD: (list of supported <n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------|-------|--|
| <n> | integer type | 0 | Terminate all held calls or UDUB (User Determined User Busy) for a waiting call |
| | | 1 | Terminate all active calls (if any) and accept the other call (waiting call or held call) |
| | | 1X | Terminate the active call number X (X= 1-7) |
| | | 2 | Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call |
| | | 2X | Place all active calls except call X (X= 1-7) on hold |
| | | 3 | Add the held call to the active calls |
| | | 4 | connects the two calls and disconnects the subscriber from both calls (ECT) |

Examples:

| Command (→) | AT Sequences | Description |
|-------------|--------------|-------------|
|-------------|--------------|-------------|



AT Command Set

| /Response (←) | | |
|---------------|---|--|
| → | AT+CCWA=1,1 | Set call waiting service to active |
| ← | OK | |
| → | ATD137*****98; | Make a voice call |
| ← | OK | |
| ← (URC) | CONNECT | The called party accepts the call |
| ← (URC) | +CCWA: "13601*****97",129,1 | Just now another call is coming in |
| → | AT+CHLD=2 | Hold the first call (+CLCCid=1),accept the second call(+CLCCid=2) |
| ← | OK | |
| → | AT+CLCC | List the current call |
| ← | +CLCC: 1,0,1,0,0," 137*****98",129 +CLCC: 2,1,0,0,0, " 13601*****97",128,"TEST" OK | For the first call(id=1),the third parameter <stat>=1 means this call is held For the second call(id=2),<stat>=0 means this call is in active state |
| → | AT+CHLD=21 | put the second call (+CLCC id=2) on hold, recover the first call(+CLCC id=1) |
| ← | OK | |
| → | AT+CHLD=3 | Set up multi-party call (the precondition is the multi-party call service has been opened for this SIM card) |
| ← | OK | |
| → | AT+CHLD=11 | Release the first call |
| ← | OK | |

11.4 Calling line identification presentation:AT+CLIP

This command refers to the GSM/UMTS supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the calling line identity (CLI) of the calling party when receiving a mobile terminated call. Set command enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network.

When the presentation of the CLI at the TE is enabled (and calling subscriber allows), +CLIP:<number>,<type> response is returned after every RING (or +CRING: <type>; refer subclause "Cellular result codes +CRC") result code sent from TA to TE. It is manufacturer specific if this response is used when normal voice call is answered.

Read command gives the status of <n>, and also triggers an interrogation of the provision status of the CLIP service according 3GPP TS 22.081 (given in <m>).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------|----------------------|
|-----------------|---------|----------------------|



AT Command Set

| | | |
|--------------|--|---|
| Set Command | AT+CLIP=<n> | OK |
| Read Command | AT+CLIP? | +CLIP:<n>,<m> OK |
| Test Command | AT+CLIP=? | +CLIP:(list of supported <n>s) OK |
| URC report | +CLIP: <number>,<type> [,<subaddr>,<satype>,<alphald>,<CLI validity>] | AT+CLIP=1, a URC like this will be returned after every RING (or +CRING: <type>; refer subclause "Cellular result codes +CRC") result code sent from TA to TE |

Defined values:

| Parameter | Definition | Value | Description |
|----------------|--|-------|---|
| <n> | parameter sets/shows the result code presentation status to the TE | 0 | disabled |
| | | 1 | enabled |
| <m> | parameter shows the subscriber CLIP service status in the network | 0 | CLIP not provisioned |
| | | 1 | CLIP provisioned |
| | | 2 | Unknown (e.g. no network, etc.) |
| <number> | phone number | | |
| <type> | type of phone number | | |
| <CLI validity> | Calling line validity | 0 | CLI valid |
| | | 1 | CLI has been withheld by the originator |
| | | 2 | CLI is not available due to interworking problems or limitations of originating network |

11.5 Calling line identification restriction:AT+CLIR

This command refers to CLIR-service according to 3GPP TS 22.081 that allows a calling subscriber to enable or disable the presentation of the CLI to the called party when originating a call.

Set command overrides the CLIR subscription (default is restricted or allowed) when temporary mode is provisioned as a default adjustment for all following outgoing calls. This adjustment can be revoked by using the opposite command.

If this command is used by a subscriber without provision of CLIR in permanent mode the network will act according 3GPP TS 22.081.

Read command gives the default adjustment for all outgoing calls (given in <n>), and also triggers an interrogation of the provision status of the CLIR service (given in <m>). Test command returns values supported as a compound



AT Command Set

value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------|--------------------------------------|
| Set Command | AT+CLIR=<n> | OK |
| Read Command | AT+CLIR? | +CLIR:<n>,<m> OK |
| Test Command | AT+CLIR=? | +CLIR:(list of supported <n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|--|
| <n> | parameter sets the adjustment for outgoing calls | 0 | presentation indicator is used according to the subscription of the CLIR service |
| | | 1 | CLIR invocation |
| | | 2 | CLIR suppression |
| <m> | parameter shows the subscriber CLIR service status in the network | 0 | CLIR not provisioned |
| | | 1 | CLIR provisioned in permanent mode |
| | | 2 | Unknown (e.g. no network, etc.) |
| | | 3 | CLIR temporary mode presentation restricted |
| | | 4 | CLIR temporary mode presentation allowed |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|---|------------------|--|
| What's displayed by the calling party (MT1) : | | |
| → | AT+CLIR=1 | CLIR is enabled |
| ← | OK | |
| → | AT+CLIR? | Query the calling line identification restriction state |
| ← | +CLIR: 0,1 OK | <m>=1,CLIR provisioned in permanent mode |
| → | ATD136****9087; | Make a call to MT2 |
| ← | OK | |
| What's displayed by called party (MT2) : | | |
| → | AT+CLIP=1 | calling line identity presentation URC is enabled |
| ← | OK | |
| → | AT+CLIP? | Query the calling line presentation status |
| ← | +CLIP: 1,1 | <n>=1 means that the +CLIP URC report is enabled <m>=1 means that CLIP is provisioned |



AT Command Set

| | | |
|---------|-------------------|---|
| | OK | |
| ← (URC) | RING | CLIR is enabled on MT1 side, so the phone number of MT1 can not be seen on MT2 side |
| | +CLIP: "",128,,,1 | |

11.6 Connected line identification presentation:AT+COLP

This command refers to the GSM/UMTS supplementary service COLP (Connected Line Identification Presentation) that enables a calling subscriber to get the connected line identity (COL) of the called party after setting up a mobile originated call. The command enables or disables the presentation of the COL at the TE. It has no effect on the execution of the supplementary service COLR in the network.

When enabled (and called subscriber allows), +COLP:<number>,<type>[,<subaddr>,<satype> [,<alpha>]] intermediate result code is returned from TA to TE before any +CR or V.250 responses. It is manufacturer specific if this response is used when normal voice call is established.

Read command gives the status of <n>, and also triggers an interrogation of the provision status of the COLP service according 3GPP TS 22.081 (given in <m>).

Test command returns values supported as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+COLP=<n> | OK |
| Read Command | AT+COLP? | +COLP:<n>,<m> OK |
| Test Command | AT+COLP=? | +COLP:(list of supported <n>s) OK |
| URC report | +COLP:<number>,<type>[,<subaddr>,<satype> [,<alpha>]] OK | <n>=1, a URC like this will be reported when a originating call is connected by the called party |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|-------------|
| <n> | parameter sets/shows the result code presentation status to the TE | 0 | disabled |
| | | 1 | enabled |



AT Command Set

| | | | |
|--|---|---|---------------------------------|
| <m> | parameter shows the subscriber COLP service status in the network | 0 | COLP not provisioned |
| | | 1 | COLP provisioned |
| | | 2 | Unknown (e.g. no network, etc.) |
| <number>, <type>,<subaddr>,<sat ype>,<alpha> | | | Please refer +CLIP |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|--|
| → | AT+COLP? | Make a query |
| ← | +COLP:0,0 OK | |
| → | AT+COLP=1 | Set <n>=1 to make URC report available |
| ← | OK | |
| → | AT+COLP? | Query again |
| ← | +COLP:1,0 OK | |
| → | ATD136****0987; | Originate a call |
| ← | +COLP: "136****0987",129,"","SAM" OK | 136****0987 accepts the call, then this 136 number is shown in +COLP URC. |
| → | AT+CHUP | Hang up the call |
| ← | OK | |
| → | ATD136****0987; | Originate a call again |
| | | The called party doesn't answer it Note: +COLP result code will only be routed to TE when the called party has answered the call, and OK will be returned after +CLOP report. |
| → | & | Input any character to terminate the ATD command |
| ← | NO CARRIER | Hang up the call |

11.7 Unstructured supplementary service data: AT+CUSD

This command allows control of the Unstructured Supplementary Service Data (USSD) according to 3GPP TS 22.090. Both network and mobile initiated operations are supported. Parameter <n> is used to disable/enable the presentation of an unsolicited result code (USSD response from the network, or network initiated operation) +CUSD:<m>[,<str>,<dcs>] to the TE. In addition, value <n>=2 is used to cancel an ongoing USSD session.

When <str> is given, a mobile initiated USSD-string or a response USSD-string to a network initiated operation is sent to the network. The response USSD-string from the network is returned in a subsequent unsolicited

+CUSD result code.

NOTE: In case of successful mobile initiated operation, TA implemented according to a version prior to 6 of this standard, waits the USSD response from the network and sends it to the TE before the final result code. This will block the AT command interface for the period of the operation. Such TA does not support <n> value 2.

The interaction of this command with other commands based on other GSM/UMTS supplementary services is described in the GSM/UMTS standards.

Test command returns values supported as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------------------|---------------------------------------|
| Set Command | AT+CUSD=[<n>[,<str>[,<dc>]]] | OK |
| Read Command | AT+CUSD? | +CUSD: <n> OK |
| Test Command | AT+CUSD=? | +CUSD: (list of supported <n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <n> | - | 0 | disable the result code presentation to the TE |
| | | 1 | enable the result code presentation to the TE |
| | | 2 | cancel session (not applicable to read command response) |
| <str> | string type USSD-string (when <str> parameter is not given, network is not interrogated) | - | - if <dc> indicates that 3GPP TS 23.038 [25] 7 bit default alphabet is used: <ul style="list-style-type: none"> if TE character set other than "HEX" (refer command Select TE Character Set +CSCS): ME/TA converts GSM alphabet into current TE character set according to rules of 3GPP TS 27.005 Annex A if TE character set is "HEX": ME/TA converts each 7-bit character of GSM alphabet into two IRA character long hexadecimal number (e.g. character П (GSM 23) is presented as 17 (IRA 49 and 55)) - if <dc> indicates that 8-bit data coding scheme is used: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)) |
| <dc> | Data Coding Scheme | - | GSM 03.38 Data Coding Scheme in integer format (default 0) |



AT Command Set

| | | | |
|-----|---|---|--|
| <m> | - | 0 | no further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation) |
| | | 1 | further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation) |
| | | 2 | USSD terminated by network |
| | | 3 | other local client has responded |
| | | 4 | operation not supported |
| | | 5 | network time out |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|--|--|
| → | AT+CSCS="GSM" | Set the dcs of the strings(within "") in any AT commands to GSM |
| ← | OK | |
| → | AT+CUSD=1,"*#21#",15 | Query the state of unconditional call forward |
| ← | +CCFC: 0,1 +CCFC: 0,2 +CCFC: 0,4 OK | Query results |
| → | AT+CSCS="UCS2" | Set the dcs of the strings(within "") in any AT commands to UCS2 |
| ← | OK | |
| → | AT+CUSD=1,"002A0023003200310 023",15 | Query the state of unconditional call forward |
| ← | +CCFC: 0,1 +CCFC: 0,2 +CCFC: 0,4 OK | Query results |

11.8 Preferred Operator List:AT+CPOL

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+CPOL=[<index>[,<format>[,<oper>[,<GSM_AcT>,<GSM_Compact_AcT>,<UTRAN_AcT>,<E-UTRAN_AcT>]]]] | OK |
| Read Command | AT+CPOL? | +CPOL: <index1>,<format>,<oper1>[,<GSM_AcT1>,<GSM_C |



AT Command Set

| | | |
|-----------------|-----------|---|
| | | compact_AcT1>,<UTRAN_AcT1>,<E-UTRAN_AcT1>][<CR><LF>+CPOL: <index2>,<format>,<oper2>[,<GSM_AcT2>,<GSM_C compact_AcT2>,<UTRAN_AcT2>,<E-UTRAN_AcT2>][. ..]] OK |
| Test Command | AT+CPOL=? | +CPOL:(list of supported <index>s), (list of supported <format>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-------------------|--|-------|------------------------------------|
| <indexn> | the order number of operator in the SIM/USIM preferred operator list | - | integer type |
| <format> | The format of <oper> | 0 | long format alphanumeric <oper> |
| | | 1 | short format alphanumeric <oper> |
| | | 2 | numeric <oper> |
| <opern> | operator | - | String type, in format of <format> |
| <GSM_AcT> | GSM access technology | 0 | access technology not selected |
| | | 1 | access technology selected |
| <GSM_Compact_AcT> | GSM compact access technology | 0 | access technology not selected |
| | | 1 | access technology selected |
| <UTRAN_AcT> | UTRAN access technology | 0 | access technology not selected |
| | | 1 | access technology selected |
| <E-UTRAN_AcT> | E-UTRAN access technology | 0 | access technology not selected |
| | | 1 | access technology selected |

11.9 Read operator names:AT+COPN

Execute command returns the list of operator names from the MT. Each operator code <numericn> that has an alphanumeric equivalent <alpha> in the MT memory shall be returned.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|---|
| Execution Command | AT+COPN | +COPN:<numeric1>,<alpha1>[<CR><LF>+COPN:<numeric2>,<alpha2>[...]] OK |



AT Command Set

| | | |
|--------------|-----------|----|
| Test Command | AT+COPN=? | OK |
|--------------|-----------|----|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------------------------|-------|--|
| <numeric> | operator in numeric format | - | string type (quoted in “ ”), see +COPS |
| <alphan> | operator in long alphanumeric format | - | string type (quoted in “ ”), see +COPS |

11.10 Supplementary service notifications:AT+CSSN

This command refers to supplementary service related network initiated notifications. The set command enables/disables the presentation of notification result codes from TA to TE.

When <n>=1 and a supplementary service notification is received after a mobile originated call setup, intermediate result code +CSSI: <code1>[,<index>] is sent to TE before any other MO call setup result codes presented in the present document or in V.250. When several different <code1>s are received from the network, each of them shall have its own +CSSI result code.

When <m>=1 and a supplementary service notification is received during a mobile terminated call setup or during a call, or when a forward check supplementary service notification is received, unsolicited result code +CSSU: <code2>[,<index>[,<number>,<type>[,<subaddr>,<satype>]]] is sent to TE. In case of MT call setup, result code is sent after every +CLIP result code (refer command "Calling line identification presentation +CLIP") and when several different <code2>s are received from the network, each of them shall have its own +CSSU result code.

Test command returns values supported as a compound value.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------|---|
| Set Command | AT+CSSN=[<n>[,<m>]] | OK |
| Read Command | AT+CSSN? | +CSSN: <n>,<m> OK |
| Test Command | AT+CSSN=? | +CSSN: (list of supported <n>s),(list of supported <m>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|-------------|
| <n> | parameter sets/shows the +CSSI result code presentation status to the TE | 0 | Disable |
| | | 1 | enable |



AT Command Set

| | | | |
|-----------|--|------|---|
| <m> | parameter sets/shows the +CSSU result code presentation status to the TE | 0 | Disable |
| | | 1 | enable |
| <index> | Index for Closed User Group | 0~10 | refer "Closed user group +CCUG" |
| <code1> | it is manufacturer specific | 0 | unconditional call forwarding is active |
| | | 1 | some of the conditional call forwardings are active |
| | | 2 | call has been forwarded |
| | | 3 | call is waiting |
| | | 4 | this is a CUG call (also <index> present) |
| | | 5 | outgoing calls are barred |
| | | 6 | incoming calls are barred |
| | | 7 | CLIR suppression rejected |
| | | 8 | call has been deflected |
| <code2> | it is manufacturer specific, | 0 | this is a forwarded call (ME call setup) |
| | | 1 | this is a CUG call (also <index> present) (ME call setup) |
| | | 2 | call has been put on hold (during a voice call) |
| | | 3 | call has been retrieved (during a voice call) |
| | | 4 | multiparty call entered (during a voice call) |
| | | 5 | call on hold has been released (this is not a SS notification) (during a voice call) |
| | | 6 | forward check SS message received (can be received whenever) |
| | | 7 | call is being connected (alerting) with the remote party in alerting state in explicit call transfer operation (during a voice call) |
| | | 8 | call has been connected with the other remote party in explicit call transfer operation (also number and subaddress parameters may be present) (during a voice call or ME call setup) |
| | | 9 | this is a deflected call (ME call setup) |
| | | 10 | additional incoming call forwarded |
| <number> | phone number of format specified by <type> | | string type |
| <type> | type of address octet | | in integer format (refer TS 24.008 subclause 10.5.4.7) |
| <subaddr> | subaddress of format specified by <satype> | | string type |
| <satype> | type of subaddress octet | | integer format (refer TS 24.008 subclause 10.5.4.8) |

12 Commands for Audio Control

Note: Commands in this chapter are not supported yet!

12.1 Mute Control:AT+CMUT

This command is used to enable and disable the uplink voice muting during a voice call.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------|--------------------------------------|
| Set Command | AT+CMUT=<n> | OK |
| Read Command | AT+CMUT? | +CMUT: <n> OK |
| Test Command | AT+CMUT=? | +CMUT: (list of supported<n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|----------------------|-------|-------------|
| <n> | Turn on/off the mute | 0 | mute off |
| | | 1 | mute on |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-----------------|---|
| → | ATD180****9710; | Make a voice call |
| ← | OK | |
| ←(URC) | CONNECT | The called party accept the call |
| → | AT+CMUT=1 | Set mute on |
| ← | OK | Then the called party can not hear the voice of the calling party |

12.2 Loudspeaker volume level:AT+CLVL

This command is used to select the volume of the internal loudspeaker/receiver/earpiece of the MT.



AT Command Set

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------|--|
| Set Command | AT+CLVL =< level > | OK |
| Read Command | AT+CLVL? | +CLVL:<level> OK |
| Test Command | AT+CLVL=? | +CLVL: (list of supported<level>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-----------------|-------|--|
| <level> | Level of volume | 0~100 | integer type value with manufacturer specific range (smallest value represents the lowest sound level) |

12.3 MIC Gain Control:AT+CMIC

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------|--|
| Set Command | AT+CMIC =<n> | OK |
| Read Command | AT+CMIC? | +CMIC:<n> OK |
| Test Command | AT+CMIC=? | +CMIC: (list of supported<n>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|---|
| <n> | MIC gain | 0~20 | integer type(smallest value represents the lowest gain) |

12.4 Handfree equipment control:AT+CHF

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------|-------------------------------|
| Set Command | AT+CHF=<ind>,<state> | OK |
| Read Command | AT+CHF? | +CHF: <ind>,<state> OK |



AT Command Set

| | | |
|--------------|----------|--|
| Test Command | AT+CHF=? | +CHF: (list of supported <ind>s),(list of supported<state>s) OK |
|--------------|----------|--|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------------------|-------|-------------------------------|
| <ind> | URC report enabled or disabled | 0 | URC report is enabled |
| | | 1 | URC report is disabled |
| <state> | Audio path | 0 | path 0 (RECEIVER) |
| | | 1 | path 1 (EARPIECE) |
| | | 2 | path 2 (LOUDSPEAKER) |
| | | 3 | path 3 (AUX_RECEIVER) |
| | | 4 | path 4 (AUX_LOUDSPEAKER) |
| | | 5 | path 5 (AUX_EARPIECE) |
| | | 6 | path6 (DUMMY_RECEIVER) |
| | | 7 | path7 (DUMMY_AUX_RECEIVER) |
| | | 8 | path8 (DUMMY_LOUDSPEAKER) |
| | | 9 | path9 (DUMMY_AUX_LOUDSPEAKER) |

12.5 Audio path switch:AT+CHFA

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------|---|
| Set Command | AT+CHFA=<n> | OK |
| Read Command | AT+CHFA? | +CHFA: <n> OK |
| Test Command | AT+CHFA=? | +CHFA: (0 = RECEIVER, 1 = EARPIECE, 2 = LOUDSPEAKER, 3 = AUX_RECEIVER, 4 = AUX_LOUDSPEAKER, 5 = AUX_EARPIECE, 6 = DUMMY_RECEIVER, 7 = DUMMY_AUX_RECEIVER, 8 = DUMMY_LOUDSPEAKER, 9 = DUMMY_AUX_LOUDSPEAKER) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|-------------------|
| <n> | Audio path | 0 | path 0 (RECEIVER) |
| | | 1 | path 1 (EARPIECE) |



AT Command Set

| | | | |
|--|--|---|-------------------------------|
| | | 2 | path 2 (LOUDSPEAKER) |
| | | 3 | path 3 (AUX_RECEIVER) |
| | | 4 | path 4 (AUX_LOUDSPEAKER) |
| | | 5 | path 5 (AUX_EARPIECE) |
| | | 6 | path6 (DUMMY_RECEIVER) |
| | | 7 | path7 (DUMMY_AUX_RECEIVER) |
| | | 8 | path8 (DUMMY_LOUDSPEAKER) |
| | | 9 | path9 (DUMMY_AUX_LOUDSPEAKER) |

12.6 Alert Sound Mode:AT+CALM

This command is used to select the general alert sound mode of the MT.

Syntax:

| Type of Command | Command | Response |
|-----------------|----------------|------------------------------------|
| Set Command | AT+CALM=<mode> | OK |
| Read Command | AT+ CALM? | + CALM:<mode> |
| | | OK |
| Test Command | AT+ CALM =? | + CALM: (list of supported<mode>s) |
| | | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------|-------|-------------|
| <mode> | Alert sound mode | 0 | Normal mode |
| | | 1 | Silent mode |

12.7 Ringer Sound Level:AT+CRSL

This command is used to select the incoming call ringer sound level of the MT.

Syntax:

| Type of Command | Command | Response |
|-----------------|-----------------|---------------|
| Set Command | AT+CRSL=<level> | OK |
| Read Command | AT+CRSL? | +CRSL:<level> |
| | | OK |



AT Command Set

| | | |
|--------------|-----------|--|
| Test Command | AT+CRSL=? | +CRSL: (list of supported<level>s) OK |
|--------------|-----------|--|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------|-------|--|
| <level> | Ring sound level | 0~100 | integer type value with manufacturer specific range (smallest value represents the lowest sound level) |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|---------------------|--|
| → | AT+CRSL? | Query the ring sound level |
| ← | +CRSL: 50 OK | The result is 50, which is the default configure |

12.8 Local DTMF Tone Generation: AT+CLDTMF

Set command generates local DTMF tone.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|---|
| Set Command | AT+CLDTMF=<n>[,<DTMF string>] | OK |
| Execution Command | AT+CLDTMF | Aborts any DTMF tone currently being played |
| Test Command | AT+CLDTMF=? | +CLDTMF: (list of supported <n>s),(0~9,A,B,C,D,*,#) OK |
| Note | How to know play time for each tone ,time interval and total play time? Default play time for each tone in <DTMF string> is 200ms, default time interval between each tone is 50ms. Take <DTMF string>"ABCDE" for example, there are 5 characters in the dtmf string, so the total play time for the dtmf string is $200 \times 5 + 50 \times 4 = 1200$ ms by default. If $n \times 100 > 1200$ ms: first, increase time interval until total play time = $n \times 100$ or until time interval = 550ms. If total play time is still less than $n \times 100$ when time interval = 550ms, increase play time for each tone to $(n \times 100 - 4 \times 550) / 5$ ms | |



AT Command Set

| | |
|--|--|
| | If $n \times 100 < 1200\text{ms}$: first decrease play time for each tone until total play time = $n \times 100$ or until play time for each tone = 100ms. If total play time is still more than 1200ms when play time for each tone = 100ms, decrease the tone play number. |
|--|--|

Defined values:

| Parameter | Definition | Value | Description |
|---------------|---|--------|--|
| <n> | duration of all DTMF tones in <DTMFstring> | 1~1000 | integer type, in unit of 100ms. |
| <DTMF string> | DTMF string | - | a string parameter(string should be included in quotation marks) which has a max length of 20 DTMF characters in the set of 0~9,A,B,C,D,*,# separated by commas. |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|-------------------------------------|--|
| → | AT+CLDTMF=100,"0,1,2,3,4,5,6,7,8,9" | Generate 0,1,2,3,4,5,6,7,8,9 totally 10 DTMF tone, and the total duration of play is 10s |
| ← | OK | |

12.9 DTMF Code Detection:AT+DDET

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT+DDET=<mode>[,<interval>][,<reportMode>][,<ssdet>] | OK |
| Read Command | AT+DDET? | +DDET: <mode>,<interval>,<reportMode>,<ssdet> OK |
| Test Command | AT+DDET=? | +DDET: (0,1),(0-10000),(0,1),(0,1) OK |
| URC Report | +DTMF:<key> | if <mode>=1 and <reportMode>=0 and a DTMF code is detected |
| | +DTMF:<key>,<lasttime> | if <mode>=1 and <reportMode>=1 and a DTMF code is detected |

Defined values:

| Parameter | Definition | Value | Description |
|------------|--|---------|-------------------------------------|
| <mode> | DTMF code detection is enabled or disabled | 0 | DTMF code detection is disabled |
| | | 1 | DTMF code detection is enabled |
| <interval> | the min interval between two | 0-10000 | the default value is 0. unit is ms. |



AT Command Set

| | | | |
|--------------|--|-----------------|--|
| | same key URC | | |
| <key> | DTMF key | 1-9,*,#,A,B,C,D | |
| <reportMode> | | 0 | key value reported only |
| | | 1 | key value and last time are reported, the last time is in ms |
| <lasttime> | duration of keytone playing | | unit is ms. |
| <ssdet> | single frequency sound detect function on off | 0 | switch off |
| | | 1 | switch on |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|-------------------------------|--|---|
| → | AT+ DDET=1 | Set DTMF decoding:enabled |
| ← | OK | |
| → | ATD1389000****; | Originate a call to 1389000**** |
| ← | OK | |
| ←(URC) | CONNECT | The call is answered by the called party |
| | +DTMF:1 +DTMF:2 +DTMF:3 +DTMF:4 +DTMF:5 +DTMF:6 +DTMF:7 +DTMF:8 +DTMF:9 +DTMF:0 +DTMF:* +DTMF:# | The called party inputs 1,2,3,4,5,6,7,8,9,*,# on the keyboard of the phone. |
| ←(URC) | NO CARRIER | The call is hung up |

12.10 TTS(Text To Speech): AT+CTTS

Syntax:

| Type of Command | Command | Response |
|-----------------|--|---------------------------|
| Set command | AT+CTTS=<mode>[,<text>] | OK |
| Read command | AT+CTTS? | +CTTS: <status> OK |
| Test command | AT+CTTS=? | OK |
| URC | when TTS play is over ,there will be such URC as follows: +CTTS:0 | |

Defined values:

| Parameters | Definition | Values | Description |
|------------|-----------------|--------|--|
| <mode> | | 0 | stop TTS playing |
| | | 1 | start to play synthetic speech, <text> is in UCS2 coding format |
| | | 2 | start to play synthetic speech, <text> is in ASCII(numerals and/or alphabets) or in GBK(Chinese charaters) coding format |
| <text> | text to be play | - | string type, must be quoted with "" |
| <status> | | 0 | idle mode |
| | | 1 | play mode |

Examples:

| command(→) / response(←) | AT Sequences | Description |
|-----------------------------|----------------------------------|--|
| → | AT+CTTS=2,"123, 欢迎你的到来" | play numerals and Chinese charaters Note: can not play English words yet. Like"bus",it will sounds like "b""u""s",not [b ^ s] |
| ← | OK | |
| → | AT+CTTS=1,"6B228FCE003100310033" | play “欢迎123” |
| ← | OK | |
| ←(URC) | +CTTS:0 | |
| → | AT+CTTS=0 | |
| ← | OK | |

12.11 Set parameters for TTS play: AT+CTTSPARAM

Syntax:

| Type | of | Command | Response |
|------|----|---------|----------|
|------|----|---------|----------|



AT Command Set

| Command | | |
|--------------|--|--|
| Set command | AT+CTTSPARAM=<volume>,<mode>,<pitch>,<speed>[,<channel>] | OK |
| Read command | AT+CTTSPARAM? | +CTTSPARAM:<volume>,<mode>,<pitch>,<speed>,<channel> OK |
| Test command | AT+CTTSPARAM=? | OK |

Defined values:

| Parameters | Definition | Values | Description |
|------------|------------------|--------|--|
| <volume> | TTS play volume | 0-100 | default value : 50 |
| <mode> | TTS play mode | 0 | auto read digit, and read digit based on number rule first |
| | | 1 | auto read digit, and read digit based on telegram rule first |
| | | 2 | read digit based on telegram rule |
| | | 3 | read digit based on number rule |
| <pitch> | TTS play pitch | 1-100 | default value : 50 |
| <speed> | TTS play speed | 1-100 | default value : 50 |
| <channel> | TTS play channel | 0 | main channel |
| | | 1 | aux channel |

12.12 Record and Play: AT+CREC

This command can be used to record sound and play the record.

Syntax:

| Type of Command | Command | Response |
|-----------------|--|---------------------------------|
| Set Command | AT+CREC=<mode>[,<id>]: | |
| | <mode>=1,start recording: | |
| | AT+CREC=1,<id>,<form>[,<time>,<location>,<quality>,<input path>] | OK |
| | <mode>=2,stop recording: | OK |
| | AT+CREC=2 | +CREC: <id>,<form>,<time>,<len> |
| | <mode>=3,delete a record file: | |
| | AT+CREC=3,<id> | OK |
| | <mode>=4,play a record file: | OK |



AT Command Set

| | | |
|--------------|--|----------------------------|
| | AT+CREC=4,<id>,<channel>,<level>,<repeat> | |
| | <mode>=5,stop playing a record file: | +CREC: 0 |
| | AT+CREC=5 | OK |
| | <mode>=6,read a record file: | +CREC: 6,<id>,<len> |
| | AT+CREC=6,<id>,<len>,<offset> | data |
| | | OK |
| | <mode>=7,check the information of a record file: | +CREC: 7,<id>,<len>,<form> |
| | AT+CREC=7[,<id>] | OK |
| | <mode>=8,check available space for recording: | +CREC: 8,<len> |
| Read command | AT+CREC=8 | OK |
| | <mode>=9,create a directory for recording: | |
| | AT+CREC=9,<location> | OK |
| Test Command | AT+CREC=? | +CREC: <status> |
| | | OK |
| Test Command | AT+CREC=? | +CREC: (1-n),(1-10) |
| | | OK |

Defined values:

| Parameter | Definition | Value | Description |
|-------------|--|---------|--------------------------------|
| <dl voice> | whether the record can be heard at local side in downlink path (earpiece,handset or loudspeak) Note: this parameter can only be effective in record play mode | 0 | downlink sound cannot be heard |
| | | 1 | downlink sound can be heard |
| <play mode> | the play mode of the record Note: this parameter can only be effective in record play mode | 0 | played only once |
| | | 1 | loop playback |
| <action> | the operation to the module | 0 | stop recording |
| | | 1 | start recording |
| | | 2 | start playing |
| | | 3 | stop playing |
| | | 4 | delete the record |
| <aud id> | id of the audio record | 0~4 | |
| <duration> | play time of the record Note: for a single play,this parameter defines | 1~50000 | in unit of ms(millisecond) |



AT Command Set

| | | | |
|--|--|--|--|
| | the play time of the play;for loop play, this parameter defines the duration of one single play. | | |
|--|--|--|--|

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|--|---|---|
| → | AT+AUDREC=? | testing command |
| ← | +AUDREC: (0-1),(0-1),(0-4),(0-4),(1-50000) OK | |
| sound recording: | | |
| → | AT+AUDREC=1,1,1,3,10000 | <dl voice>=1 (this parameter is of no use in recording action) <play mode>=1: cycle play <action>=1: start recording <aud id>=3: id <duration>=10000: recording time is 10s |
| ← | OK | sound recording begins |
| stop recording | | |
| 1: recording is normally ended | | |
| ← | +AUDREC: 1,10000 | 10s is due, the recording comes to an end |
| 2: AT command to early terminate the recording before the Set <duration> is due | | |
| → | AT+AUDREC=1,1,0,3,10000 | stop recording |
| ← | OK +AUDREC: 1,5960 | +AUDREC: 1,5960 5960 means the actual recording time |
| play record during a call (the sound can be heard at the opposite end) : | | |
| → | ATD138****9087; | initiate a call |
| ← | OK CONNECT | the call is accepted by the opposite end |
| → | AT+AUDREC=1,0,2,3,6000 | play the record for once,play tiem is 6s. Note: in single play, if the play time <duration> is longer than the actual recording time,the redundant part is null(silent); if <duration> is shorter than the actual recording time, the redundant recording is not played at all. |
| ← | OK | |
| ← | +AUDREC: 2,6000 | the URC is routed when play is over naturally |
| → | AT+AUDREC=1,1,2,3,5000 | cycle play the record, play time of per single play is 5s |
| ← | OK | |



AT Command Set

| | | |
|---|------------------------|--|
| → | AT+AUDREC=1,1,3,3,5000 | cycle play will not end by itself , so an AT command is needed to stop playing |
| ← | OK | |
| ← | +AUDREC: 2, 38000 | total play time is 38s |
| → | AT+AUDREC=0,1,4,3,5000 | delete the record whose aud_id=3 |
| ← | OK | |
| ← | +AUDREC:4,3 | this URC indicates that the deleting is a success |

12.13 Audio Loop Test: AT+AUDLB

This command is used to test the audio function by loopback.

Syntax:

| Type of Command | Command | Response |
|-----------------|--|---|
| Set Command | AT+AUDLB=<loopback>,<audiopath> | OK |
| Test Command | AT+AUDLB=? | +AUDLB:list of <loopback>s,list of <audiopath>s OK |
| Note | this command and AT+QTTS , can not be available at the same time. Please set the <loopback> to off before TTS is applied. | |

Defined values:

| Parameter | Definition | Value | Description |
|-------------|-----------------------|-------|--------------------------|
| <loopback> | loopback is on or off | 0 | off |
| | | 1 | on |
| <audiopath> | audio path | 0 | path 0 (RECEIVER) |
| | | 1 | path 1 (EARPIECE) |
| | | 2 | path 2 (LOUDSPEAKER) |
| | | 3 | path 3 (AUX_RECEIVER) |
| | | 4 | path 4 (AUX_LOUDSPEAKER) |

13 Commands for GPRS Services

13.1 GPRS mobile station Class:AT+CGCLASS

This command is not supported at present!

The Set command is used to set the ME to operate according to the specified mode of operation, rf. TS 23.060.

The Read command returns the mode of operation set by the TE, independent of the current serving cell capability and independent of the current serving cell Access Technology. If no value has been set by the TE previously, the return value shall be the highest mode of operation that can be supported by the MT.

The Test command is used for requesting information on the supported MT mode of operation.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------|--|
| Set Command | AT+CGCLASS=<class> | OK |
| Read Command | AT+CGCLASS? | +CGCLASS: <class> OK |
| Test Command | AT+CGCLASS=? | +CGCLASS: (list of supported <class>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--------------------------|-------|---|
| <class> | GPRSmobile station class | "B" | Class B,MT supports packet and circuit switch,but not at the same time. |

Examples:

| Command (→) / Response (←) | AT Sequences | Description |
|----------------------------|-----------------------|------------------------------|
| → | AT+CGCLASS=? | Query the supported <class>s |
| ← | +CGCLASS: ("B") OK | Only class B is supported |
| → | AT+CGCLASS? | Query current class |
| ← | +CGCLASS:"B" OK | |

13.2 GPRS attach and detach:AT+CGATT

The Set command is used to attach the ME to, or detach the ME from, the Packet Domain service. After the command has completed, the ME remains in V.250 command state. If the ME is already in the requested state, the command is ignored and the OK response is returned. If the requested state cannot be achieved, an ERROR or +CME ERROR response is returned. Extended error responses are enabled by the +CMEE command. Any active PDP contexts will be automatically deactivated when the attachment state changes to detached.

The Read command returns the current Packet Domain service state.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------|--|
| Set Command | AT+CGATT=<state> | OK |
| Read Command | AT+CGATT? | +CGATT: <state> OK |
| Test Command | AT+CGATT=? | +CGATT: (list of supported <state>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------|-------|-------------|
| <n> | GPRS attach state | 0 | Detach |
| | | 1 | Attach |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-------------------------|-----------------------------|
| → | AT+CGATT? | Check the GPRS attach state |
| ← | +CGATT: 1 OK | <state>=1,GPRS is attached |
| → | AT+CGATT=? | Query the range of <state> |
| ← | +CGATT: (0-1) OK | |

13.3 GPRS Context Definition:AT+CGDCONT

The Set command specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter, <cid>. The number of PDP contexts that may be in a defined state at the same time is

given by the range returned by the Test command.

A special form of the Set, +CGDCONT=<cid> causes the values for context number <cid> to become undefined.

The read command returns the current settings for each defined context.

The test command returns values supported as a compound value. If the MT supports several PDP types, <PDP_type>, the parameter value ranges for each <PDP_type> are returned on a separate line.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+CGDCONT=<cid>[,<PDP_type>[,<APN>[,<PDP_addr> [,<d_comp>[,<h_comp>]]]]] | OK |
| Read Command | AT+CGDCONT? | +CGDCONT: <cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>[<CR><LF>+CGDCONT:<cid>,<PDP_type>,<APN>,<PDP_addr>,<d_comp>,<h_comp>] OK |
| Test Command | AT+CGDCONT=? | +CGDCONT: (list of supported <cid>s),<PDP_type>,,,(list of supported <d_comp>s),(list of supported <h_comp>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|---------------------------|-------|---|
| <cid> | PDP Context Identifier | - | a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-ME interface and is used in other PDP context-related commands. The range of permitted values (minimum value = 1) is returned by the test form of the command. |
| <PDP_type> | Packet Data Protocol type | "IP" | a string parameter which specifies the type of packet data protocol |
| <APN> | Access Point Name | | a string parameter which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested. |
| <PDP_address> | PDP address, string type | | IP address in format of "<n>.<n>.<n>.<n>" in which <n>=0~255 If the value is "0.0.0.0" or omitted, then a value may be |



AT Command Set

| | | | |
|----------|----------------------|--|--|
| | | | provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. |
| <d_comp> | PDP data compression | | Controls PDP data compression (applicable for Subnetwork Dependent Convergence Protocol (SNDCP only) (3GPP TS 44.065) 0 –off(default) |
| <h_comp> | Header compression | | Controls the PDP header compression 3GPP TS 44.065, 3GPP TS 25.323 0 –off (default) |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|--|
| → | AT+CGDCONT? | Query the current PDP context definition |
| ← | OK | NO PDP context at all |
| → | AT+CGDCONT=1,"ip","cmnet" | Set a PDP context |
| ← | OK | |
| → | AT+CGDCONT? | Query again |
| ← | +CGDCONT: 1,"IP","cmnet","",0,0 OK | There is a PDP context,whose <cid>=1 |
| → | AT+CGDCONT=? | Query the scope of the parameters |
| ← | +CGDCONT: (1-10),"IP",,,(0,1),(0,1) OK | |

13.4 Display PDP Address:AT+CGPADDR

The Set command returns a list of PDP addresses for the specified context identifiers.

The Test command returns a list of defined <cid>s.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------|---|
| Set Command | AT+CGPADDR=[<cid>] | +CGPADDR:<cid>,<PDP_addr>[<CR><LF>+CGPADDR:<cid>,<PDP_addr>[...]] OK |
| Test Command | AT+CGPADDR=? | +CGPADDR: (list of supported <cid>s) OK |



AT Command Set

Defined values:

| Parameter | Definition | Value | Description |
|---------------|--------------------------------------|-------|---|
| <cid> | PDP Context Identifier, integer type | - | a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-ME interface and is used in other PDP context-related commands. The range of permitted values (minimum value = 1) is returned by the test form of the command. |
| <PDP_address> | PDP address, string type | | IP address in format of "<n>.<n>.<n>.<n>" in which <n>=0~255 If the value is "0.0.0.0" or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|---|---|
| → | AT+CGDCONT? | Query the current PDP context |
| ← | +CGDCONT: 1,"IP","cmnet","",0,0 OK | There is a PDP context, whose <cid>=1, and no IP address is allocated to the module |
| → | AT+CGACT? | Query activation mode of the PDP context |
| ← | +CGACT:1,0 OK | <state>=0, means the PDP context (<cid>=1) is not activated |
| → | AT+CGPADDR=1 | Query the PDP address (i.e. IP address) |
| ← | +CGPADDR: 1 OK | NO IP address exists |
| → | AT+CGACT=1,1 | Activate the PDP context whose <cid>=1 |
| ← | OK | |
| → | AT+CGACT? | Query activation mode of the PDP context |
| ← | +CGACT:1,1 OK | <state>=1, means the PDP context (<cid>=1) is activated |
| → | AT+CGPADDR=1 | Query the PDP address (i.e. IP address) |
| ← | +CGPADDR: 1,"010.085.222.016" OK | "010.085.222.016" is the allocated IP address by the network |
| → | AT+CGACT=0,1 | deactivate the PDP context whose <cid>=1 |
| ← | OK | |
| → | AT+CGACT? | Query activation mode of the PDP context |
| ← | +CGACT:1,0 OK | <state>=0, means the PDP context (<cid>=1) is deactivated |



| | | |
|---------|------------|--|
| ← (URC) | CALL READY | CALL READY is reported ,which means module is used for call services now |
|---------|------------|--|

13.5 PDP Context Activate or Deactivate:AT+CGACT

The Set command is used to activate or deactivate the specified PDP context (s). After the command has completed, the ME remains in V.250 command state.

If any PDP context is already in the requested state, the state for that context remains unchanged.

If the requested state for any specified context cannot be achieved, an ERROR or +CME ERROR response is returned. Extended error responses are enabled by the +CMEE command. If the ME is not PS attached when the activation form of the command is executed, the ME first performs a PS attach and then attempts to activate the specified contexts. If the attach fails then the ME responds with ERROR or, if extended error responses are enabled, with the appropriate failure-to-attach error message.

If no <cid>s are specified the activation form of the command activates all defined contexts.

If no <cid>s is specified the deactivation form of the command deactivates all active contexts.

The Read command returns the current activation states for all the defined PDP contexts.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------------------|---|
| Set Command | AT+CGACT=<state>,<cid>[,<cid>[,...]] | OK |
| Read Command | AT+CGACT? | +CGACT:<cid>,<state>[<CR><LF>+CGACT:<cid>,<state>[...]] OK |
| Test Command | AT+CGACT=? | +CGACT: (list of supported <state>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------------------|-------|---------------|
| <state> | the state of PDP context activation | 0 | Not activated |
| | | 1 | activated |
| <cid> | PDP Context Identifier | | integer type |

Examples:

| Command (→) / | AT Sequences | Description |
|---------------|--------------|-------------|
|---------------|--------------|-------------|



| Response (←) | |
|--------------|--------------------------|
| | Please refer to +CGPADDR |

13.6 Enter Data Mode:AT+CGDATA

Set command causes the ME to perform whatever actions are necessary to establish communication between the TE and the network using one or more Packet Domain PDP types. This may include performing a PS attach and one or more PDP context activations. If the <L2P> parameter value is unacceptable to the ME, the ME shall return an ERROR or +CME ERROR response. Otherwise, the ME issues the intermediate result code CONNECTS and enters V.250 online data state.

Commands following +CGDATA command in the AT command line shall not be processed by the ME.

The detailed behaviour after the online data state has been entered is dependent on the PDP type. It is described briefly in 3GPP TS 27.060 and in more detail in 3GPP TS 29.061 and the specifications for the relevant PDPs. PS attachment and PDP context activation procedures may take place prior to or during the PDP startup if they have not already been performed using the +CGATT and +CGACT commands.

If context activation takes place during the PDP startup, one or more <cid>s may be specified in order to provide the information needed for the context activation request(s).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|---|
| Set Command | AT+CGDATA[=<L2P>,[<cid>]] | CONNECT |
| Test Command | AT+CGDATA=? | +CGDATA: list of supported <L2P>s, list of supported <cid>s OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------------------|-------|--------------|
| <cid> | PDP Context Identifier | - | integer type |
| <L2P> | Layer 2 protocol | "PPP" | String type |

Examples:

| Command(→)/Response(←) | AT Sequences | Description |
|------------------------|-------------------------|-------------|
| → | AT+CGDATA=? | |
| ← | +CGDATA: "PPP", (1- 8) | |



AT Command Set

| | | |
|---|----------------------------|--|
| | OK | |
| → | AT+CGDCONT=1,"IP","UNINET" | |
| ← | OK | |
| → | AT+CGACT=1,1 | |
| ← | OK | |
| → | AT+CGDATA="PPP",1 | Set up a PPP connection between TE and network |
| ← | CONNECT | |

13.7 GPRS Network Registration Status:AT+CGREG

Set command controls the presentation of an unsolicited result code

+CGREG: <stat> when <n>=1 and there is a change in the ME's GPRS network registration status, or code +CGREG: <stat>[,<lac>,<ci>] when <n>=2 and there is a change of the network cell.

NOTE: If the GPRS ME also supports circuit mode services, the +CREG command and +CREG: result code applies to the registration status and location information for those services.

Read command returns the status of result code presentation and an integer <stat> which shows whether the network has currently indicated the registration of the MT. Location information elements <lac> and <ci> are returned only when <n>=2 and MT is registered in the network.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------------|--|
| Set Command | AT+CGREG=[<n>] | OK |
| Read Command | AT+CGREG? | +CGREG:<n>,<stat>[,<lac>,<ci>] OK |
| Test Command | AT+CGREG=? | +CGREG:(list of supported <n>s) OK |
| URC report | +CREG: <stat> | Set <n>=1,When the registration state changes a URC like this will be reported |
| | +CREG: <stat>[,<lac>,<ci>] | Set <n>=2,When the registration state changes a URC like this will be reported |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---------------------|-------|--|
| <n> | URC Reported status | 0 | disable network registration unsolicited result code |
| | | 1 | enable network registration unsolicited result code +CGREG: <stat> |



AT Command Set

| | | | |
|--------|----------------------------|---|--|
| | | 2 | enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>] |
| <stat> | Current registration state | 0 | not registered, ME is not currently searching an operator to register to The UE is in GMM state GMM-NULL or GMM-DEREGISTERED-INITIATED. The GPRS service is disabled, the UE is allowed to attach for GPRS if requested by the user. |
| | | 1 | registered, home network |
| | | 2 | not registered, but ME is currently trying to attach or searching an operator to register. |
| | | 3 | registration denied |
| | | 4 | unknown |
| | | 5 | registered, roaming |
| <lac> | Location Area Code | - | string type; two byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal) |
| <ci> | Cell Id | - | string type; two byte cell ID in hexadecimal format |

Examples:

| Command (→) /Response (←) | AT Sequences | Description |
|------------------------------|-------------------------|--|
| → | AT+CGREG? | Query the registration status |
| ← | +CGREG:0,1 OK | <n>=0,<stat>=1 |
| → | AT+CGREG=1 | Set <n>=1 |
| ← (URC) | +CGREG:1 | When the registration state changes a URC like this will be reported |
| → | AT+CGREG=2 | Set <n>=2 |
| ← (URC) | +CGREG: 5,"18be","9363" | When the registration state changes a URC like this will be reported |

13.8 Quality of Service Profile (Minimum acceptable):AT+CGQMIN

This command allows the TE to specify a minimum acceptable profile which is checked by the ME against the negotiated profile returned in the Activate PDP Context Accept message. The Set specifies a profile for the context identified by the (local) context identification parameter, <cid>. Since this is the same parameter that is used in the +CGDCONT and +CGDSCONT commands, the +CGQMIN command is effectively an extension to these commands. The QoS profile consists of a number of parameters, each of which may be set to a separate value.

A special form of the Set, +CGQMIN= <cid> causes the minimum acceptable profile for context number <cid> to become undefined. In this case no check is made against the negotiated profile.

The Read command returns the current settings for each defined context. The Test returns values supported as a compound value. If the ME supports several PDP types, the parameter value ranges for each PDP type are returned on



a separate line.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+CGQMIN=[<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>,<mean>]]]]]] | OK |
| Read Command | AT+CGQMIN? | +CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[<CR><LF>+CGQMIN: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]] OK |
| Test Command | AT+CGQMIN=? | +CGQMIN:<PDP_type>, (list of supported <precedence>s),(list of supported <delay>s),(list of supported <reliability>s) ,(list of supported <peak>s),(list of supported <mean>s) [...] OK |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|---|-------|--------------------------|
| <cid> | PDP Context Identifier | - | integer type |
| <precedence> | QOS precedence class | 0 | Network subscribed value |
| | | 1~3 | Other value |
| <delay> | QOS delay class | 0 | Network subscribed value |
| | | 1~4 | Other value |
| <reliability> | QOS reliability class | 0 | Network subscribed value |
| | | 1~5 | Other value |
| <peak> | QOSPeak throughput class (in octets per second) | 0 | Network subscribed value |
| | | 1~9 | Other value |
| <mean> | QOSMean throughput class | 0 | Network subscribed value |
| | | 1~18 | Other value |
| | | 31 | best effort |

13.9 Quality of Service Profile(requested):AT+CGQREQ

This command allows the TE to specify a Quality of Service Profile that is used when the ME sends an Activate PDP Context Request message to the network.

The Set command specifies a profile for the context identified by the local context identification parameter, <cid>. Since



AT Command Set

this is the same parameter that is used in the +CGDCONT and +CGDSCONT commands, the +CGQREQ command is effectively an extension to these commands.

The QoS profile consists of a number of parameters, each of which may be set to a separate value. A special form of the Set, +CGQREQ= <cid> causes the requested profile for context number <cid> to become undefined.

The Read command returns the current settings for each defined context.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT+CGQREQ=[<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]] | OK |
| Read Command | AT+CGQREQ? | +CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean> [<CR><LF>+CGQREQ: <cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]] OK |
| Test Command | AT+CGQREQ=? | +CGQREQ:<PDP_type>, (<precedence>s),(<delay>s),(<reliability>s),(<peak>s),(<mean>s) [...] OK |

Defined values: :

| Parameters | Definition | Value | Description |
|---------------|--|-------|--------------------------|
| <cid> | a numeric parameter which specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands). | - | integer type |
| <precedence> | a numeric parameter which specifies the precedence class | 0 | Network subscribed value |
| | | 1~4 | Other value |
| <delay> | a numeric parameter which specifies the delay class | 0 | Network subscribed value |
| | | 1~3 | Other value |
| <reliability> | a numeric parameter which specifies the reliability class | 0 | Network subscribed value |
| | | 1~5 | Other value |
| <peak> | a numeric parameter which specifies the peak throughput class | 0 | Network subscribed value |
| | | 1~9 | Other value |
| <mean> | a numeric parameter which specifies the mean throughput class | 0 | Network subscribed value |
| | | 1~18 | Other value |
| | | 31 | best effort |

13.10 Packet Domain Event Report:AT+CGEREP

Set command enables or disables sending of unsolicited result code +CGEV: XXX from ME to TE in the case of certain events occurring in the Packet Domain ME or the network.

<mode> controls the processing of unsolicited result codes specified within this command.

<bfr> controls the effect on buffered codes when <mode> 1 or 2 is entered.

If a setting is not supported by the ME, ERROR or +CME ERROR is returned.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------|---|
| Set Command | AT+CGEREP=<mode>[,<bfr>] | OK |
| Read Command | AT+CGEREP? | +CGEREP:<mode>,<bfr> OK |
| Test Command | AT+CGEREP=? | +CGEREP:(list of supported<mode>s) ,(list of supported <bfr>s) OK |
| URC | +CGEV: XXX | If <mode>=1,certain events occurring in the Packet Domain (ME or the network) will be reported in URC like this |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <mode> | URC report mode | 0 | buffer unsolicited result codes in the ME; if ME result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE. |
| | | 1 | discard unsolicited result codes when ME-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE |
| | | 2 | buffer unsolicited result codes in the ME when ME-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when ME-TE link becomes available; otherwise forward them directly to the TE |
| <bfr> | The method to deal with the buffered URCs | 0 | ME buffer of unsolicited result codes defined within this command is cleared when <mode>1 or 2 is entered |
| | | 1 | ME buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 or 2 is entered (OK response shall be given before flushing the codes). |

13.11 Packet Domain Events Report URC:+CGEV

Indication from MT to TE in the case of certain events occurring in the Packet Domain MT or the network.

Syntax:

URC



+CGEV: XXX

The following unsolicited result codes and the corresponding events are defined as follows.

Defined events:

| Events | Description |
|---|---|
| +CGEV: NW DEACT <PDP_type>, [<PDP_addr>], <cid> | <p>The network has forced a context deactivation. The <cid> that was used to activate the context is provided if known to the MT. The format of the parameters <PDP_type>, <PDP_addr> and <cid> are found in command +CGDCONT.</p> <p>Examples:</p> <p>+CGEV: "IP","10.0.0.0",1</p> <p>+CGEV: "PPP","",2</p> <p>+CGEV: NW DETACH</p> |
| +CGEV: ME DEACT <p_cid>, <cid> | <p>The mobile termination has forced a context deactivation. The associated <cid> is provided to the TE in addition to the PDN connection associated <p_cid>. The format of the parameters <p_cid> and <cid> are found in command +CGDSCONT</p> |
| +CGEV: ME ACT <p_cid>, <cid> | <p>The network has responded to an ME initiated Traffic Flow activation request with an EPS bearer activation or modification. The associated MT allocated context identifier <cid> is provided to the TE in addition to the PDN connection associated <p_cid>. The format of the parameters <p_cid> and <cid> are found in command +CGDSCONT</p> |
| +CGEV: ME ACT <PDP_type>, <PDP_addr>, <cid> | <p>The mobile termination has forced a context activation. The <cid> that was used to activate the context is provided if known to the MT. The format of the parameters <PDP_type>, <PDP_addr> and <cid> are found in command +CGDCONT</p> |
| +CGEV: NW ACT <PDP_type>, <PDP_addr>, <cid> | <p>The network has forced a context activation. The <cid> that was used to activate the context is provided if known to the MT. The format of the parameters <PDP_type>, <PDP_addr> and <cid> are found in command +CGDCONT.</p> |
| +CGEV: NW DETACH | <p>ME has detached from packet service domain. This implies that all active contexts have been deactivated. These are not reported separately.</p> |
| +CGEV: ME DETACH | <p>The mobile termination has forced a PS detach. This implies that all active contexts have been deactivated. These are not reported separately.</p> |
| +CGEV: EPS PDN ACT <cid> | <p>The network has activated a PDN connection. The format of the parameter <cid> is found in command +CGDCONT</p> |
| +CGEV: ME PDN ACT <cid> | <p>The mobile termination has activated a PDN connection.</p> |



AT Command Set

| | |
|--|---|
| | The format of the parameter <cid> is found in command +CGDCONT |
| +CGEV: EPS PDN DEACT <cid> | The network has deactivated a PDN connection. The associated <cid> is provided to the TE. The format of the parameter <cid> is found in command +CGDCONT. |
| +CGEV: ME PDN DEACT <cid> | The mobile termination has deactivated a PDN connection. The associated <cid> is provided to the TE. The format of the parameter <cid> is found in command +CGDCONT |
| +CGEV: EPS DED ACT <p_cid>, <cid> | The network has activated an EPS dedicated bearer. The associated MT allocated secondary context identifier <cid> is provided to the TE in addition to the PDN connection associated <p_cid>. The format of the parameters <p_cid> and <cid> are found in command +CGDSCONT |
| +CGEV: EPS DED DEACT <p_cid>, <cid> | The network has deactivated an EPS dedicated bearer. The associated <cid> is provided to the TE in addition to the PDN connection associated <p_cid>. The format of the parameters <p_cid> and <cid> are found in command +CGDSCONT |
| +CGEV: EPS ACT <cid> | The network has activated a PDP context. The associated <cid> is provided to the TE, its format is found in command +CGDCONT |
| +CGEV: EPS MODIFY <cid>, <change_reason> | <p>The network has modified EPS bearer context parameter(s). The associated <cid> is provided to the TE in addition of the change reason: TFT and/or QoS modification. The format of the parameter <cid> is found in command +CGDCONT.</p> <p><change_reason> integer type parameter indicates what kind of change occurred.</p> <p>1: TFT only changed 2: Qos only changed 3: Both TFT and QoS changed</p> |

Examples:

+CGEV: "IP", "10.0.0.0", 1

+CGEV: "PPP", "", 2

+CGEV: NW DETACH

13.12 Select Service for MO SMS:AT+CGSMS

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------|--|
| Set Command | AT+CGSMS=<service> | OK The Set command is used to specify the service or service preference that the ME will use to send MO SMS messages. |
| Read Command | AT+CGSMS? | +CGSMS:<service> OK |
| Test Command | AT+CGSMS=? | +CGSMS: (list of supported <service>s) OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|--|-------|--|
| <service> | a numeric parameter which indicates the service or service preference to be used | 0 | Packet Domain (GPRS) |
| | | 1 | circuit switched |
| | | 2 | Packet Domain preferred (use circuit switched if GPRS not available) |
| | | 3 | circuit switched preferred (use Packet Domain if circuit switched not available) |

13.13 Search IP via cid:AT+GETIP

Search IP via cid from local IP list.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------|--|
| Set Command | AT+GETIP=<cid> | +GETIP: <cid>,<ip>,<gateway>,<apn> OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------------|-------|-------------|
| <cid> | PDP context id | 1-8 | |
| <ip> | IPAddress | | |
| <gateway> | gateway address | | |
| <apn> | access point name | | |

13.14 Send Data through Specified PS Channel:AT*TGSINK

Private AT command,used to send the data through the specified PS data channel identified by cid.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT*TGSINK=<cid>[,<PacketSize>[,<PacketCount>]] | OK |
| Test Command | AT*TGSINK=? | *TGSINK: (range of supported <cid>s),(range of <PacketSize>),(range of <PacketCount>) OK |

Defined values:

| Parameters | Definition | Value | Description |
|---------------|------------|---------|-------------|
| <cid> | | 1-8 | |
| <PacketSize> | | 0-10000 | |
| <PacketCount> | | 1-20 | |

13.15 Send Data through Activated PS Channel:AT+CGSEND

Private AT command,used to send the data through current activated PS data channel.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------|---|
| Set Command | AT+CGSEND=<datalen> | OK |
| Test Command | AT+CGSEND=? | +CGSEND: (range of <datalen>) OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|---------------------|---------|-------------|
| <datalen> | length of sent data | 0-20000 | unit: bytes |

13.16 Put TA into a Particular Mode of Operation:AT+FCLASS

This command puts the TA into a particular mode of operation (data, fax, voice etc).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------|-----------------------------------|
| Set Command | AT+FCLASS=<n> | OK |
| Read Command | AT+FCLASS? | +FCLASS:<n> OK |
| Test Command | AT+FCLASS=? | +FCLASS: (range of <n>) OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|----------------|-------|-------------------------|
| <n> | operation mode | 0 | data |
| | | 1 | fax class 1 (TIA 578 A) |

13.17 Add Authentication to a PDP Context:AT*AUTHREQ

This proprietary AT command is used to requests to add authentication parameters to a defined PDP context. The command must be sent after the PDP context was defined and before the PDP context is activated. The authentication parameters will be sent to the GGSN in a protocol configuration information entry, when PDP context is activated.

In case authentication parameters are already defined for this PDP context the new authentication parameters will replace the existing parameters. Set authentication type to none will delete authentication parameters defined for this PDP context.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT*AUTHREQ=<cid>,<type>[,<UserName>[,<Password>]] | OK |
| Test Command | AT*AUTHREQ=? | *AUTHREQ: <cid>,<type>(0-None;1-PAP;2-CHAP),<UserName>,<Password> |



AT Command Set

| | | |
|--|--|----|
| | | OK |
|--|--|----|

Defined values:

| Parameters | Definition | Value | Description |
|------------|--|-------|--|
| <cid> | as <cid> defined in +CGDCONT | | |
| <type> | Authentication Protocol type,a numeric parameter which specifies the type of authentication data protocol | 0 | NONE |
| | | 1 | PAP (Password Authentication Protocol) |
| | | 2 | CHAP (Challenge Handshake Authentication Protocol) |
| <UserName> | a string parameter that specifies a user name added in PPP authentication packet and sent to server for authentication | | |
| <Password> | a string parameter that specifies a password added in PPP authentication packet and sent to server for authentication | | |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|------------------------------|-------------|
| → | AT*AUTHREQ=1,1,AirM2M,123456 | |
| ← | OK | |

13.18 Add Authentication to LTE Default Bearer:AT*CGDFAUTH

This proprietary AT command is used to requests to add authentication parameters to LTE default bearer.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT*CGDFAUTH=<mode>,<auth_prot>[,<userid>[,<password>]] | OK |
| Test Command | AT*CGDFAUTH=? | *CGDFAUTH: <auth_prot>(0-None;1-PAP;2-CHAP),<UserName>,<Password> OK |



13.19 Failure Cause Code for PDP Activation:AT+PEER

Requests the failure cause code for the most recently failed PDP context activate.

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------|---------------------------|
| Set Command | AT+PEER | +PEER: <information text> |
| | | OK |
| Test Command | AT+PEER=? | OK |

14 Commands for Embeded TCPIP Protocol

14.1 Enable multi-connection mode:AT+CIPMUX

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|----------------------|
| Set Command | AT+CIPMUX=<n> | OK |
| Read Command | AT+CIPMUX? | +CIPMUX: <n> OK |
| Test Command | AT+CIPMUX=? | +CIPMUX: (0,1) OK |
| Note | <ul style="list-style-type: none"> Only in IP initial state of single connection mode,AT+CIPMUX=1 can be set; Only in multi connection mode and all GPRS connections are shut,AT+CIPMUX=0 can be set | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------------|-------|-----------------------------|
| <n> | multi connection switch | 0 | single connection (default) |
| | | 1 | multi connection |

14.2 Start Task and Set APN,USER NAME,PASSWORD:AT+CSTT

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|---|
| Set Command | AT+CSTT=<apn>,<user name>,<password> | OK |
| Execution command | AT+CSTT | OK |
| Read Command | AT+CSTT? | +CSTT: <apn>,<user name>,<password> OK |
| Test Command | AT+CSTT=? | +CSTT: "APN","USER","PWD" OK |
| Note | The Set command and Execution command will respond OK only in the state of IP INITIAL,then the state will be changed to IP START after OK response. | |



AT Command Set

| | |
|--|--|
| | The default APN for the Execution command is CMNET |
|--|--|

Defined values:

| Parameter | Definition | Value | Description |
|-------------|------------------------|-------|--|
| <apn> | GPRS access point name | - | a string parameter(string should be included in quotation marks) |
| <user name> | GPRS user name | - | a string parameter(string should be included in quotation marks) |
| <password> | GPRS password | - | a string parameter(string should be included in quotation marks) |

14.3 Activate Wireless Connection:AT+CIICR

This command is used to activate PDP context and acquire an IP address.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|--|--|
| Execution Command | AT+CIICR | If succeeded: OK If failed: ERROR |
| Test Command | AT+CIICR=? | OK |
| Note | <ul style="list-style-type: none">AT+CIICR can only activate PDP context in the state of IP START, then the state will be changed to IP CONFIG.If activated successfully, the state will be changed to IP GPRSACT from IP CONFIG and the MT responds OK, otherwise responds ERROR | |

14.4 Get Local IP Address:AT+CIFSR

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|--|----------------------|
| Execution Command | AT+CIFSR | <IP address> |
| Test Command | AT+CIFSR=? | OK |
| Note | <ul style="list-style-type: none">Only after PDP context is activated (IP GPRSACT, TCP/UDP CONNECTING, CONNECT OK, IP CLOSE), local IP Address can be obtained by AT+CIFSR, otherwise it will respond ERROR.after operating this Command, the state will be changed to IP STATUS. | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|-------------|
|-----------|------------|-------|-------------|



| | | | |
|--------------|---------------------|---|--|
| <IP address> | IP address obtained | - | a string parameter(string should be included in quotation marks) |
|--------------|---------------------|---|--|

14.5 Start up TCP or UDP connection:AT+CIPSTART

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set Command | <p>In single connection mode (+CIPMUX=0):</p> <p>AT+CIPSTART=<mode>,<IP address>,<port></p> <p>Or</p> <p>AT+CIPSTART=<mode>,<domain name>,<port></p> | <p>If command is executed correctly,response:</p> <p>OK</p> <p>Otherwise response:</p> <p>+CME ERROR <err></p> <p>If the connection already exists:</p> <p>ALREADY CONNECT</p> <p>Then:</p> <p>If a connection is set up,a URC will appear:</p> <p>CONNECT OK</p> <p>Otherwise a URC as follows will appear:</p> <p>STATE: <sl_state></p> <p>CONNECT FAIL</p> |
| | <p>In Multi-connection mode(+CIPMUX=1):</p> <p>AT+CIPSTART=<n>,<mode>,< IP address>,<port></p> <p>Or</p> <p>AT+CIPSTART=<n>,<mode>,<domain name>,<port></p> | <p>If command is executed correctly,response:</p> <p>OK</p> <p>Otherwise response:</p> <p>+CME ERROR <err></p> <p>If the connection already exists:</p> <p><n>,ALREADY CONNECT</p> <p>Then:</p> <p>If a connection is set up,a URC will appear:</p> <p><n>,CONNECT OK</p> <p>Otherwise a URC as follows will appear:</p> <p><n>,CONNECT FAIL</p> |
| Test Command | AT+CIPSTART=? | <p>In single connection mode (+CIPMUX=0):</p> <p>+CIPSTART: (<mode>s),(IP address range),(port range)</p> <p>+CIPSTART: (<mode>s),(domain name),(port range)</p> <p>OK</p> |
| | | <p>In Multi-connection mode(+CIPMUX=1):</p> <p>+CIPSTART: (<n>s),(<mode>s),(IP address range),(port range)</p> <p>+CIPSTART: (<n>s),(<mode>s),(domain name),(port range)</p> <p>OK</p> |
| Note | <ul style="list-style-type: none"> Set command is used to setup TCP/UDP connection. Set command is allowed only when the state is IP INITIAL or IP STATUS in single connection mode or when the state is IP STATUS in multi-connection mode. So it is | |



AT Command Set

| | |
|--|--|
| | <p>necessary to implement “AT+CIPSHUT” before establish a TCP/UDP connection with this command when the state is not IP INITIAL or IP STATUS.</p> <ul style="list-style-type: none"> in multi-connection mode,AT+CSTT, AT+CIICR,AT+CIFSR must be executed before the set command. |
|--|--|

Defined values:

| Parameter | Definition | Value | Description |
|---------------|------------------------------|-------------------------------|---|
| <n> | Link No. | 0~5 | Integer type |
| <mode> | connection type | “TCP” | TCP |
| | | “UDP” | UDP |
| <IP address> | IP address of remote server | - | String type quoted in “” |
| <domain name> | Domain name of remote server | - | String type quoted in “” |
| <port> | Port of remote server | - | Integer type |
| <sl_state> | Single link state | IP INITIAL | Initial state,module enters this state after power on |
| | | IP START | Enter this state after execution of +CSTT |
| | | IP CONFIG | Enter this state after execution of +CIICR and before the GPRS context is activated |
| | | IP GPRSACT | Enter this state after execution of +CIICR and after the GPRS context is activated |
| | | IP STATUS | Enter this state after execution of +CIFSR |
| | | TCP CONNECTING/UDP CONNECTING | Enter this state after execution of +CIPSTART and before connection succeeds |
| | | CONNECT OK | Enter this state after execution of +CIPSTART and after connection succeeds |
| | | TCP CLOSING/UDP CLOSING | Enter this state after execution of +CIPCLOSE and before closed successfully |
| | | TCP CLOSED/UDP CLOSED | Enter this state after execution of +CIPCLOSE and after closed successfully |
| | | PDP DEACT | Enter this state after execution of +CGACT=0 or +CIPSHUT |



14.6 Select TCPIP application mode:AT+CIPMODE

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------|--|
| Set Command | AT+CIPMODE=<mode> | OK |
| Read command | AT+CIPMODE? | +CIPMODE: <mode> OK |
| Test Command | AT+CIPMODE=? | +CIPMODE: (0-NORMAL MODE,1-TRANSPARENT MODE) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|------------|-------|------------------|
| <mode> | mode | 0 | Normal mode |
| | | 1 | Transparent mode |

14.7 Select data sending mode:AT+CIPQSEND

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-----------------|------------------------|
| Set Command | AT+CIPQSEND=<n> | OK |
| Read Command | AT+CIPQSEND? | +CIPQSEND: <n> OK |
| Test Command | AT+CIPQSEND=? | +CIPQSEND: (0,1) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-------------------|-------|---|
| <n> | Data sending mode | 0 | Ordinary mode,also called slow sending mode –when the server has received data,"SEND OK" will be routed to TE |
| | | 1 | Quick sending mode –when data is sent out by module,"DATA ACCEPT:<n>,<length>" will be routed to TE,whether the server has received the data or not. |

14.8 Config transparent transfer mode:AT+CIPCCFG

Syntax:

| Type | of | Command | Possible response(s) |
|------|----|---------|----------------------|
|------|----|---------|----------------------|



AT Command Set

| Command | | |
|--------------|--|--|
| Set Command | AT+CIPCCFG=<NmRetry>,<WaitTm>,<SendSz>,<esc>[,<Rxmode>,<RxSize>,<Rxtimer>] | OK |
| Read command | AT+CIPCCFG? | +CIPCCFG:<NmRetry>,<WaitTm>,<SendSz>,<esc>,<Rxmode>,<RxSize>,<Rxtimer> OK |
| Test Command | AT+CIPCCFG=? | +CIPCCFG:(NmRetry:3-8),(WaitTm:2-10),(SendSz:1-1460),(esc:0,1),(Rxmode:0,1),(RxSize:50-1460),(Rxtimer:20-1000) OK |
| Note | This command will be effective only in single connection mode (+CIPMUX=0) and in IP INITIAL state. | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|---------|--|
| <NmRetry> | Retry number of an IP packet | 3~8 | 5 by default |
| <WaitTm> | Number of 100ms intervals to wait for serial(tx buffer) input before sending the packet | 2~10 | Unit: 100ms, default value is 2 |
| <SendSz> | bytes to be received from serial port(tx buffer) before sending. | 1~1460 | 1024 by default |
| <esc> | If escape sequence is enabled | 1 | enabled,default value |
| | | 0 | disabled |
| <Rxmode> | Whether to set time interval during output data from serial port(rx buffer) | 0 | output data from serial port without interval |
| | | 1 | output data from serial port within <Rxtimer> interval |
| <RxSize> | Output data length for each time | 50-1460 | units:bytes, default value:1460 |
| <Rxtimer> | Time interval (ms) to wait for serial port(rx buffer) to output data again | 20-1000 | default value:50 |

14.9 Send data:AT+CIPSEND

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | In single connection mode (AT+CIPMUX=0): AT+CIPSEND=<length> | Send fixed-length data 1) respond > input data of <length>after >and the data will be send out . If data is sent successfully, response is as follows: |



AT Command Set

| | | |
|-------------------|--|---|
| | | <p>SEND OK (if AT+CIPQSEND=0) or: DATA ACCEPT:<length> (if AT+CIPQSEND=1)</p> <p>If data is sent unsuccessfully,response: SEND FAIL</p> <p>2) If NO connection exists or other error happens,response: +CME ERROR <err></p> |
| | <p>In multi-connection mode (+CIPMUX=1):</p> <p>AT+CIPSEND=<n>[,<length>]</p> | <p>1) When<length> is omitted, it is used to send varied-length data. ”>” appears, then input data and [CTRL-Z](0x1A) to send them or [ESC](0x1B) to cancel sending.</p> <p>When <length> is present, it is used to send fixed-length data. ”>” appears, then input data of <length>after >and the data will be send out</p> <p>If data is sent successfully, response is as follows: <n>,SEND OK (if AT+CIPQSEND=0) or DATA ACCEPT:<n>,<length>(if AT+CIPQSEND=1)</p> <p>If data is sent unsuccessfully,response: <n>,SEND FAIL</p> <p>2) If NO connection exists or other error happens,response: +CME ERROR <err></p> |
| Execution Command | AT+CIPSEND | <p>it is used to send varied-length data in single connection mode.</p> <p>1) ”>” appears, then input data and [CTRL-Z](0x1A) to send them or [ESC](0x1B) to cancel sending.</p> <p>If data is sent successfully, SEND OK (if AT+CIPQSEND=0) or DATA ACCEPT:<length>(if AT+CIPQSEND=1)</p> <p>If data is sent unsuccessfully,response: SEND FAIL</p> <p>2) If NO connection exists or other error happens,response: +CME ERROR <err></p> |
| Read Command | AT+CIPSEND? | <p>In single connection mode (AT+CIPMUX=0),response: +CIPSEND: <size></p> <p>OK</p> <p>In multi connection mode (AT+CIPMUX=1),response: +CIPSEND: <n>,<size></p> <p>OK</p> |
| Test Command | AT+CIPSEND=? | <p>In single connection mode (AT+CIPMUX=0),response: +CIPSEND: <length></p> <p>OK</p> <p>In multi connection mode (AT+CIPMUX=1),response: +CIPSEND: <0-7>,<length></p> <p>OK</p> |
| Note | <ul style="list-style-type: none"> The Execution and Set commands will send data automatically at the expiration of timer set by AT+CIPATS,so data can be sent by [CTRL-Z] ,by<length> parameter or by the timer set by | |



AT Command Set

| | |
|--|---|
| | AT+CIPATS. <ul style="list-style-type: none">Can send data on the condition that at least one TCP/UDP connection has been setup by +CIPSTART.The max size of data sending can not exceed <size>. |
|--|---|

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---|
| <n> | Link No. defined as <n> in +CIPSTART | 0~5 | Integer type |
| <length> | Length of data | - | Integer type, it must be less than <size> |
| <size> | The max length of data sent at one time | - | Integer type, the value at present is 1460bytes |

14.10 Set Auto Sending Timer:AT+CIPATS

If <mode> is set to 1 by set command, the data will be sent immediately after <time> is due when sending data with AT+CIPSEND (that is if <CTRL+Z> is not input in AT+CIPSEND or less than <length> data is input in AT+CIPSEND=<length> before <time> is due).

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|------------------------------------|
| Set Command | AT+CIPATS=<mode>[,<time>] | OK |
| Read Command | AT+CIPATS? | +CIPATS: <mode>,<time> OK |
| Test Command | AT+CIPATS=? | +CIPATS: (<mode>s),(<time>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|--|-------|---------------------------------|
| <mode> | An integer parameter which indicates whether set timer when sending data | 0 | not set timer when sending data |
| | | 1 | set timer when sending data |
| <time> | An integer parameter which indicates the seconds after which the data will be sent | 1~100 | unit: seconds |

14.11 If display '>' and SEND OK when sending data:AT+CIPSPRT

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------|-------------------------|
| Set Command | AT+CIPSPRT=<send prompt> | OK |
| Read Command | AT+CIPSPRT? | +CIPSPRT: <send prompt> |



AT Command Set

| | | |
|--------------|--------------|----------------------------------|
| | | OK |
| Test Command | AT+CIPSPRT=? | +CIPSPRT: (<send prompt>s) OK |

Defined values:

| Parameter | Definition | Value | Description |
|---------------|--|-------|--|
| <send prompt> | If '>' and/or 'SEND OK' will be displayed after execution of AT+CIPSEND. integer type | 0 | Not display '>' but display: 'SEND OK' |
| | | 1 | Display '>' and 'SEND OK' (default) |
| | | 2 | Display neither '>' nor 'SEND OK' |

14.12 Query the current connecton status:AT+CIPSTATUS

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|----------------|---|
| Execution Command | AT+CIPSTATUS | In single connection mode(AT+CIPMUX=0),response: OK STATE: <sc_state> |
| | | In multi connection mode (AT+CIPMUX=1),response: OK STATE: <n>,<mc_state> C:<n>,<bearer>, <TCP/UDP>, <IP address>, <port>, <client state> |
| Test Command | AT+CIPSTATUS=? | OK |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|-------------------------|------------|---|
| <n> | Link No. | 0~5 | integer type defined as <n> in +CIPSTART |
| <bearer> | GPRS bearer | 0~1 | Default value is 0 |
| <IP address> | IP address | - | String type(quoted in "") |
| <port> | Port No. | - | integer type |
| <sc_state> | Single connection state | IP INITIAL | Initial state,module enters this state after power on |
| | | IP START | Enter this state after execution of +CSTT |
| | | IP CONFIG | Enter this state after execution of +CIICR and before the GPRS context is activated |
| | | IP GPRSACT | Enter this state after execution of +CIICR and after the GPRS context is activated |
| | | IP STATUS | Enter this state after execution of +CIFSR |



AT Command Set

| | | | |
|----------------|------------------------|--|---|
| | | TCP CONNECTING/UDP CONNECTING / SERVER LISTENING | Enter this state after execution of +CIPSTART and before connection succeeds |
| | | CONNECT OK | Enter this state after execution of +CIPSTART and after connection succeeds |
| | | TCP CLOSING/UDP CLOSING | Enter this state after execution of +CIPCLOSE and before closed successfully |
| | | TCP CLOSED/UDP CLOSED | Enter this state after execution of +CIPCLOSE and after closed successfully |
| | | PDP DEACT | Enter this state after execution of +CGACT=0 or +CIPSHUT |
| <mc_state> | Multi connection state | IP INITIAL | Initial state,module enters this state after power on |
| | | IP START | Enter this state after execution of +CSTT |
| | | IP CONFIG | Enter this state after execution of +CIICR and before the GPRS context is activated |
| | | IP GPRSACT | Enter this state after execution of +CIICR and after the GPRS context is activated |
| | | IP STATUS | Enter this state after execution of +CIFSR |
| | | IP PROCESSING | Enter this state after execution of +CIPSTART |
| | | PDP DEACT | Enter this state after execution of +CGACT=0 or +CIPSHUT |
| <client state> | Client state | INITIAL | Initial state |
| | | CONNECTING | It is establishing a TCP/UDP connection |
| | | CONNECTED | The TCP/UDP connection is established |
| | | REMOTE CLOSING | Server closes the connection |
| | | CLOSING | The connection is being closed |
| | | CLOSED | The connection has been closed |

14.13 Query the transmission state of a connection:AT+CIPACK

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|---------------------------------------|
| Set Command | in multi connection mode(+CIPMUX=1): | +CIPACK: <txlen>, <acklen>, <nacklen> |
| | AT+CIPACK=<n> | OK |
| Execution Command | in single connection mode(AT+CIPMUX=0): | +CIPACK: <txlen>, <acklen>, <nacklen> |
| | AT+CIPACK | OK |
| Test Command | AT+CIPACK=? | OK |



Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|---------------------------|
| <n> | Link No. defined as <n> in +CIPSTART | 0~5 | integer type |
| <txlen> | The length of sent data | - | integer type,unit: bytes |
| <acklen> | The length of data that has been acknowledged by server | - | integer type, unit: bytes |
| <nacklen> | The length of data that has not been acknowledged by server | - | integer type, unit: bytes |

14.14 Set GPRS connection mode:AT+CIPCSGP

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--|--|
| Set Command | AT+CIPCSGP=<mode>,[(<apn>,<user name>,<password>)] | OK |
| Read Command | AT+CIPCSGP? | +CIPCSGP: <mode>, <apn>, <user name>, <password> OK |
| Test Command | AT+CIPCSGP=? | +CIPCSGP: 1-GPRS,APN,USER NAME,PASSWORD OK |

Defined values:

| Parameter | Definition | Value | Description |
|----------------------------------|--------------------------|-------|---------------------------|
| <mode> | Wireless connection mode | 1 | GPRS |
| Parameter about GPRS connection: | | | |
| <apn> | GPRS access point name | - | String type(quoted in "") |
| <user name> | GPRS user name | - | String type(quoted in "") |
| <password> | GPRS password | - | String type(quoted in "") |

14.15 Config DNS(Domain Name Server):AT+CDNSCFG

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------------------------|--|
| Set Command | AT+CDNSCFG=<pri_dns>,[<sec_dns>] | OK |
| Read Command | AT+CDNSCFG? | PrimaryDns: <pri_dns> SecondaryDns: <sec_dns> OK |
| Test Command | AT+CDNSCFG=? | +CDNSCFG: ("Primary DNS"),("Secondary DNS") OK |



Defined values:

| Parameter | Definition | Value | Explanation |
|-----------|---------------------------------|-------|---------------------------|
| <pri_dns> | The IP address of primary DNS | 0~7 | String type(quoted in "") |
| <sec_dns> | The IP address of secondary DNS | 0~1 | String type(quoted in "") |

14.16 Get the IP address of a given DNS:AT+CDNSGIP

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------|--|
| Set Command | AT+CDNSGIP=<domain name> | If command format is correct and the IP address is resolved correctly,response: OK +CDNSGIP: 1, <domain name>,<IP address> If command format is correct but the IP address can not be parsed,response: OK +CDNSGIP:0,<dns error code> If command format is not correct,response: ERROR |
| Test Command | AT+CDNSGIP=? | OK |

Defined values:

| Parameter | Definition | Value | Explanation |
|------------------|------------------------|--------------|---------------------------|
| <domain name> | Domain name | - | String type(quoted in "") |
| <IP address> | IP address of the DNS | - | String type(quoted in "") |
| <dns error code> | DNS related error code | 10 | GENERAL ERROR |
| | | 11 | MAX RETRIES |
| | | 12 | NO SERVER ADDR |
| | | 13 | NO MEMORY |
| | | 14 | INVALID NAME |
| | | 15 | INVALID RESP |
| | | Other values | Some other error code |

14.17 Set sender prompt when receiving data:AT+CIPSRIP

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|-------------------|----------------------|
| Set Command | AT+CIPSRIP=<mode> | OK |



AT Command Set

| | | |
|--------------|---|---------------------------|
| Read Command | AT+CIPSRIP? | +CIPSRIP: <mode> OK |
| Test Command | AT+CIPSRIP=? | +CIPSRIP: (<mode>s) OK |
| Note | This command is available only in single connection mode(+CIPMUX=0) | |

Defined values:

| Parameter | Definition | Value | Explanation |
|-----------|--|-------|--|
| <mode> | whether show the prompt of a received data | 0 | Do not show the prompt (default) |
| | | 1 | Show the prompt whose format is as follows: RECV FROM:<IP ADDRESS>:<PORT> |

14.18 Set a header when receiving data:AT+CIPHEAD

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|---------------------------|
| Set Command | AT+CIPHEAD=<mode> | OK |
| Read Command | AT+CIPHEAD? | +CIPHEAD: <mode> OK |
| Test Command | AT+CIPHEAD=? | +CIPHEAD: (<mode>s) OK |
| Note | This command is available only in single connection mode(+CIPMUX=0) | |

Defined values:

| Parameter | Definition | Value | Explanation |
|-----------|--|-------|--|
| <mode> | whether show the header of a received data | 0 | Do not show the header (default) |
| | | 1 | Show the header whose format is as follows: +IPD,data length: |

14.19 Set a protocol header when receiving data:AT+CIPSHOWTP

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------|--------------------------|
| Set Command | AT+CIPSHOWTP=<mode> | OK |
| Read Command | AT+CIPSHOWTP? | +CIPSHOWTP: <mode> OK |



AT Command Set

| | | |
|--------------|--|---------------------------------|
| Test Command | AT+CIPSHOWTP=? | +CIPSHOWTP: (<mode>S) OK |
| Note | This command is available only in single connection mode(+CIPMUX=0) and AT+CIPHEAD=1 | |

Defined values:

| Parameter | Definition | Value | Explanation |
|-----------|---|-------|--|
| <mode> | whether show the protocol header of a received data | 0 | Do not show the protocol header (default) |
| | | 1 | Show the header whose format is as follows: +IPD,<data Size>,<TCP/UDP>: |

14.20 Receive data in multi connection mode: +RECEIVE

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------------------------|------------------------------|
| URC report | +RECEIVE,<n>,<length>: <data> | Note:<data> is received data |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|--------------------------------|
| <n> | Link No. defined as <n> in +CIPSTART | 0~5 | integer type |
| <length> | The length of received data | - | integer type,in units of bytes |

14.21 Get data from network manually: AT+CIPRXGET

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|---|--|
| Set command | Single connection(AT+CIPMUX=0): AT+CIPRXGET=<mode>[,<len>] | AT+CIPRXGET=1: OK <i>Note; To enable this function, parameter <mode> must be set to 1 before connection. Then ,there will be+CIPRXGET:1to indicate data receiving.</i> |
| | | AT+CIPRXGET=2,<len> to read data in ascii format: +IPRXGET:2,<cnlen>,<rlen>data.... OK |
| | | AT+CIPRXGET=3,<len> to read data in HEX format: +IPRXGET:3,<cnlen>,<rlen>data.... |
| | | |



AT Command Set

| | | |
|--------------|--|---|
| | Multi-connection(AT+CIPMUX=1): AT+CIPRXGET=<mode>,<n>[,<len>]>] | OK AT+CIPRXGET=4: +CIPRXGET: 4, <cnflength> |
| | | OK AT+CIPRXGET=1: |
| | | OK AT+CIPRXGET=2,<n>,<len> to read data in ascii format: +IPRXGET:2,<n>,<cnlen>,<rlen>data.... |
| | | OK AT+CIPRXGET=3, <n>,<len> to read data in HEX format: +IPRXGET:3, <n>,<cnlen>,<rlen>data.... |
| | | OK AT+CIPRXGET=4: +CIPRXGET: 4, <n>,<cnflength> |
| Read Command | AT+CIPRXGET? | OK +CIPRXGET: <mode> |
| Test Command | AT+CIPRXGET=? | OK If single IP connection (+CIPMUX=0): +CIPRXGET: (list of supported <mode>s),(list of supported <reqlength>) OK If multi IP connection (+CIPMUX=1): +CIPRXGET: (list of supported <mode>s), (list of supported <id>s), (list of supported <reqlength>) OK |
| URC | +IPRXGET:1 | In single connection, this URC may appear after AT+CIPRXGET=1 which means AT+CIPRXGET=2,<len> or AT+CIPRXGET=3,<len> can be input to read data now |
| | +IPRXGET:1,<n> | In multi connection, this URC may appear after AT+CIPRXGET=1 which means AT+CIPRXGET=2,<n>,<len> or AT+CIPRXGET=3,<n>,<len> can be input to read data now |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|-----------------------------|-------|--|
| <mode> | mode | 0 | Disable getting data from network manually, MT is set to normal mode, data will be pushed to TE directly |
| | | 1 | Enable getting data from network manually |
| | | 2 | The module can get data, but the length of output data can not exceed 1460 bytes at a time |
| | | 3 | Similar to mode 2, but in HEX mode, which means the module can get 730 bytes maximum at a time |
| | | 4 | Query how many data has not been read |
| <n> | Link id in multi-connection | 0-5 | Defined as <n>in +CIPSTART |



AT Command Set

| | | | |
|---------|--------------------------|--------|---------------------|
| <len> | Number of data requested | 1-1460 | In ascii characters |
| | | 1-730 | In HEXcharacters |
| <cnlen> | Number of readdata | | Unit: bytes |
| <rlen> | Data still to be read | | Unit: bytes |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|---|---------------------------------------|---|
| Application scenario in single connection: | | |
| → | AT+CIPRXGET=1 | Enable getting data from network manually |
| ← | OK | |
| → | AT+CGREG? | |
| ← | +CGREG: 0,1 OK | |
| → | AT+CIPSTART="TCP","36.9.88.120",6001 | Set up a single TCP connection |
| ← | OK | |
| ← (URC) | CONNECT OK | |
| ← (URC) | +CIPRXGET: 1 | Receive data from the server |
| → | AT+CIPRXGET=2,150 | Read 150charaters in ascii format |
| ← | +CIPRXGET: 2,10,0 1234567890 OK | Read 10 charaters: 1234567890, 0 not read yet |
| → | AT+CIPRXGET=4 | Query the number of unread data |
| ← | +CIPRXGET: 4,0 OK | 0is not read |
| ← (URC) | +CIPRXGET: 1 | The server sends data again |
| → | AT+CIPRXGET=3,150 | This time, read 150charaters in hex format |
| ← | +CIPRXGET: 3,5,0 48454C4C4F OK | Read 5: HELLO(in fact 10 bytes) |
| Application scenario in multi-connection: | | |
| → | AT+CIPRXGET=1 | |
| ← | OK | |
| → | AT+CIPMUX=1 | |
| ← | OK | |
| → | AT+CSTT="CMNET" | |
| ← | OK | |
| → | AT+CIICR | |
| ← | OK | |
| → | AT+CIFSR | |



AT Command Set

| | | |
|---------|--|--|
| ← | OK | |
| → | AT+CIPSTART=3,"TCP","36.9.88.120",6001 | Set up multi TCP connection |
| ← | OK | |
| ← (URC) | 3, CONNECT OK | |
| ← (URC) | +CIPRXGET: 1,3 | Receive data on the connection of id=3 |
| → | AT+CIPRXGET=2,3,10 | |
| ← | +CIPRXGET: 2,3,5,0 AAAAA OK | |
| → | AT+CIPRXGET=4,3 | |
| ← | +CIPRXGET: 4,3,0 OK | |

14.22 Save TCPIP application context: AT+CIPSCONT

Module saves current TCPIP Application Contexts to NVRAM. When system is rebooted, the parameters will be loaded automatically.

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------|---|
| Read Command | AT+CIPSCONT? | +CIPSCONT:<mode0> +CIPCSGP:<mode> Gprs Config APN:<apn> Gprs Config UserId:<user name> Gprs Config Password:<password> +CLPORT:<port> +CIPHEAD:<mode> +CIPSHOWTP:<mode> +CIPSRIP:<mode> +CIPATS:<mode>,<time> +CIPSPRT:<send prompt> +CIPQSEND:<n> +CIPMODE:<mode> +CIPCCFG:<NmRetry>,<WaitTm>,<SendSz>,<esc> +CIPMUX:<n> +CIPDPDP:<mode>,<interval>,<timer> +CIPRXGET:<mode> +CIPQRCLOSE:<mode> +CIPUDPMODE:<mode> OK |



| | | |
|-------------------|-------------|----|
| Execution Command | AT+CIPSCONT | OK |
|-------------------|-------------|----|

14.23 Close a TCP/UDP Connection:AT+CIPCLOSE

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|--|
| Set Command | in single connection mode: AT+CIPCLOSE=<id> | CLOSE OK |
| | in multi connection mode: AT+CIPCLOSE=<n>[,<id>] | <n>,CLOSE OK |
| Execution Command | AT+CIPCLOSE | If succeed, Response: CLOSE OK If fail, Response: ERROR |
| Test Command | AT+CIPCLOSE=? | OK |
| Note | <ul style="list-style-type: none">● Execution Command (AT+CIPCLOSE) is available only in single connection mode; it will return ERROR in multi connection mode.● Execution/Set Command can close the connection only in TCP/UDP CONNECTING or CONNECT OK state, otherwise it will return ERROR .● in single connection mode, the state goes to IP CLOSE after Set/Execution command | |

Defined values:

| Parameter | Definition | Value | Description |
|-----------|---|-------|----------------------|
| <id> | Close mode | 0 | Slow close (default) |
| | | 1 | Quick close |
| <n> | Link No. defined as <n> in +CIPSTART | 0~5 | integer type |

14.24 Establish as A Server:AT+SERVER

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------------------|---|
| Set Command | AT+CIPSERVER=<mode>[,<port>] | OK |
| Read Command | AT+CIPSERVER? | +CIPSERVER: <mode>[,<port>,<channel id>,<bearer>] |



AT Command Set

| | | |
|--------------|--|--|
| | | OK |
| Test Command | AT+CIPSERVER=? | +CIPSERVER: (0-CLOSE SERVER, 1-OPEN SERVER),(1-65535) OK |
| URC | SERVER OK | This URC will be reported after set command AT+CIPSERVER=<mode>[,<port>] responds OK |
| Notice | This command is allowed to establish module as a TCP server only when the state is IP INITIAL or IP STATUS when it is in single state. In multi-IP state, this command is allowed to establish module as a TCP server when the state is IP STATUS only. | |

Defined values:

| Parameter | Definition | Value | Description |
|--------------|-----------------------|---------|----------------------------|
| <mode> | server mode switch | 0 | server mode is established |
| | | 1 | server mode is closed |
| <port> | server listening port | 1~65535 | |
| <channel id> | channel id | | |
| <bearer> | GPRS bearer | 0 | GPRS |

14.25 Ping Echo Request:AT+CIPPING

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---|--|
| Set Command | AT+CIPPING=<IPaddr>[,<retry Num>[,<dataLen>[,<timeout>[,<ttl>]]]] | +CIPPING: <replyId>,<Ip Address>,<replyTime>,<ttl>[<CR><LF> +CIPPING: <replyId>,<Ip Address>,<replyTime>,<ttl> [...]] OK |
| Read Command | AT+CIPPING? | +CIPPING: <retryNum>,<dataLen>,<timeout>,<ttl> OK |
| Test Command | AT+CIPPING=? | +CIPPING: (list of supported <retryNum>s),(list of supported <dataLen>s),(list of supported <timeout>s),(list of supported <ttl>s) OK |
| Note | <ul style="list-style-type: none">Before sending PING Request the GPRS context must be activated.When the Echo Request timeout expires (no reply received on time), the response will contains <replyTime> setting to 600 and <ttl> setting to 255.When executing this command, if PDP context is deactivated for some reasons, such as | |



AT Command Set

| | |
|--|---|
| | out of service, etc., the "+PDP: DEACT" URC is reported and the command will end immediately. |
|--|---|

Defined values:

| Parameter | Definition | Value | Description |
|--------------|---|-------------|---------------------|
| <IPAddr> | Address of the remote host,string type. | ip address | |
| | This parameter can be either an IP address or a domain name | Domain name | |
| <retryNum> | The number of Ping Echo Request to send. | 1-100 | default:4 |
| <dataLen> | The length of Ping Echo Request data | 0-1024 | default:32 |
| <timeout> | The timeout waiting for a single Echo Reply | 1-600 | in units of 100 ms, |
| <tTl> | time to live | 1-255 | default:64 |
| <replyId> | Echo Reply serial number | | |
| <Ip Address> | IP Address of the remote host | | |
| <replyTime> | time to receive the response | | in units of 100 ms |

14.26 Deactivate GPRS PDP context:AT+CIPSHUT

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|--|---|
| Execution Command | AT+CIPSHUT | If the connection is closed successfully,response: SHUT OK If the connection is closed unsuccessfully, response: ERROR |
| Test Command | AT+CIPSHUT=? | OK |
| Note | <ul style="list-style-type: none">• The state goes to IP INITIAL after execution of AT+CIPSHUT.• in multi connection mode, all TCP and UDP connections will be closed after execution of AT+CIPSHUT.• If the URC "+PDP:DEACT" is reported which means that the GPRS PDP context has been deactivated by the network , AT+CIPSHUT is still be needed for the state machine to go to original state. | |

14.27 Switch from data mode to command mode:+++

This Command is only available during a CSD call or a GPRS connection. The +++ character sequence causes the TA to switch to Command mode while keeping the GPRS data connection.

Syntax:



AT Command Set

| Type of Command | Command | Possible response(s) |
|-------------------|--|----------------------|
| Execution Command | +++ | OK |
| Notice | <p>To prevent the +++ escape sequence from being misinterpreted as data, it should comply to following rules:</p> <ul style="list-style-type: none"> ● No characters should be entered in 1 second before +++; ● “+++” characters should be entered with no characters in between; ● No characters should be entered in 0.5 second after +++. | |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|--|---|
| → | ATD*99# | |
| ← | CONNECT ~~~y}#Ä!}!!} }< !}\$&@}#\$Ä#}%&Êê}*h"}& } } } } }"}{"7S~~y}#Ä!}!!} }< !}\$ &@}#\$Ä#}%&Êê}*h"}& } } } }{"i¥~~y}#Ä!}!!}#} }< !}\$&@}#\$Ä#}%&Êê}*h"}& } } } } }{"\$÷~~y}#Ä!}!!} }< !}\$&@}#\$Ä#}%&Ê ê}*h"}& } } } } }"} | Data call is setup |
| → | +++ | +++ to return to command mode |
| ← | OK | OK indicates that it's command mode now |
| → | ATH | Hang up the data call |
| ← | OK | |

14.28 Switch from command mode to data mode:ATO

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------|--|
| Execution Command | ATO | <p>If the data connection is resumed successfully: CONNECT</p> <p>If the data connection is resumed unsuccessfully: NO CARRIER</p> |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|--------------|------------------|
| → | ATD*99# | Make a data call |
| ← | CONNECT | Success |



AT Command Set

| | | |
|---|--|---------------------------|
| | ~~~ÿ}#Ä!}!} }<!}\$&@}#}\$Ä#}%&Êê}*h}"&} } } } }"}{)" 7S~~ÿ}#Ä!}!} }<!}\$&@}#}\$Ä#}%&Êê}*h}"&} } } } }"}{)" | |
| → | +++ | Return to command mode |
| ← | OK | Success |
| → | ATO | Resume the data connetion |
| ← | CONNECT ~~~ÿ}#Ä!}!} }<!}\$&@}#}\$Ä#}%&Êê}*h}"&} } } } }"}{)" 7S~~ÿ}#Ä!}!} }<!}\$&@}#}\$Ä#}%&Êê}*h}"&} } } } }"}{)" | success |

14.29 TCP/UDP Error codes

Errors occurred in TCP applications will be reported in form of TCP ERROR:<err code>.

TCP error code:

| <err code> | Definition in English |
|------------|---|
| 0 | No error |
| 1 | TCPIP is idle |
| 2 | No tsapi |
| 3 | Invalid tsapi |
| 4 | No buffer |
| 5 | Network error |
| 6 | Remote host is unreachable |
| 7 | The address is already in use |
| 8 | The address is not available |
| 9 | The supplied buffer is too large or small |
| 10 | Invalid parameter |
| 11 | Remote host has rejected the connection |
| 12 | Time out |
| 13 | An established connection is aborted |
| 14 | Remote host has reset the connection |
| 15 | The socket is already connected |
| 16 | The socket is not connected |
| 17 | The socket has been shutdown |
| 18 | Undefined error |

Errors occurred in UDP applications will be reported in form of UDP ERROR:<err code>.

UDP error code:

| <err code> | Definition in English |
|------------|-----------------------|
| 0 | No error |
| 1 | TCPIP is idle |
| 2 | No tsapi |
| 3 | Invalid tsapi |

| | |
|----|---|
| 4 | The callback has not been registered |
| 5 | No buffer |
| 6 | Network error |
| 7 | Remote host has rejected the connection |
| 8 | Remote host is unreachable |
| 9 | The address is already in use |
| 10 | The address is not available |
| 11 | The supplied buffer is too large or small |
| 12 | Invalid parameter |
| 13 | TCPIP is busy |
| 14 | Undefined error |
| 15 | The socket is already connected |

14.30 State Machine

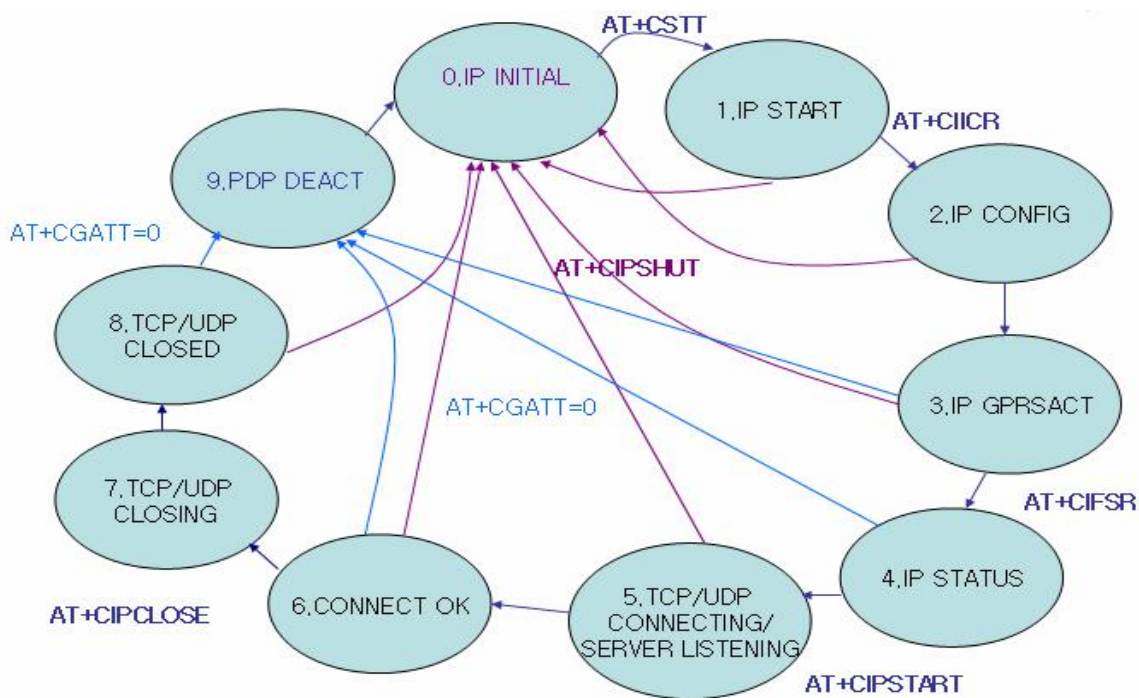


Chart 4:State machine in single connection mode

Descriptions:

- Input AT+CIICR,the state machine will go to IP CONFIG state immediately;when OK is reported,it will go to IP GPRSACT state;
- Input AT+CIPSTART,the state machine will go to IP/UDP CONNECTING state immediately; if CONNECT OK is reported afterward,it means that the connection has been established, and the

machine will go to CONNECT OK state;

- Input AT+CIPCLOSE,the state machine will go to TCP/UDP CLOSING state immediately;if CLOSE OK is reported afterward,it means that the connection has been closed successfully,and the machine will go to TCP/UDP CLOSED;
- If the URC "+PDP:DEACT" is reported,it means that the GPRS PDP context has been deactivated by the network, in which case, the machine will go to PDP DEACT state;
- In IP GPRSACT,IP STATUS,CONNECT OK or TCP/UDP CLOSED state,execution of AT+CGATT=0 will make the GPRS PDP context deactivated and the state machine to go to PDP DEACT state;
- In PDP DEACT state,AT+CIPSHUT is needed for the machine to go to IP INITIAL state;
- AT+CIPSHUT can be executed in all states to make state machine to go to IP INITIAL state.

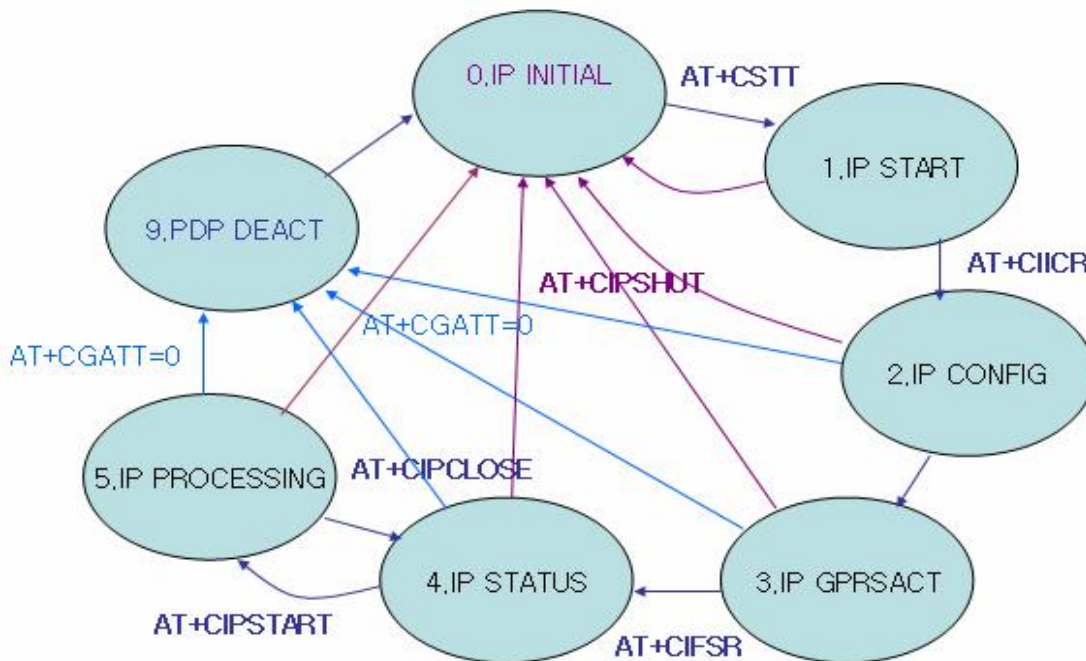


Chart 5:State machine in multi connection mode

14.31 Examples for application

Because the commands in this part are highly dependent on each other, we could describe them together in application examples.

| Command(→) /Response(←) | AT Sequences | Description |
|---|--|--|
| TCP application scenario 1: module as client, single connection, sending data (slow sending) | | |
| → | AT+CGREG? | Query GPRS registration state |
| ← | +CGREG: 0,1 OK | <n>=0, URC report is not permitted <stat>=1, registered to local operator |
| → | AT+CGATT? | Query the GPRS attach state |
| ← | +CGATT: 1 OK | <state>=1, GPRS is attached |
| → | AT+CIPMUX=0 | Set to single connection mode |
| ← | OK | |
| → | AT+CIPQSEND=0 | Set to slow sending |
| ← | OK | |
| → | AT+CSTT="CMNET","", "" Or AT+CSTT="CMNET" | Start a task, set APN to "CMNET" when no account or password is needed, just use a empty string "". |
| ← | OK | |
| → | AT+CIICR | Activate the GPRS PDP context, get IP address |
| ← | OK | |
| → | AT+CIFSR | Query the IP address |
| ← | 010.083.172.111 | |
| → | AT+CIPSTATUS | Query the state |
| ← | OK STATE: IP STATUS | |
| → | AT+CIPSTART="TCP", "60.166.12.210", 7500 Or AT+CIPSTART="TCP", "60.166.12.210", "7500" | In IP STATUS state, +CIPSTART can be used to establish a connection: "TCP" – protocol type of the link "60.166. *.*" – server IP 7500 – server port No. |
| ← | OK | |
| ←(URC) | CONNECT OK | If the TCP connection has been established, a "CONNECT OK" URC will be reported |
| → | AT+CIPSTATUS | Query the state again |



AT Command Set

| | | |
|--|--------------------------------|---|
| ← | OK | |
| | STATE: CONNECT OK | |
| → | AT+CIPSEND | Send data (varied-length) |
| → | >1234567890<CTRL-Z> | Input data following ">" and input <CTRL-Z> to send them |
| ← | SEND OK | SEND OK means the server has received the data |
| → | AT+CIPACK | Check the transmission state of the TCP connection |
| ← | +CIPACK: 1073,1073,0 OK | First 1073- data sent, Second 1073- data received by server 0- Data hasn't received by server |
| → | AT+CIPSEND=10 | Send data (fixed-length) |
| → | >1234567890 | |
| ← | SEND OK | When the length of data reaches 10 bytes,the data will be sent automatically |
| → | AT+CIPATS=1,10 | Set timer for auto data sending to 10s |
| ← | OK | |
| → | AT+CIPSEND | Send data |
| → | >1234567890ABCDEFGH | |
| ← | SEND OK | When the 10 seconds timer expires,the data will be sent automatically |
| → | AT+CIPSEND=100 | |
| → | >123 | |
| ← | SEND OK | When the 10 seconds timer expires,the data will be sent automatically |
| → | AT+CIPCLOSE | Close the TCP link |
| ← | CLOSE OK | |
| → | AT+CIPSTATUS | Check the state |
| ← | OK | TCP link is closed successfully |
| | STATE: TCP CLOSED | |
| → | AT+CIPSHUT | Shut the GPRS PDP context |
| ← | SHUT OK | |
| → | AT+CIFSR | Query local IP |
| ← | ERROR | IP can not be found |
| TCP application scenario 2:module as client,single connection,sending data (fast sending) (in fact,there are 2 methods of data sending: slow sending and fast sending which can be set by +CIPQSEND. The differences are as follows: <ul style="list-style-type: none"> ● In slow sending,TE needs the acknowledgement from server(which is SEND OK) for every sending of data ● In fast sending,TE just sends the data to TA(i.e. module) without expectation of the acknowledgement from server(which is SEND OK) | | |
| → | AT+CIPMUX=0 | Set to single connection mode |
| ← | OK | |
| → | AT+CIPQSEND=1 | Set to fast sending |
| ← | OK | |



AT Command Set

| | | |
|---|--|---|
| → | AT+CIPSTATUS | Query the state |
| ← | OK | |
| | STATE: IP INITIAL | |
| → | AT+CIPSTART="TCP","60.166.12.210",7500 | In IP STATUS state,+CIPSTART can be used to establish a connection: "TCP" – protocol type of the link "60.166.*.*" – server IP 7500 –server port No. |
| ← | OK | |
| ←(URC) | CONNECT OK | |
| → | AT+CIPSEND | Send data |
| → | >1234567890<CTRL-Z> | |
| ← | DATA ACCEPT:10 | Indicates that module has received 10 bytes of data (for further sending)from TE |
| | | +CIPCLOSE,+CIPSHUT |
| UDP application scenario 1:module as client,single connection,sending data (slow sending) | | |
| → | AT+CIPMUX=0 | Set to single connection mode |
| ← | OK | |
| → | AT+CIPQSEND=0 | Set to slow sending |
| ← | OK | |
| | | +CSTT +CIICR +CIFSR |
| → | AT+CIPSTART="UDP","60.166.12.210"6100 | Establish an UDP link: "UDP" -protocol type of the link "60.166.*.*" -server IP 6100 - server port No. |
| ← | OK | |
| ←(URC) | CONNECT OK | |
| → | AT+CIPSEND | Send data |
| → | >1234567890<CTRL-Z> | |
| ← | SEND OK | SEND OK means the server has received the data |
| | | +CIPCLOSE,+CIPSHUT... |
| UDP application scenario 2:module as client,single connection,sending data (fast sending) | | |
| → | AT+CIPMUX=0 | Set to single connection mode |
| ← | OK | |
| → | AT+CIPQSEND=1 | Set to fast sending |
| ← | OK | |
| | | +CSTT +CIICR +CIFSR +CIPSTART |
| → | AT+CIPSEND | Send data |
| → | >1234567890<CTRL-Z> | |
| ← | DATA ACCEPT:10 | SEND OK |
| | | +CIPCLOSE,+CIPSHUT |
| TCP&UDP application scenario 1:module as client,multi connection,sending data (slow sending) | | |



AT Command Set

| | | |
|---|--|--|
| → | AT+CIPMUX=1 | Set to multi connection mode |
| ← | OK | |
| → | AT+CIPQSEND=0 | Set to slow sending |
| ← | OK | |
| | | +CSTT +CIICR +CIFSR |
| → | AT+CIPSTART=0,"TCP","60.166.12.210", 7500 | |
| ← | OK | |
| ←(URC) | CONNECT OK | A TCP link, whose id=0 ,is established |
| → | AT+CIPSTART=1,"UDP","60.166.12.210",6100 | |
| ← | OK | |
| ←(URC) | CONNECT OK | A UDP link, whose id=1 ,is established |
| → | AT+CIPSTATUS | Query the state |
| ← | OK STATE: IP PROCESSING C: 0,0,"TCP","60.166.12.210","7500","CONNECTED" C: 1,0,"TCP","60.166.12.210","7500","CONNECTED" C: 2,,,"","","INITIAL" C: 3,,,"","","INITIAL" C: 4,,,"","","INITIAL" C: 5,,,"","","INITIAL" C: 6,,,"","","INITIAL" C: 7,,,"","","INITIAL" | |
| → | AT+CIPSEND=0 | Send data on the TCP link |
| → | >1234567890<CTRL-Z> | |
| ← | 0,SEND OK | |
| → | AT+CIPSEND=1 | Send data on the UDP link |
| → | >1234567890<CTRL-Z> | |
| ← | 1,SEND OK | |
| | | Send more data |
| → | AT+CIPCLOSE=0 | Close link 0 |
| ← | 0,CLOSE OK | |
| → | AT+CIPSHUT | |
| ← | SHUT OK | |
| → | AT+CIPMUX=0 | |
| ← | OK | |
| TCP&UDP application scenario 2:module as client,multi connection,sending data (fast sending) | | |



AT Command Set

| | | |
|--------|---|--|
| → | AT+CIPMUX=1 | Set to multi connection mode |
| ← | OK | |
| → | AT+CIPQSEND=1 | Set to fast sending |
| ← | OK | |
| | | +CSTT +CIICR +CIFSR |
| → | AT+CIPSTART=6,"TCP","60.166.12.210", 7500 | |
| ← | OK | |
| ←(URC) | CONNECT OK | A TCP link, whose id=6 ,is established |
| → | AT+CIPSTART=7,"UDP","60.166.12.210",6100 | |
| ← | OK | |
| ←(URC) | CONNECT OK | A UDP link, whose id=7 ,is established |
| → | AT+CIPSEND=6 | Send data on the TCP link |
| → | >1234567890<CTRL-Z> | |
| ← | DATA ACCEPT:6,10 | |
| → | AT+CIPSEND=7 | Send data on the UDP link |
| → | >1234567890<CTRL-Z> | |
| ← | DATA ACCEPT:7,10 | |
| → | AT+CIPATS=1,10 | Set the auto-sending timer to 10 seconds |
| ← | OK | the timer begins counting down after OK is returned |
| → | AT+CIPSEND=6 | Send data on the TCP link 6 |
| → | >TEST Auto fast send | Input the data to be sent (<CTRL-Z> is not needed) |
| ← | DATA ACCEPT:6,19 | When the timer expires,data will be sent automatically |
| | | +CIPCLOSE, +CIPSHUT... |

Receiving data in single connection mode:

| | | |
|--------|---|--|
| | | Setup a TCP link |
| → | AT+CIPHEAD=1 | Set header on |
| ← | OK | |
| ←(UCR) | +IPD,4:TEST | Receive data:TEST |
| → | AT+CIPSHOWTP=1 | Set protocol header on |
| ← | OK | |
| ←(UCR) | +IPD,4,TCP:TEST | Receive data:TEST If it is a UDP link: +IPD,4,UDP:TEST |
| → | AT+CIPSRIP=1 | Set the sender prompt on |
| ← | OK | |
| ←(URC) | +RECV FROM: 60.166.12.210:7500 +IPD,4:TEST | Receive data:TEST ,the length of which is 4 |
| → | AT+CIPSHOWTP=0 | Set protocol header off |
| ← | OK | |



AT Command Set

| | | |
|--|---|---|
| → | AT+CIPHEAD=0 | Set header off |
| ← | OK | |
| → | AT+CIPSRIP=0 | Set sender prompt off |
| ← | OK | |
| ←(URC) | TEST | Receive data:TEST |
| Receiving data in multi connection mode: | | |
| | | +CSTT +CIICR +CIFSR,and setup a TCP link(link id=0) and a UDP link(link id=1) |
| ←(URC) | +RECEIVE,0,7: TEST123 | Receive 7 chars on link 0: TEST123 |
| ←(URC) | +RECEIVE,1,10: TEST123456 | Receive 10 chars on link 1: TEST123456 |
| Transparent data transmission: TCP link | | |
| → | AT+CIPMODE=1 | set to transparent mode |
| ← | OK | |
| → | AT+CIPSCONT | save the CIPMODE to NV |
| ← | OK | |
| → | AT+CIPSTART="TCP","60.166.18.9",7500 | set a single TCP link |
| ← | OK | |
| ←(URC) | CONNECT | the link is connected |
| →/← | | send and receive data transparently |
| → | +++ | +++ to quit data mode. |
| ← | OK | |
| → | ATO | set module to data mode again |
| ← | CONNECT | |
| Domain name resolution: (Note: applicable only after at+cstt、at+ciicr、at+cifsr have been executed) | | |
| → | AT+CDNSGIP="WWW.SINA.COM.CN" | resolute the domain name of sina site |
| ← | OK +CDNSGIP:1,"WWW.SINA.COM.CN","221.179.180.76" | The ip is 221.179.180.76 |
| The conclusion of format for sending and receiving data: | | |



AT Command Set

Data sending (take link id=5 for example in multi connection mode)

| | protocol | Fast sending | Slow sending |
|-------------------|----------|--|--|
| Single connection | TCP | AT+CIPSEND >test TCP DATA ACCEPT:8 | AT+CIPSEND >test TCP SEND OK |
| | UDP | AT+CIPSEND >test UDP DATA ACCEPT:8 | AT+CIPSEND >test UDP SEND OK |
| multi connection | TCP | AT+CIPSEND=5 >test TCP DATA ACCEPT:5,8 | AT+CIPSEND=5 >test TCP 5,SEND OK |
| | UDP | AT+CIPSEND=5 >test UDP DATA ACCEPT:5,8 | AT+CIPSEND=5 >test UDP 5,SEND OK |

Data receiving

| | protocol | AT+CIPHEAD=0 | AT+CIPHEAD=1 | |
|-------------------|----------|---------------|----------------|--------------------|
| | | | +CIPSHOWTP=0 | +CIPSHOWTP=1 |
| Single connection | TCP | TEST123 | +IPD,7:TEST123 | +IPD,7,TCP:TEST123 |
| | UDP | TEST123 | +IPD,7:TEST123 | +IPD,7,UDP:TEST123 |
| multi connection | TCP | +RECEIVE,1,7: | +RECEIVE,1,7: | +RECEIVE,1,7: |
| | | TEST123 | TEST123 | TEST123 |
| | UDP | +RECEIVE,1,7: | +RECEIVE,1,7: | +RECEIVE,1,7: |
| | | TEST123 | TEST123 | TEST123 |

15 IP application related commands

15.1 Bearer Settings for Applications Based on IP: AT+SAPBR

This command is applied to activate bearer for some applications such as HTTP, FTP.

Syntax:

| Type of | Command | Possible response(s) |
|---------|---------|----------------------|
|---------|---------|----------------------|



AT Command Set

| Command | | |
|-------------------|---|--|
| Execution command | AT+SAPBR=<cmd_type>,<cid>[,<ConParamTag>,<ConParamValue>] | if <cmd_type> = 2: +SAPBR: <cid>,<Status>,<IP_Addr> OK |
| | | if <cmd_type> = 4: +SAPBR:<ConParamTag>,<ConParamValue> OK |
| | | else: OK |
| Test command | AT+SAPBR=? | +SAPBR: (0-4),(1-3),"ConParamTag","ConParamValue" OK |
| URC report | +SAPBR <cid>: DEACT | if |

Defined values:

| Parameters | Definition | Value | Description |
|--|--------------------------|------------|---|
| <cmd_type> | command type | 0 | close bearer |
| | | 1 | open bearer |
| | | 2 | query bearer |
| | | 3 | set bearer parameters |
| | | 4 | query bearer parameters |
| <cid> | bearer identifier | 1~3 | |
| <Status> | state of the bearer | 0 | Bearer is connecting |
| | | 1 | Bearer is connected |
| | | 2 | Bearer is closing |
| | | 3 | Bearer is closed |
| <IP_Addr> | IP address of the bearer | | |
| <ConParamTag> | bearer parameters | “CONTYPE” | INTERNET connection type. See <ConParamValue_ConType> |
| | | “APN” | access point name, no more than 50 charcters |
| | | “USER” | user name, no more than 50 charcters |
| | | “PWD” | password, no more than 50 charcters |
| | | “PHONENUM” | CSD number |
| | | “RATE” | CSD connection rate see <ConParamValue_Rate> |
| <ConParamValue>(including <ConParamValue_ConType> and <ConParamValue_Rate>): | | | |
| <ConParamValue_Co | INTERNET | “CSD” | CSD connection |



AT Command Set

| nType> | connection type | "GPRS" | GPRS connection |
|----------------------|---------------------|--------|-----------------|
| <ConParamValue_Rate> | CSD connection rate | 0 | 2400 |
| | | 1 | 4800 |
| | | 2 | 9600 |
| | | 3 | 14400 |

16 Commands for HTTP applications

The HTTP AT command set, based on embedded TCP/IP stack, enables the host application to easily access the Internet HTTP service.

16.1 Initialize HTTP service: AT+HTTPINIT

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|--|----------------------|
| Execution command | AT+HTTPINIT | OK |
| Test command | AT+HTTPINIT=? | OK |
| Note | HTTPINIT should first be executed to initialize the HTTP service | |

16.2 SSL Function: AT+HTTPSSL

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|----------------|-----------------------|
| Set command | AT+HTTPSSL=<n> | OK |
| Read command | AT+HTTPSSL? | + HTTPSSL: <n> OK |
| Test command | AT+HTTPSSL=? | +HTTPSSL: (0-1) OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|---------------------|-------|--------------|
| <n> | SSL function switch | 0 | SSL disabled |
| | | 1 | SSL enabled |

16.3 Set HTTP parameters: AT+HTTPPARA

Syntax:



AT Command Set

| Type of Command | Command | Possible response(s) |
|-----------------|---|---|
| Set command | AT+HTTPPARA=<HTTPParamTag>,<HTTPParamValue> | OK |
| Read command | AT+HTTPPARA? | +HTTPPARA: list of (<HTTPParamTag>:<HTTPParamValue>) OK |
| Test command | AT+HTTPPARA=? | +HTTPPARA: "HTTPParamTag","HTTPParamValue" OK |

Defined values:

| Parameters | Definition | Value | Description |
|--|---|--|---|
| <HTTPParamTag> :HTTP parameters,including: | | | |
| "CID" | Bearer profile identifier(Mandatory Parameter) | 1~3 | |
| "URL" | HTTP or HTTPS URL (Mandatory Parameter) Note:HTTPS URL is supported only in module firmware versions with SSL suffix | "http://server/path:tcpPort " or "https://server/path:tcpPort " " | Server: FQDN or IP-address Path: path of file or directory tcpPort: default value is80 see "IETF-RFC 261 |
| "UA" | The user agent string which is set by the application to identify the mobile. Usually this parameter is set as operation system and software version information | - | default value: M2M module |
| "PROIP" | The IP address of HTTP proxy server | - | |
| "PROPORT" | The port of HTTP proxy server | - | |
| "REDIR" | This flag controls the redirection mechanism of the DCE when it is acting as HTTP client(numeric). If the server sends a redirect code (range 30x), the client will automatically send anew HTTP request when the flag is set to 1. | - | Default value is 0 (no redirection) |
| "BREAK" | Parameter for HTTP method "GET", used for resuming broken transfer | - | get the data from BREAK to BREAKEND. Note that this function is not supported by every HTTP server. |



AT Command Set

| | | | |
|---|---|---|--|
| "BREAKEND" | Parameter for HTTP method "GET", used for resuming broken transfer. which is used together with "BREAK" | - | If the value of "BREAKEND" is bigger than "BREAK", the transfer scope is from "BREAK" to "BREAKEND". If the value of "BREAKEND" is smaller than "BREAK", the transfer scope is from "BREAK" to the end of the file. |
| "USER_DEFINED" | user defined parameters | | For example: AT+HTTPPARA="USER_DEFINED", "Content-type: json-user-define" |
| <HTTPParamValue> : HTTP Parameter value. Type and supported content depend on related <HTTPParamTag>. | | | |

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|----------------------------|--|-------------|
| → | AT+HTTPPARA? | |
| ← | +HTTPPARA: CID: 1 URL: UA: AIRM2M_MODULE PROIP: 0.0.0.0 PROPORT: 0 REDIR: 0 BREAK: 0 BREAKEND: 0 OK | |

16.4 Input HTTP data: AT+HTTPDATA

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------------------|--|
| Set command | AT+HTTPDATA=<size>,<time> | DOWNLOAD OK |
| Test command | AT+HTTPDATA=? | +HTTPDATA: (<size>s),(<time>s) OK |



Defined values:

| Parameters | Definition | Value | Description |
|------------|-----------------------------------|-------------|------------------------|
| <size> | Size in bytes of the data to POST | 1-102400 | The maximum is 102400 |
| | | 0 | Delete all the content |
| <time> | Maximum time for inputting data | 1000-120000 | Unit: ms |

Note: It is strongly recommended to set enough time to input all data with the length of <size>.

16.5 HTTP method action: AT+HTTPACTION

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|------------------------|--|
| Set command | AT+HTTPACTION=<method> | OK |
| | | +HTTPACTION: <Method>,<StatusCode>,<DataLen> |
| | | +CME ERROR: <err> |
| Test command | AT+HTTPACTION=? | +HTTPACTION: (0-2) |
| | | OK |

Defined values:

| Parameters | Definition | Value | Description |
|--------------|---|-------|--------------------------------------|
| <Method> | HTTPmethods | 0 | GET |
| | | 1 | POST |
| | | 2 | HEAD |
| <DataLen> | The length of data got | - | Integer type |
| <StatusCode> | HTTP Status Code responded by remote server, refer to HTTP1.1(RFC2616) for more information | 100 | 继续 (Continue) |
| | | 101 | 交换协议(Switching Protocols) |
| | | 200 | 确定(OK) |
| | | 201 | 已创建(Created) |
| | | 202 | 已接受(Accepted) |
| | | 203 | 非权威消息(Non-Authoritative Information) |
| | | 204 | 无内容(No Content) |
| | | 205 | 重置内容(Reset Content) |
| | | 206 | 部分内容(Partial Content) |
| | | 300 | 多重选择(Multiple Choices) |
| | | 301 | 永久删除(Moved Permanently) |
| | | 302 | 找到(Found) |



AT Command Set

| | | |
|--|-----|---|
| | 303 | 参考其他(See Other) |
| | 304 | 未修改(Not Modified) |
| | 305 | 使用代理服务器(Use Proxy) |
| | 307 | 临时重定向(Temporary Redirect) |
| | 400 | 错误请求(Bad Request) |
| | 401 | 未授权(Unauthorized) |
| | 402 | 付费请求(Payment Required) |
| | 403 | (Forbidden) |
| | 404 | (Not Found) |
| | 405 | (Method not Allowed) |
| | 406 | (Not Acceptable) |
| | 407 | 要求进行代理身份认证 (Proxy AuthenticationRequired) |
| | 408 | 请求超时 (Request Time-out) |
| | 409 | 冲突(Conflict) |
| | 410 | 所请求资源不在服务器上有效，且不知道转发地址(Gone) |
| | 411 | 需要输入长度(Length Required) |
| | 412 | 前提条件失败 (Precondition Failed) |
| | 413 | 请求实体太大(Request Entity Too Large) |
| | 414 | 请求URI太长(Request-URI Too Large) |
| | 415 | 媒体类型不支持(Unsupported Media Type) |
| | 416 | 所请求的范围无法满足(Requested range not satisfiable) |
| | 417 | 执行失败(expectation Failed) |
| | 500 | 内部服务器错误(Internal Server Error) |
| | 501 | 未执行 (Not Implemented) |
| | 502 | 网关错误(Bad Gateway) |
| | 503 | 服务不可用(Service Unavailable) |
| | 504 | 网关超时(Gateway Time-out) |
| | 505 | HTTP 版本不支持(HTTP Version not supported) |
| | 600 | 非 HTTP PDU 格式(Not HTTP PDU) |
| | 601 | 网络错误(Network Error) |
| | 602 | 内存不足(No memory) |
| | 603 | DNS 错误(DNS Error) |
| | 604 | 栈忙(Stack Busy) |
| | 605 | SSL建立通道失败(SSL link setup error) |
| | 606 | SSL通讯警告错误(SSL communication warning error) |

16.6 Read the response from HTTP server: AT+HTTPREAD

The Set command reads data after AT+HTTPACTION=0 or AT+HTTPDATA is executed.

The Execution command reads all data after AT+HTTPACTION=0 or AT+HTTPDATA is executed.

If <byte_size> is bigger than the data size received, module will only return actual data size.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---|--|
| Set command | AT+HTTPREAD=<start_address>,<byte_size> | +HTTPREAD: <date_len> <data> OK |
| Execution command | AT+HTTPREAD | +HTTPREAD:<date_len> <data> OK |
| Test command | AT+HTTPREAD=? | +HTTPREAD: (list of supported <start_address>s),(list of supported<byte_size>s) OK |

Defined values:

| Parameters | Definition | Value | Description |
|-----------------|-------------------------------------|------------|-------------|
| <date_len> | The actual length for data output | | |
| <date > | Data from HTTP server or user input | | |
| <start_address> | The starting point for data output | 0 ~ 307200 | unit: byte |
| <byte_size> | The length for data output | 1 ~ 307200 | unit: byte |

16.7 Save HTTP context: AT+HTTPSCONT

The Execution command returns HTTP Application Context.

Syntax:

| Type of Command | Command | Possible response(s) |
|-------------------|---------------|--|
| Execution command | AT+HTTPSCONT | +HTTPREAD: (list of supported <start_address>s),(list of supported<byte_size>s) OK |
| Read command | AT+HTTPSCONT? | +HTTPSCONT:<mode> CID:<value> URL: <value> UA: <value> PROIP: <value> PROPORT: <value> REDIR: <value> BREAK: <value> BREAKEND: <value> |



| | | |
|--|--|----|
| | | OK |
|--|--|----|

Defined values:

| Parameters | Definition | Value | Description |
|------------|----------------------------|-------|---|
| <mode> | mode for HTTP context save | 0 | saved to NVRAM. when system is rebooted, the parameters will be loaded automatically from NVRAM |
| | | 1 | unsaved |

16.8 Terminate HTTP service: AT+HTTPTERM

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|---------------|----------------------|
| Set command | AT+HTTPTERM | OK |
| Test command | AT+HTTPTERM=? | OK |

16.9 HTTP error code:<err code>

HTTP error codes will be reported in ERROR:<err code>.

<err code>:

| Values | Notations in English | Notations in Chinese |
|--------|---|----------------------|
| 0 | Unknown session id | 未知的会话 ID |
| 1 | File is too short | 文件的内容太短 |
| 2 | DNS is fail | 域名解析失败 |
| 3 | HTTP is busy | HTTP 任务正忙 |
| 4 | Socket is wrong | 套接字失败 |
| 5 | Connect fail | 连接失败 |
| 6 | File is error | 文件错误 |
| 7 | Connection is closed | 连接已关闭 |
| 8 | Connection is destroyed | 连接已销毁 |
| 9 | HTTP header is not found | HTTP 头不存在 |
| 10 | HTTP authentication scheme is not supported | HTTP 认证机制不支持 |
| 11 | PDP active is wrong | PDP 激活失败 |
| 12 | Param is wrong | 参数有误 |
| 13 | No buffer | 缓冲区不足 |
| 14 | PDP deactive is wrong | PDP 去激活失败 |



16.10 Examples for application

Examples:

| Command(→)/ Response(←) | AT Sequences | Description |
|---------------------------------------|--|--|
| HTTP GET application scenario: | | |
| → | AT+SAPBR=3,1,"CONTYPE","GPRS" | set HTTP bearer type SAPBR command is used to activate PDP context ,thus UDP protocol can be used to resolute the domain name. |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | set APN |
| ← | OK | |
| → | AT+SAPBR =1,1 | activate the GPRS PDP context |
| ← | OK | |
| → | AT+SAPBR=2,1 | query the status of the bearer |
| ← | +SAPBR: 1,1,010.169.179.213 OK | the first parameter 1 is cid the second parameter 1 means the connection is setup the third parameter is IP address |
| → | AT+HTTPINIT | HTTP initialization |
| ← | OK | |
| → | AT+HTTPSSL=1 | enabled SSL function. If you do not intend to use SSL,please ignore this line. |
| ← | OK | |
| → | AT+HTTPPARA="CID",1 | set CID |
| ← | OK | |
| → | AT+HTTPPARA="URL","www.baidu.com" | set URL.It equals to : Note: 1) The SAPBR commands above are not necessary if the URL address is IP; 2) The URL address without http or https prefix is http protocol for example: AT+HTTPPARA="URL","www.baidu.com" equals to AT+HTTPPARA="URL","http://www.baidu.com" 3) The http and https URLs are both supported in _SSL firmware version ;and only http url is supported in _TTS firmware version. For example,in _SSL verison, the following command is supported: AT+HTTPPARA="URL","https://fanyi.baidu.com" |
| ← | OK | |
| → | AT+HTTPACTION=0 | GET begins |
| ← | OK | |
| ← | +HTTPACTION:0,200,1348 +HTTPACTION:0,200,1348 | waiting to be READ |



AT Command Set

| | | |
|--|---------------------------------------|------------------------------------|
| | +HTTPACTION:0,200,1348 | |
| → | AT+HTTPREAD | read data from server |
| ← | +HTTPREAD: 9592 OK | = HTTP data |
| → | AT+HTTPTERM | end HTTP service |
| ← | OK | |
| HTTP POST application scenario: | | |
| → | AT+SAPBR=3,1,"CONTYPE","GPRS" | |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | |
| ← | OK | |
| → | AT+SAPBR =1,1 | |
| ← | OK | |
| → | AT+SAPBR=2,1 | |
| ← | +SAPBR: 1,1,010.169.179.213 OK | |
| ← | OK | |
| → | AT+HTTPINIT | |
| ← | OK | |
| → | AT+HTTTPARA="CID",1 | |
| ← | OK | |
| → | AT+HTTTPARA="URL","fanyi.baidu.com" | |
| ← | OK | |
| → | AT+HTTPDATA=4,100000 | |
| ← | DOWNLOAD | DOWNLOAD= ready for inputting data |
| → | 中国 | input “中国” |
| ← | OK | OK = inputting is completed |
| → | AT+HTTPACTION=1 | POST begins |
| ← | OK | |
| ← | +HTTPACTION:1,200,0 | |
| → | AT+HTTPTERM | |
| ← | OK | |

17 Commands for FTP applications

17.1 Set FTP port: AT+FTPPORT

Syntax:

| Type of Command | Command | Possible response(s) |
|-----------------|--------------------|----------------------|
| Set command | AT+FTPPORT=<value> | OK |
| | | ERROR |
| Read command | AT+FTPPORT? | +FTPPORT:<value> |
| | | OK |
| Test command | AT+FTPPORT=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|------------------|---------|---|
| <value> | FTP control port | 1~65535 | Default value is 21 Numbers above 65535 are illegal as the port identification fields are 16 bits long in the TCP header |

17.2 Set Active or passive FTP mode: AT+FTPMODE

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------------|----------------------|
| Set command | AT+FTPMODE=<value> | OK |
| | | ERROR |
| Read command | AT+FTPMODE? | +FTPMODE:<value> |
| | | OK |
| Test command | AT+FTPMODE=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|------------|-------|--------------|
| <value> | FTP mode | 0 | Active mode |
| | | 1 | Passive mode |

17.3 Set the type of FTP data transfer: AT+FTPTYPE

When this value is set to A, all the data sent by the stack to the FTP server is made of 7 bits characters (NVT-ASCII: the MSB is set to 0). As a consequence, binary data containing 8 bits characters will be corrupted during the transfer if the FTPTYPE is set to A.

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------------|----------------------|
| Set command | AT+FTPTYPE=<value> | OK |
| | | ERROR |
| Read command | AT+FTPTYPE? | +FTPTYPE:<value> |
| | | OK |
| Test command | AT+FTPTYPE=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|------------------------------|-------|---------------------------|
| <value> | Format for FTP data transfer | "A" | FTP ASCII characters set |
| | | "I" | FTP Binary characters set |

17.4 Set FTP put type: AT+FTPPUTOPT

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|----------------------|----------------------|
| Set command | AT+FTPPUTOPT=<value> | OK |
| | | ERROR |
| Read command | AT+FTPPUTOPT? | +FTPPUTOPT:<value> |
| | | OK |
| Test command | AT+FTPPUTOPT=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------|-----------------|---------------------|
| <value> | FTPput type | "APPE" | Appending to a file |
| | | "STOU" | Store a unique file |
| | | " <u>STOR</u> " | Store a file |

17.5 Set FTP bearer identifier:AT+FTPCID

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|-------------------|----------------------|
| Set command | AT+FTPCID=<value> | OK |
| | | ERROR |
| Read command | AT+FTPCID? | +FTPCID:<value> |
| | | OK |
| Test command | AT+FTPCID=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-----------------------|-------|---------------------------------|
| <value> | FTP bearer identifier | 1~3 | The same as the <cid> in +SAPBR |

17.6 Set FTP breakpoint resume:AT+FTPREST

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------------|----------------------|
| Set command | AT+FTPREST=<value> | OK |
| | | ERROR |
| Read command | AT+FTPREST? | +FTPREST:<value> |
| | | OK |
| Test command | AT+FTPREST=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|--------------------------|-------|-------------|
| <value> | Breakpoint to be resumed | | |

17.7 Set FTP server address:AT+FTPSERV

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------------|----------------------|
| Set command | AT+FTPSERV=<value> | OK |
| | | ERROR |
| Read command | AT+FTPSERV? | +FTPSERV:<value> |



AT Command Set

| | | |
|--------------|--------------|----|
| | | OK |
| Test command | AT+FTPSERV=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------------|--------------------------------|---|
| <value> | FTPserver address | IP (xxx.xxx.xxx.xxx) or DNS | IP: 32-bit decimal, separated by "." DNS is an ASCII string whose length can not exceed 49 |

17.8 Set FTPUser name:AT+FTPUN

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|------------------|----------------------|
| Set command | AT+FTPUN=<value> | OK |
| | | ERROR |
| Read command | AT+FTPUN? | +FTPUN:<value> |
| | | OK |
| Test command | AT+FTPUN=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|---------------|-------|---|
| <value> | FTP user name | | an ASCII string whose length can not exceed 49 characters |

17.9 SetFTP password: AT+FTPPW

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|---------------|----------------------|
| Set command | AT+FTPPW=<pw> | OK |
| | | ERROR |
| Read command | AT+FTPPW? | +FTPPW:<pw> |
| | | OK |
| Test command | AT+FTPPW=? | OK |

Defined values:



AT Command Set

| Parameters | Definition | Value | Description |
|------------|-------------|-------|---|
| <pw> | FTPpassword | | an ASCII string whose length can not exceed 49 characters |

17.10 Set the name of download file: AT+FTPGETNAME

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|----------------------|----------------------|
| Set command | AT+FTPGETNAME=<name> | OK |
| | | ERROR |
| Read command | AT+FTPGETNAME? | +FTPGETNAME:<name> |
| | | OK |
| Test command | AT+FTPGETNAME=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|---------------------------|-------|---|
| <name> | Name of FTP download file | | an ASCII string whose length can not exceed 99 characters |

17.11 Set the path of download file: AT+FTPGETPATH

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|-----------------------|----------------------|
| Set command | AT+FTPGETPATH=<value> | OK |
| | | ERROR |
| Read command | AT+FTPGETPATH? | +FTPGETPATH:<value> |
| | | OK |
| Test command | AT+FTPGETPATH=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|---------------------------|-------|---|
| <value> | Path of FTP download file | | an ASCII string whose length can not exceed 99 characters |

17.12 Set the name of upload file: AT+FTPPUTNAME

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|---------|----------------------|
|-----------------|---------|----------------------|



AT Command Set

| | | |
|--------------|-----------------------|---------------------|
| Set command | AT+FTPPUTNAME=<value> | OK |
| | | ERROR |
| Read command | AT+FTPPUTNAME? | +FTPPUTNAME:<value> |
| | | OK |
| Test command | AT+FTPPUTNAME=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------------------|-------|---|
| <value> | Name of FTP upload file | | an ASCII string whose length can not exceed 99 characters |

17.13 Set the path of upload file:AT+FTPPUTPATH

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|-----------------------|----------------------|
| Set command | AT+FTPPUTPATH=<value> | OK |
| | | ERROR |
| Read command | AT+FTPPUTPATH? | +FTPPUTPATH:<value> |
| | | OK |
| Test command | AT+FTPPUTPATH=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|------------|-------------------------|-------|---|
| <value> | path of FTP upload file | | an ASCII string whose length can not exceed 99 characters |

17.14 Download a file: AT+FTPGET

The max response time for AT+FTPGET is 75 seconds in case no data is received from server.

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------------------------|--|
| Set command | AT+FTPGET=<mode>[,<reqlength>] | After AT+FTPGET=1, the response is: |
| | | OK |
| | | After AT+FTPGET=2, <reqlength>, the response is: |



AT Command Set

| | | |
|--------------|-------------------|---|
| | | +FTPGET:2,<cnlength> //data OK |
| URC | +FTPGET:1,1 | This URC may emerge after AT+FTPGET=1, indicating that the file has been downloaded and ready for reading. When "+FTPGET:1,1" is shown, use AT+FTPGET=2,<reqlength> to read data. If the module still has unread data, "+FTPGET:1,1" will be shown again in certain time |
| | +FTPGET:1,<error> | This URC may emerge after AT+FTPGET=1, indicating that the file download failed |
| | +FTPGET:1,0 | Data transfer is finished |
| Test command | AT+FTPGET=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|-------------|---|--------|--|
| <mode> | mode | 1 | Begin FTPGET session |
| | | 2 | Read FTP download data |
| <reqlength> | Number of data bytes requested to be read | 1~1460 | |
| <cnlength> | Number of data bytes confirmed to be read | 1~1460 | May be less than <reqlength>. 0 indicates that no data has been read |
| <error> | Error code | 61 | net error |
| | | 62 | DNS error |
| | | 63 | connect error |
| | | 64 | timeout |
| | | 65 | server error |
| | | 66 | operation not allowed |
| | | 70 | replay error |
| | | 71 | user error |
| | | 72 | password error |
| | | 73 | type error |
| | | 74 | rest error |
| | | 75 | passive error |
| | | 76 | active error |
| | | 77 | operate error |
| | | 78 | upload error |
| | | 79 | download error |
| | | 86 | manual quit |

17.15 FTP PUT session: AT+FTPPUT

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|-------------------------------------|---|
| Set command | AT+FTPPUT=<mode>[,<reqlength>]] | After AT+FTPPUT=1 is input, the response is: OK |
| | | After AT+FTPPUT=2, <reqlength> is input, the response is: +FTPPUT:2,<cnlength> //input data OK |
| | | AT+FTPPUT=2,0 to close FTP PUT session, the response is: OK |
| | | |
| URC | +FTPPUT:1,1,<maxlength> | This URC may emerge after AT+FTPPUT=1, indicating that AT+FTPPUT=2,<reqlength> can be used to FTP PUT a file now. |
| | +FTPPUT:1,0 | Indicating that FTP PUT session finished |
| | +FTPPUT:1,<error> | This URC may emerge after AT+FTPPUT=1, indicating that data transfer failed. |
| Test command | AT+FTPPUT=? | OK |

Defined values:

| Parameters | Definition | Value | Description |
|-------------|--|---------------|----------------------------------|
| <mode> | FTPPUT mode | 1 | Begin FTPPUT session |
| | | 2 | Write FTP PUT data |
| <reqlength> | Number of data bytes requested to be PUT | 0-<maxlength> | |
| <cnlength> | Number of data bytes confirmed to be PUT | | |
| <maxlength> | The max length of data can be sent at a time | | It depends on the network status |

17.16 Save FTP application context: AT+FTPSCONT

MT saves to NV FTP Application Context which consists of the following AT Command parameters, and when system is rebooted, the parameters will be loaded from NV automatically.

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|---------|----------------------|
|-----------------|---------|----------------------|



AT Command Set

| | | |
|-------------------|--------------|---|
| Read command | AT+FTPSCONT? | +FTPSCONT: <value> +FTPSERV: <value> +FTPSPORT: <value> +FTPUN: <value> +FTPPW: <value> +FTPCID: <value> +FTPMODE: <value> +FTPTYPE: <value> +FTPPUTOPT: <value> +FTPREST: <value> +FTPGETNAME: <value> +FTPGETPATH: <value> +FTPPUTNAME: <value> +FTPPUTPATH: <value> +FTPTIMEOUT: <value> OK |
| Execution command | AT+FTPSCONT | OK |

17.17 Quit current FTP session: AT+FTPQUIT

Syntax:

| Type of command | Command | Possible response(s) |
|-----------------|--------------|----------------------|
| Set command | AT+FTPQUIT | OK |
| | | ERROR |
| Test command | AT+FTPQUIT=? | OK |

17.18 Examples for application

| Command(→)/ Response(←) | AT Sequences | Description |
|--------------------------------------|-------------------------------|-------------------------------|
| FTP GET application scenario: | | |
| → | AT+SAPBR=3,1,"CONTYPE","GPRS" | Set the type of FTP bearer |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | Set APN |
| ← | OK | |
| → | AT+SAPBR=1,1 | Activate GPRS PDPcontext |
| ← | OK | |
| → | AT+SAPBR=2,1 | Query the state of the bearer |



AT Command Set

| | | |
|--------------------------------------|--|--|
| ← | +SAPBR: 1,1,010.169.179.213 | The first parameter <cid>=1 The second parameter <status>=1 indicates that the bearer is connected The third parameter is the local IP address |
| | OK | |
| → | AT+FTPCID=1 | Choose the bearer identifier <cid> |
| ← | OK | |
| → | AT+FTPSERV="36.7.87.100" | Set the IP or DNS of the FTP server |
| ← | OK | |
| → | AT+FTPUN="user" | Input user name |
| ← | OK | |
| → | AT+FTPPW="123456" | Input password |
| ← | OK | |
| → | AT+FTPGETNAME="1.txt" | Set the name of the download file |
| ← | OK | |
| → | AT+FTPGETPATH="/" | Set the path of the download file |
| ← | OK | |
| → | AT+FTPGET=1 | Start FTP GET session |
| ← | OK | |
| ← | +FTPGET: 1,1 | This URC indicates that the file has been downloaded, you can read it now. |
| → | AT+FTPGET=2,20 | Request to read 20 bytes |
| ← | +FTPGET: 2, 10 ??/ ??/ OK | And 10 has been read |
| ← (URC) | +FTPGET: 1,0 | FTPGET session is over |
| → | AT+FTPQUIT | Quit current FTP GET session |
| ← | OK | |
| FTP PUT application scenario: | | |
| → | AT+SAPBR=3,1,"CONTYPE","GPRS" | |
| ← | OK | |
| → | AT+SAPBR=3,1,"APN","CMNET" | |
| ← | OK | |
| → | AT+SAPBR=1,1 | |
| ← | OK | |
| → | AT+SAPBR=2,1 | |
| ← | +SAPBR: 1,1,010.169.179.213 OK | |
| → | AT+FTPCID=1 | |
| ← | OK | |
| → | AT+FTPSERV="36.7.87.100" | |
| ← | OK | |



AT Command Set

| | | |
|---|--|--|
| → | AT+FTPUN="user" | |
| ← | OK | |
| → | AT+FTPPW="123456" | |
| ← | OK | |
| → | AT+FTPPUTNAME="1222.txt" | Set the name of the upload file |
| ← | OK | |
| → | AT+FTPPUTPATH="/" | Set the path of the upload file |
| ← | OK | |
| → | AT+FTPPUT=1 | Start FTP PUT session |
| ← | OK | |
| ← | +FTPPUT:1,1,1360 | This URC indicates that MT is ready for FTP PUT and the max length of the each PUT is 1360 |
| → | AT+FTPPUT=2,7 | |
| ← | +FTPPUT: 2,7 //input 7 character here OK | Input 7 characters and the data is FTP PUT to the server automatically |
| → | AT+FTPPUT=2,0 | Terminate the FTP PUT session |
| ← | OK | |

18 Other URCs(Unsolicited Result Code)

18.1 System Mode: ^MODE

Indicates that system mode has changed.

Syntax:

| URC |
|-------------------------------|
| ^MODE:<SysMainMode>,<SysMode> |

Defined values:

| Parameter | Value | Description |
|-------------------------|--------|--|
| <SysMainMode>,<SysMode> | 17,17 | TD LTE capabilities (4G) |
| | 5/15,8 | 3G only (3G) |
| | 5/15,7 | 3G, HSDPA, and HSDPA capabilities (3G) |
| | 5/15,6 | 3G and HSUPA capabilities (3G) |
| | 5/15,5 | 3G and HSDPA capabilities (3G) |
| | 3,3 | GSM, GPRS, and EGPRS capabilities (2G) |
| | 3,2 | GSM and GPRS capabilities (2G) |
| | 3,1 | GSM only (2G) |

18.2 SIM Card Mode: ^SIMST

Indicates that sim card mode has changed.

Syntax:

| URC |
|-----------------------------------|
| ^SIMST:<currSimState>,<lockstate> |

Defined values:

| Parameter | Value | Description |
|----------------|-------|---|
| <currSimState> | 0 | SIM card in initialization |
| | 1 | Network Registration succeeded |
| | 2 | Network Registration denied, invalid in CS |
| | 3 | Network Registration denied, invalid in PS |
| | 4 | Network Registration denied, invalid in PS+CS |
| | 255 | SIM not ready |



AT Command Set

| | | |
|-------------|---|-----------------------------|
| <lockstate> | 0 | SIM removed or not detected |
| | 1 | SIM PIN code open |

Examples:

| URCs | Description |
|---|--|
| ^SIMST: 255,1 | SIM card is pending for PIN code(AT+CPIN="pin code" is needed) |
| ^SIMST: 255,0 | SIM card is not inserted |
| Note: <lockstate> is not needed when SIM card is ready(which means <currSimState> is not 255) | |

18.3 Basic information in GSM Engineering Mode:+EEMGINFOBASIC

Indication of basic information in GSM Engineering Mode.

Syntax:

| URC |
|-------------------------|
| +EEMGINFOBASIC: <state> |

Defined values:

| Parameter | Value | Description |
|-----------|-------|----------------------|
| <state> | 0 | ME in Idle mode |
| | 1 | ME in Dedicated mode |
| | 2 | ME in PS PTM mode |

18.4 Serving-cell information in GSM Engineering Mode:+EEMGINFOSVC

Indication of serving-cell information in GSM Engineering Mode.

Syntax:

| URC |
|---|
| +EEMGINFOSVC: <mcc>, <mnc>, <lac>, <ci>, <nom>, <nco>, <bsic>, <C1>, <C2>, <TA>, <TxPwr>,<RxSig>,<RxSigFull>, <RxSigSub>, <RxQualFull>, <RxQualSub>, <ARFCN_tch>, <hopping_chnl>,<chnl_type>, <TS>,<PacketIdle>, <rac>, <arfcn>, <bs_pa_mfrms>, <C31>, <C32>, <t3212>, <t3312>,<pbccch_support>,<EDGE_support>, <ncc_permitted>, <rl_timeout>, <ho_count>, <ho_succ>,<chnl_access_count>,<chnl_access_succ_count> |

Defined values:

| Parameter | Description |
|-----------|---------------------|
| <mcc> | Mobile Country Code |
| <mnc> | Mobile Network Code |
| <lac> | Location Area Code |
| <ci> | Cell Identifier |



AT Command Set

| | |
|--------------------------|---|
| <nom> | Network Operation Mode |
| <nco> | Network Control Order |
| <bsic> | Base Station Identity Code |
| <C1> | C1 value |
| <C2> | C2 value |
| <TA> | Timing Advance |
| <TxPwr> | Transmit Power |
| <RxSig> | Receive level BCCH |
| <RxSigFull> | Receive level for full set of TCH |
| <RxSigSub> | Receive level for sub set of TCH |
| <RxQualFull> | BER in DTX mode |
| <RxQualSub> | BER in non-DTX mode |
| <ARFCN_tch> | Traffic Channel ARFCN(Absolute Radio Frequency Channel) |
| <hopping_chnl> | Channel is hopping |
| <chnl_type> | Channel type |
| <TS> | Serving timeslot |
| <PacketIdle> | In packet idle mode |
| <rac> | Routing Area Code |
| <arfcn> | Absolute Radio Frequency Channel |
| <bs_pa_mfrms> | BS PA frames |
| <C31> | C31 value |
| <C32> | C32 value |
| <t3212> | timeout No. 3212 |
| <t3312> | timeout No. 3312 |
| <pbccch_support> | Support PBCCH |
| <EDGE_support> | Support EDGE |
| <ncc_permitted> | NCC permitted |
| <rl_timeout> | Radio link timeout |
| <ho_count> | Total hand-over count |
| <ho_succ> | Success hand-over count |
| <chnl_access_count> | Total channel access count |
| <chnl_access_succ_count> | Success channel access count |

18.5 PS information in GSM Engineering Mode:+EEMGINFOPS

Indication of PS information in GSM Engineering Mode.

Syntax:

| URC |
|---|
| +EEMGINFOPS:<PS_attached>,<attach_type>,<service_type>,<tx_power>,<c_value>,<ul_ts>,<dl_ts>,<ul_cs>,<dl_cs>,<ul_modulation>,<dl_modulation>,<gmsk_cv_bep>,<8psk_cv_bep>,<gmsk_mean_bep>,<8psk |



<mean_bep>,<EDGE_bep_period>,<single_gmm_rej_cause>,<pdp_active_num>,<mac_mode>,<network_control>,<network_mode>,<EDGE_slq_measurement_mode>,<edge_status>

Defined values:

| Parameter | Description |
|-----------------------------|--------------------------------------|
| <PS_attached> | GPRS/EDGE attached |
| <attach_type> | Attach type |
| <service_type> | Service type |
| <tx_power> | Transmit power |
| <c_value> | C value |
| <ul_ts> | Uplink timeslot |
| <dl_ts> | Downlink timeslot |
| <ul_cs> | Uplink Coding Scheme |
| <ul_cs> | Uplink Coding Scheme |
| <dl_cs> | Downlink Coding Scheme |
| <ul_modulation> | Uplink modulation |
| <dl_modulation> | Downlink modulation |
| <gmsk_cv_bep> | GMSK CV BEP(Block Error Probability) |
| <8psk_cv_bep> | 8PSK CV BEP |
| <gmsk_mean_bep> | GMSK mean BEP |
| <8psk_mean_bep> | 8PSK mean BEP |
| <EDGE_bep_period> | EDGE BEP period |
| <single_gmm_rej_cause> | Is single GMM reject cause |
| <pdp_active_num> | Activated PDP number |
| <mac_mode> | MAC mode |
| <network_control> | Network control |
| <network_mode> | networkmode |
| <EDGE_slq_measurement_mode> | EDGE SLQ measurement mode |
| <edge_status> | EDGE status |

18.6 Cell information in GSM Engineering Mode:+EEMGINFONC

Indication of neighboring cell information in GSM Engineering Mode.

Syntax:

| URC |
|--|
| +EEMGINFONC: <nc_num>, [<mcc>, <mnc>, <lac>, <rac>, <ci>, <rx_lv>, <bsic>, <C1>, <C2>, <arfcn>, <C31>, <C32>, [...]] |

Defined values:

| Parameter | Description |
|-----------|----------------------|
| <nc_num> | Neighbor cell number |



| | |
|---------|----------------------------------|
| <mcc> | Mobile Country Code |
| <mnc> | Mobile Network Code |
| <lac> | Location Area Code |
| <rac> | Routing Area Code |
| <ci> | Cell Identifier |
| <rx_lv> | Receive signal level |
| <bsic> | Base Station Identity Code |
| <C1> | C1 value |
| <C2> | C2 value |
| <arfcn> | Absolute Radio Frequency Channel |
| <C31> | C31 value |
| <C32> | C32 value |

18.7 Notify current network status which used for EFEM :+EEMGINBFTM

To notify current network status which used for EFEM.

Syntax:

| URC |
|--|
| +EEMGINBFTM:<p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9>,<p10>,<p11>,<p12>,<p13>,<p14>,<p15>,<p16>,<p17>,<p18>,<p19> |

Defined values:

| Parameter | Description |
|-----------|------------------|
| <p1> | Engineering Mode |
| <p2> | mcc |
| <p3> | mnc |
| <p4> | lac |
| <p5> | cell Identifier |
| <p6> | bsic |
| <p7> | C1 |
| <p8> | C2 |
| <p9> | Time Advance |
| <p10> | TxPowerLevel |
| <p11> | rxSigLevel |
| <p12> | rxSigLevelFull |
| <p13> | rxSigLevelSub |
| <p14> | rxQualityFull |
| <p15> | rxQualitySub |
| <p16> | arfcnTch |
| <p17> | hopping status |
| <p18> | channel type |



| | |
|-------|-----------------|
| <p19> | Server Timeslot |
|-------|-----------------|

18.8 Serving-cell information in UMTS Engineering Mode:+EEMUMTSSVC

Indication of serving-cell information in UMTS Engineering Mode.

Syntax:

| URC |
|--|
| +EEMUMTSSVC:<p1>,<p2>,<p3>,<p4>,[<p5>,<p6>,<p7>,<p8>],[<p9>,<p10>,...,<p26>],[<p27>,<p28>,...,<p53>] |

Defined values:

| Parameter | Description |
|--|-------------------|
| <p1> | Engineer Mode |
| <p2> | sCMeasPresent |
| <p3> | sCParamPresent |
| <p4> | ueOpStatusPresent |
| If sCMeasPresent is TRUE, the following 4 items will be printed: | |
| <p5> | pccpchRSCP |
| <p6> | utraRssi |
| <p7> | sRxLev |
| <p8> | txPower |
| If sCParamPresent is TRUE, the following 18 items will be printed: | |
| <p9> | rac |
| <p10> | nom |
| <p11> | mcc |
| <p12> | mnc |
| <p13> | lac |
| <p14> | ci |
| <p15> | urald |
| <p16> | cellParameterId |
| <p17> | arfcn |
| <p18> | t3212 |
| <p19> | t3312 |
| <p20> | hcsUsed |
| <p21> | attDetAllowed |
| <p22> | csDrxCycleLen |
| <p23> | psDrxCycleLen |
| <p24> | utranDrxCycleLen |
| <p25> | HSDPASupport |
| <p26> | HSUPASupport |
| If ueOpStatusPresent is TRUE, the following 27 items will be printed: | |



| | |
|-------|--------------------------|
| <p27> | rrcState |
| <p28> | numLinks |
| <p29> | srncId |
| <p30> | sRnti |
| <p31> | algPresent |
| <p32> | cipherAlg |
| <p33> | cipherOn |
| <p34> | algPresent |
| <p35> | cipherAlg |
| <p36> | cipherOn |
| <p37> | HSDPAAActive |
| <p38> | HSUPAAActive |
| <p39> | MccLastRegisteredNetwork |
| <p40> | MncLastRegisteredNetwork |
| <p41> | TMSI |
| <p42> | PTMSI |
| <p43> | IsSingleMmRejectCause |
| <p44> | IsSingleGmmRejectCause |
| <p45> | MMRejectCause |
| <p46> | GMMRejectCause |
| <p47> | mmState |
| <p48> | gmmState |
| <p49> | gprsReadyState |
| <p50> | readyTimerValueInSecs |
| <p51> | NumActivePDPCContext |
| <p52> | ULThroughput |
| <p53> | DLThroughput |

18.9 Intra freq information in UMTS Engineering Mode:+EEMUMTSINTRA

Indication of Intra freq information in UMTS Engineering Mode.

Syntax:

| |
|--|
| URC |
| +EEMUMTSINTRA:<p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9>,<p10> |

Defined values:

| Parameter | Description |
|-----------|---------------------------|
| <p1> | index of ENGMODEINTRAFREQ |
| <p2> | pccpchRSCP |
| <p3> | utraRssi |



| | |
|-------|-----------------|
| <p4> | sRxLev |
| <p5> | mcc |
| <p6> | mnc |
| <p7> | lac |
| <p8> | ci |
| <p9> | arfcn |
| <p10> | cellParameterId |

18.10 Inter freq information in UMTS Engineering Mode:+EEMUMTSINTER

Indication of Inter freq information in UMTS Engineering Mode.

Syntax:

| |
|--|
| URC |
| +EEMUMTSINTER:<p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9>,<p10> |

Defined values:

| Parameter | Description |
|-----------|---------------------------|
| <p1> | index of ENGMODEINTERFREQ |
| <p2> | pccpchRSCP |
| <p3> | utraRssi |
| <p4> | sRxLev |
| <p5> | mcc |
| <p6> | mnc |
| <p7> | lac |
| <p8> | ci |
| <p9> | arfcn |
| <p10> | cellParameterId |

18.11 Inter RATInformation in UMTS Engineering Mode:+EEMUMTSINTERRAT

Indication of Inter RAT information in UMTS Engineering Mode.

Syntax:

| |
|---|
| URC |
| +EEMUMTSINTERRAT:<p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9>,<p10>,<p11> |

Defined values:

| Parameter | Description |
|-----------|---------------------------|
| <p1> | index of ENGMODE INTERRAT |



| | |
|-------|---------|
| <p2> | gsmRssi |
| <p3> | rxLev |
| <p4> | C1 |
| <p5> | C2 |
| <p6> | mcc |
| <p7> | mnc |
| <p8> | lac |
| <p9> | ci |
| <p10> | arfcn |
| <p11> | bsic |

18.12 Serving CellInformation in LTE Engineering Mode:+EEMLTESVC

Indication of serving-cell information in LTE Engineering Mode.

Syntax:

| URC |
|---|
| +EEMLTESVC: <mcc>,<length of mnc> ,<mnc>,<tac>,<PCI>,<dlEuarfcn>,<ulEuarfcn>,<band>,<dlBandwidth>,<ci>,<rsrp>,<rsrq>,<sinr>,<MainRsrp>,<DiversityRsrp>,<MainRsrq>,<DiversityRsrq>,<rssi>,<cqi>,<ErrorModeState>,<emmState>,<serviceState>,<IssSingleEmmRejectCause>,<EMMRejectCause>,<MmeGroupId>,<MmeCode>,<mTmsi> |

Defined values:

| Parameter | Description |
|-----------------|--------------------------|
| <mcc> | Mobile Country Code |
| <length of mnc> | length of mnc |
| <mnc> | Mobile Network Code |
| <tac> | Tracking area code |
| <PCI> | Physical Cell Identifier |
| <dlEuarfcn> | dl arfcn |
| <ulEuarfcn> | ul arfcn |
| <band> | band |
| <rsrp> | rsrp |
| <rsrq> | rsrq |
| <sinr> | sinr |
| <MainRsrp> | Rsrp in main antenna |
| <DiversityRsrp> | Rsrp in slave antenna |
| <MainRsrq> | Rsrq in main antenna |
| <DiversityRsrq> | Rsrq in slave antenna |
| <rssi> | rssi |
| <cqi> | cqi |



| | |
|--------------------------|------------------------|
| <ErrorModeState> | ErrorModeState |
| <emmState> | emmState |
| <serviceState> | serviceState |
| <IsSingleEmmRejectCause> | IsSingleEmmRejectCause |
| <EMMRejectCause> | EMMRejectCause |
| <MmeGroupId> | MmeGroupId |
| <MmeCode> | MmeCode |
| <mTmsi> | mTmsi |

18.13 Intra Freq Information in LTE Engineering Mode:+EEMLTEINTRA

Indication of Intra freq information in LTE Engineering Mode.

Syntax:

| |
|--|
| URC |
| +EEMLTEINTRA: <p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9> |

Defined values:

| Parameter | Description |
|-----------|----------------------------|
| <p1> | index of ENGMODE INTRAFREQ |
| <p2> | phyCellId |
| <p3> | euArfcn |
| <p4> | rsrp |
| <p5> | rsrq |
| <p6> | mcc |
| <p7> | mnc |
| <p8> | tac |
| <p9> | cellId |

18.14 InterFreq Information in LTE Engineering Mode:+EEMLTEINTER

Indication of Inter freq information in LTE Engineering Mode.

Syntax:

| |
|--|
| URC |
| +EEMLTEINTER: <p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9> |

Defined values:

| Parameter | Description |
|-----------|----------------------------|
| <p1> | index of ENGMODE INTERFREQ |



| | |
|------|-----------|
| <p2> | phyCellId |
| <p3> | euArfcn |
| <p4> | rsrp |
| <p5> | rsrq |
| <p6> | mcc |
| <p7> | mnc |
| <p8> | tac |
| <p9> | cellId |

18.15 InterRATInformation in LTE Engineering Mode:+EEMLTEINTERRAT

Indication of inter RAT information in LTE Engineering Mode.

Syntax:

| |
|---|
| URC |
| +EEMLTEINTERRAT: <p1>,<p2>,<p3>,<p4>,<p5>,<p6>,<p7>,<p8>,<p9>[,<p10>] |

Defined values:

| Parameter | Description |
|-----------|---------------------------------------|
| <p1> | networktype (0:GSM,1:UMTS) |
| <p2> | number of INTERRAT |
| <p3> | mcc |
| <p4> | mnc |
| <p5> | lac |
| <p6> | ci |
| <p7> | arfcn(GSM)/uarfcn(UMTS) |
| <p8> | bsic(GSM)/ psc_cellParameterId(UMTS) |
| <p9> | rssi(GSM)/ rscp(UMTS) |
| <p10> | cpichEcN0(UMTS) |